



ASSEMBLY INSTRUCTION

MLM-503780

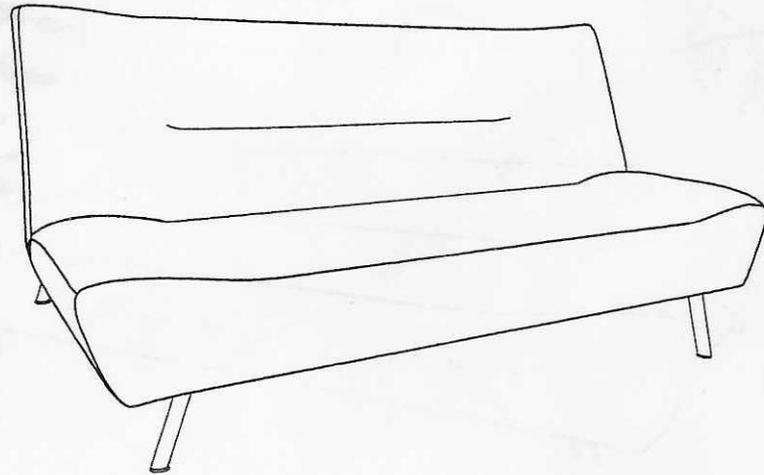


PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

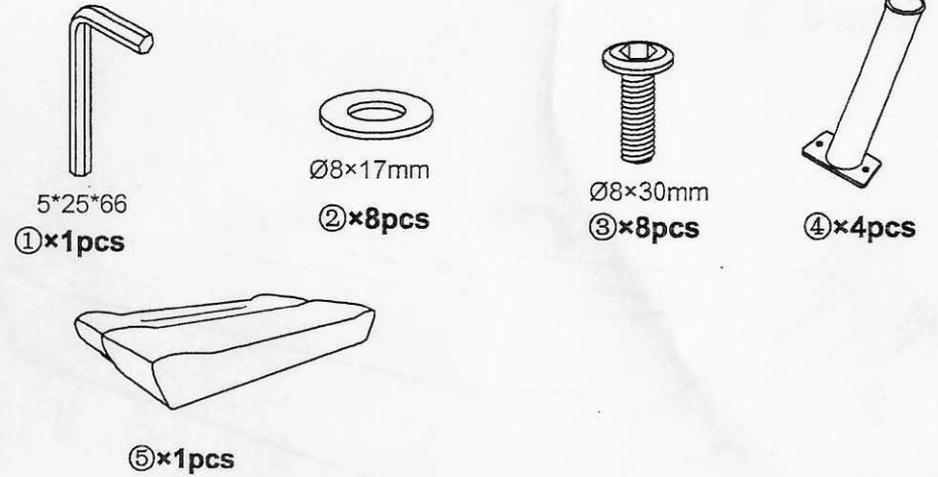


ASSEMBLY INSTRUCTIONS

Step 1

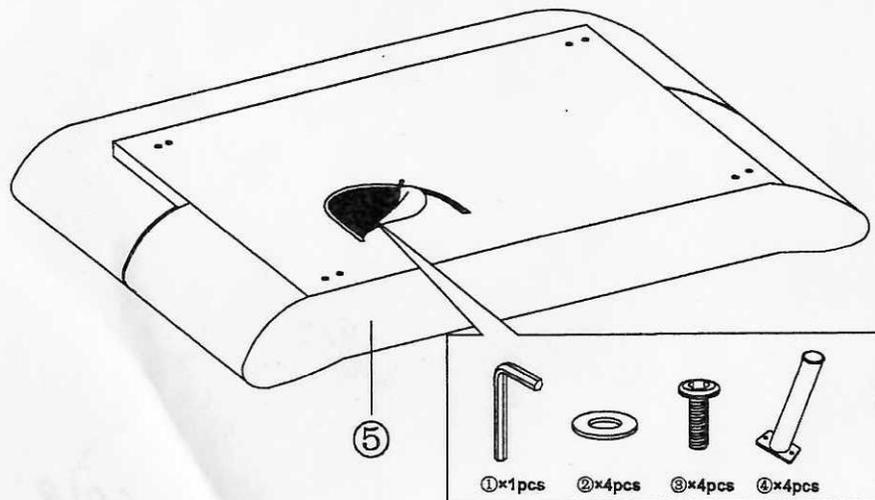


Step 2

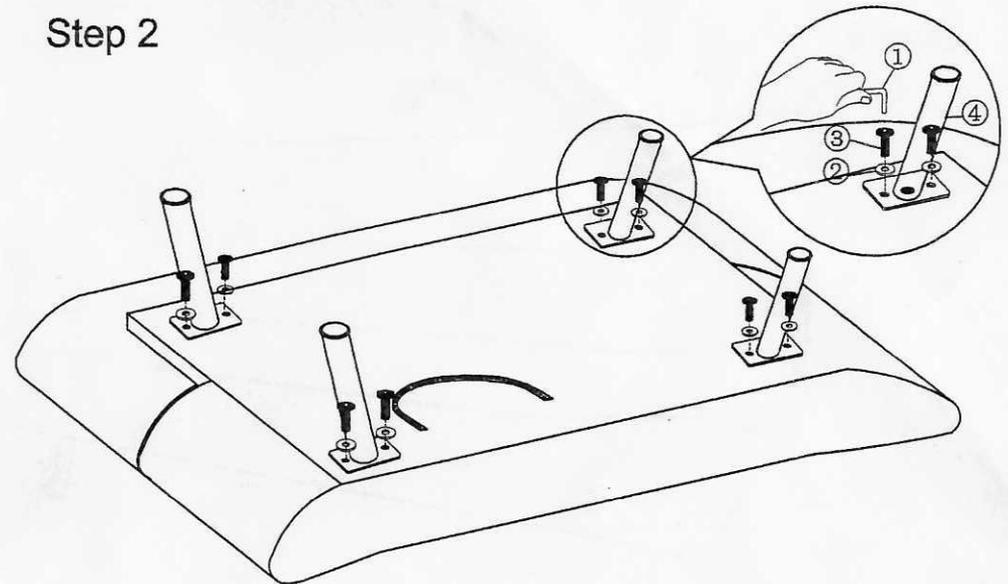


OPERATING YOUR UNIT

Step 3

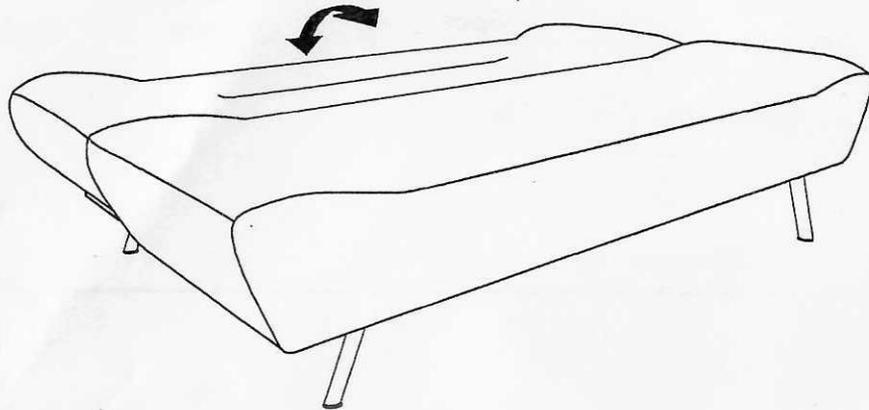

Step 4

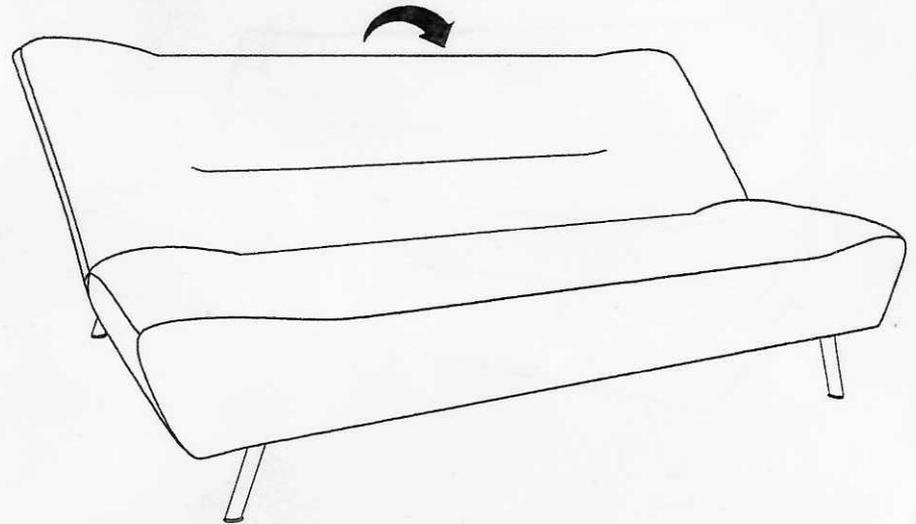

Step 5

