

# FOLDING HANGING CHAIR

## ASSEMBLY INSTRUCTION



**WARNING:** This chair is not a toy. Don't over-swing the chair. Over-swing maybe make the chair tip over and result in injury. Attached the safety belt to the chair before using. Proper use of the chair is for single person seating only. Hanging chair is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only. Chair tested for use at weight of 250 lb (113.4 kg). Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

### IMPORTANT:

Please read all the instructions and warnings before assembling. In order to make the whole product adjust to the best, please install all the screws on the product and tighten all the screws after adjusting the product which can stand on the floor even.

### WARNING:

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.
- Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.
- Check all bolts for tightness before use. **IMPORTANT** - check and tighten bolts often to keep them secure!
- Hanging chair is not a toy and should not be played on!
- The hanging chair use at weight of 250lb (113.4kg). Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.
- The hanging chair should be used on even surfaces only

## CARE & MAINTENANCE

**STAIN RESISTANT CUSHIONS CARE — KEEP THE CUSHIONS IN STORAGE IN RAINING DAY.**

**SPILLS:** Immediately wipe up the spill using a white damp cloth. Repeat process if necessary until stain is gone. Allow cushion to air dry.



 











**FABRIC CARE:** Hand wash cold, non-chlorine bleach when needed, lay flat to dry. Cool iron if necessary. Do not dry clean.

### RESIN WICKER PRODUCT CARE

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Over time nuts and bolts can loosen. Occasionally, check nuts and bolts on all chairs and tables, re-tighten if necessary.

## STAND AND POLE

**Parts List:**

No.	Part	Qty	Image	No.	Part	Qty	Image	No.	Part	Qty	Image
A	4 legs base	1		B	Hanging Baskets	1		C	Steel legs	4	
D	Top pole	1		E	Long screw	1		F	Short screw	4	
G	Nut	1		H	Wrench	1		I	Allen Wrench	1	
J	Bolt	1		K	Spring	1		L	Chain	1	
M	"U" LOCK	1		N	Safety belt	1		O	Plastic cover	1	