 
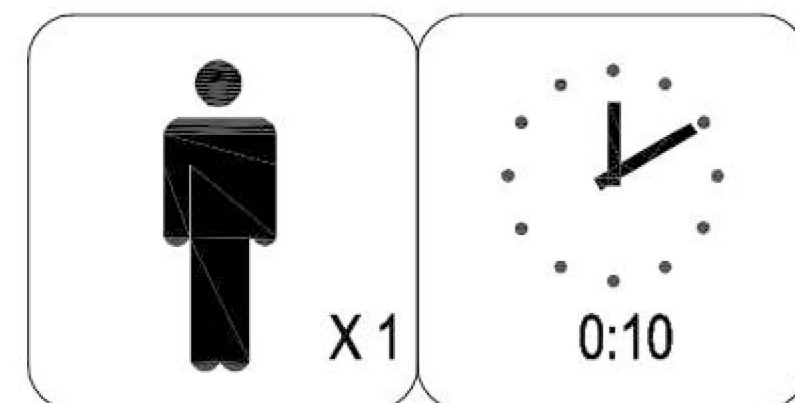 
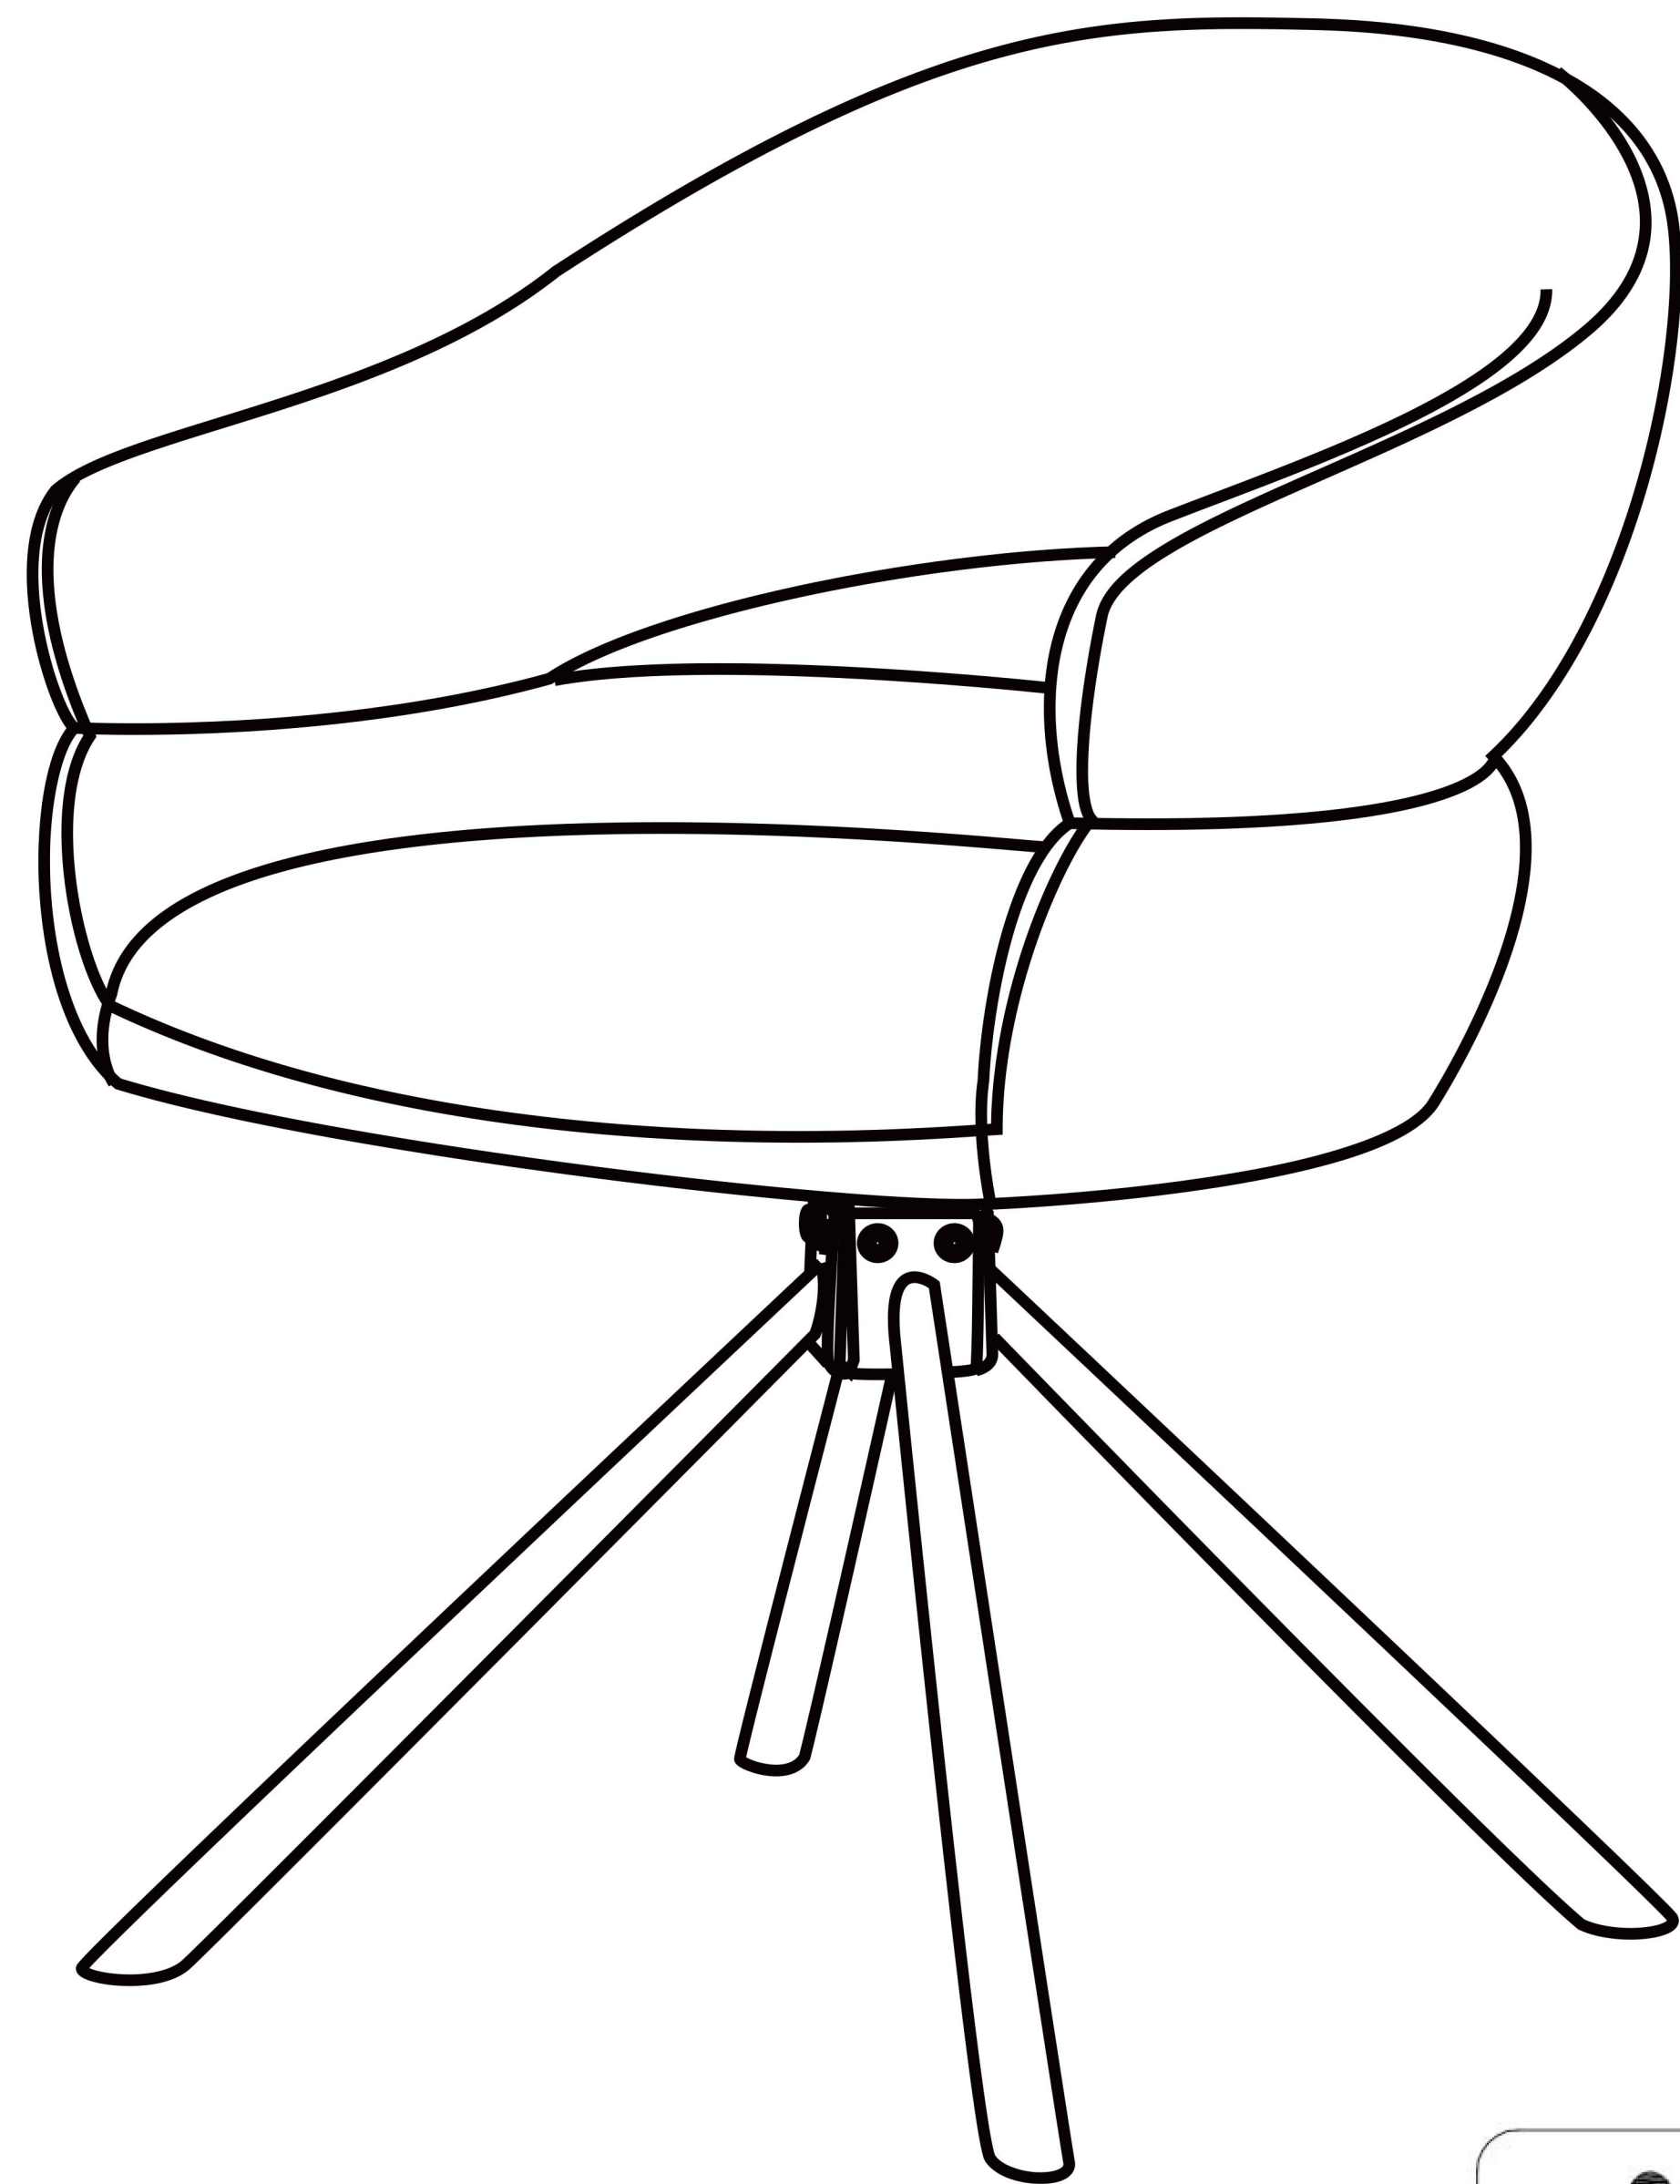 
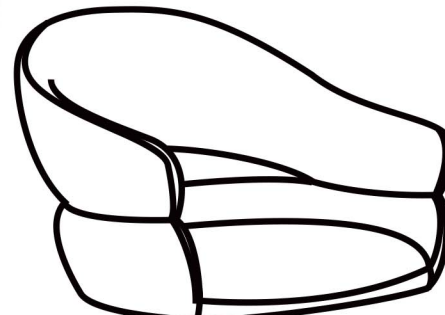 
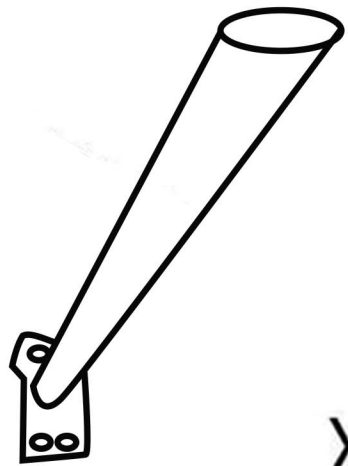 
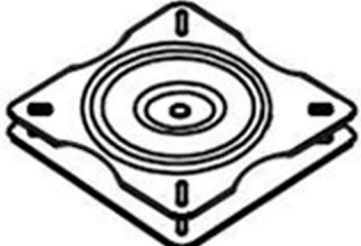 



ASSEMBLY INSTRUCTIONS

DINING CHAIR MODEL#:SDC5028

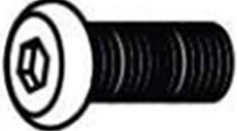


①  X1	②  X4	③  X1	④  180° rebound X1	
A  M6X10 X4	B  M8X10 X12	C  M6X18 X4	D  M6X16 X8	E  M5 X2


 
1

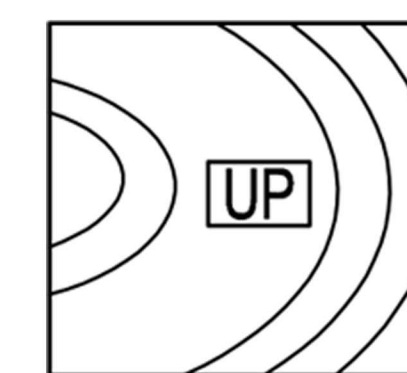


Flip up and down.

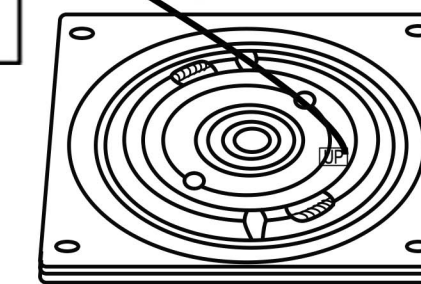 


④

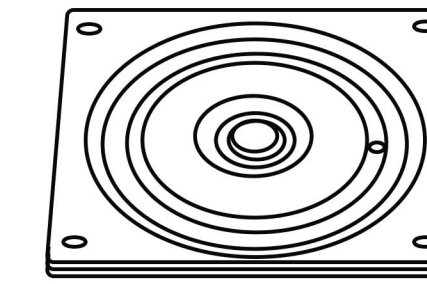  

 The spanner is stuck in the hole of the rotating function to secure it.

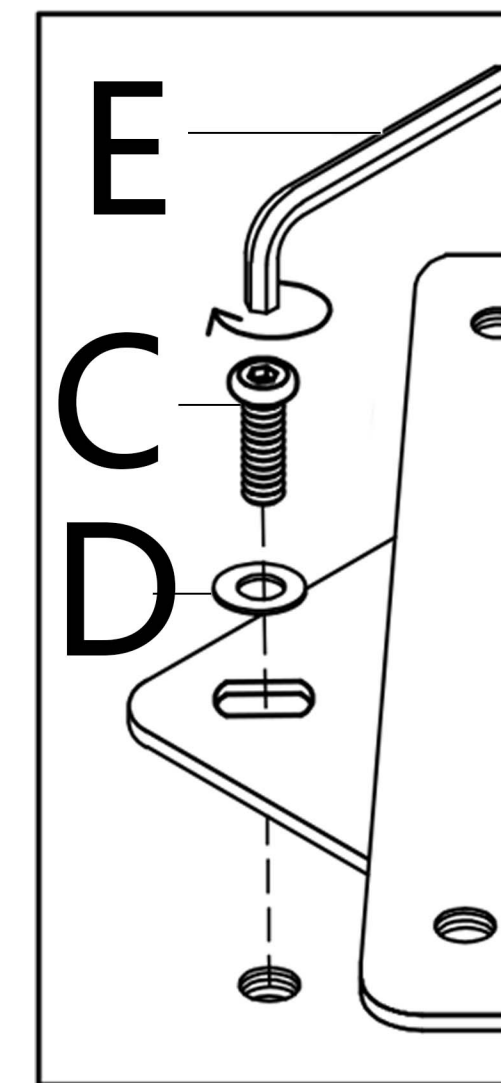


E
C
D

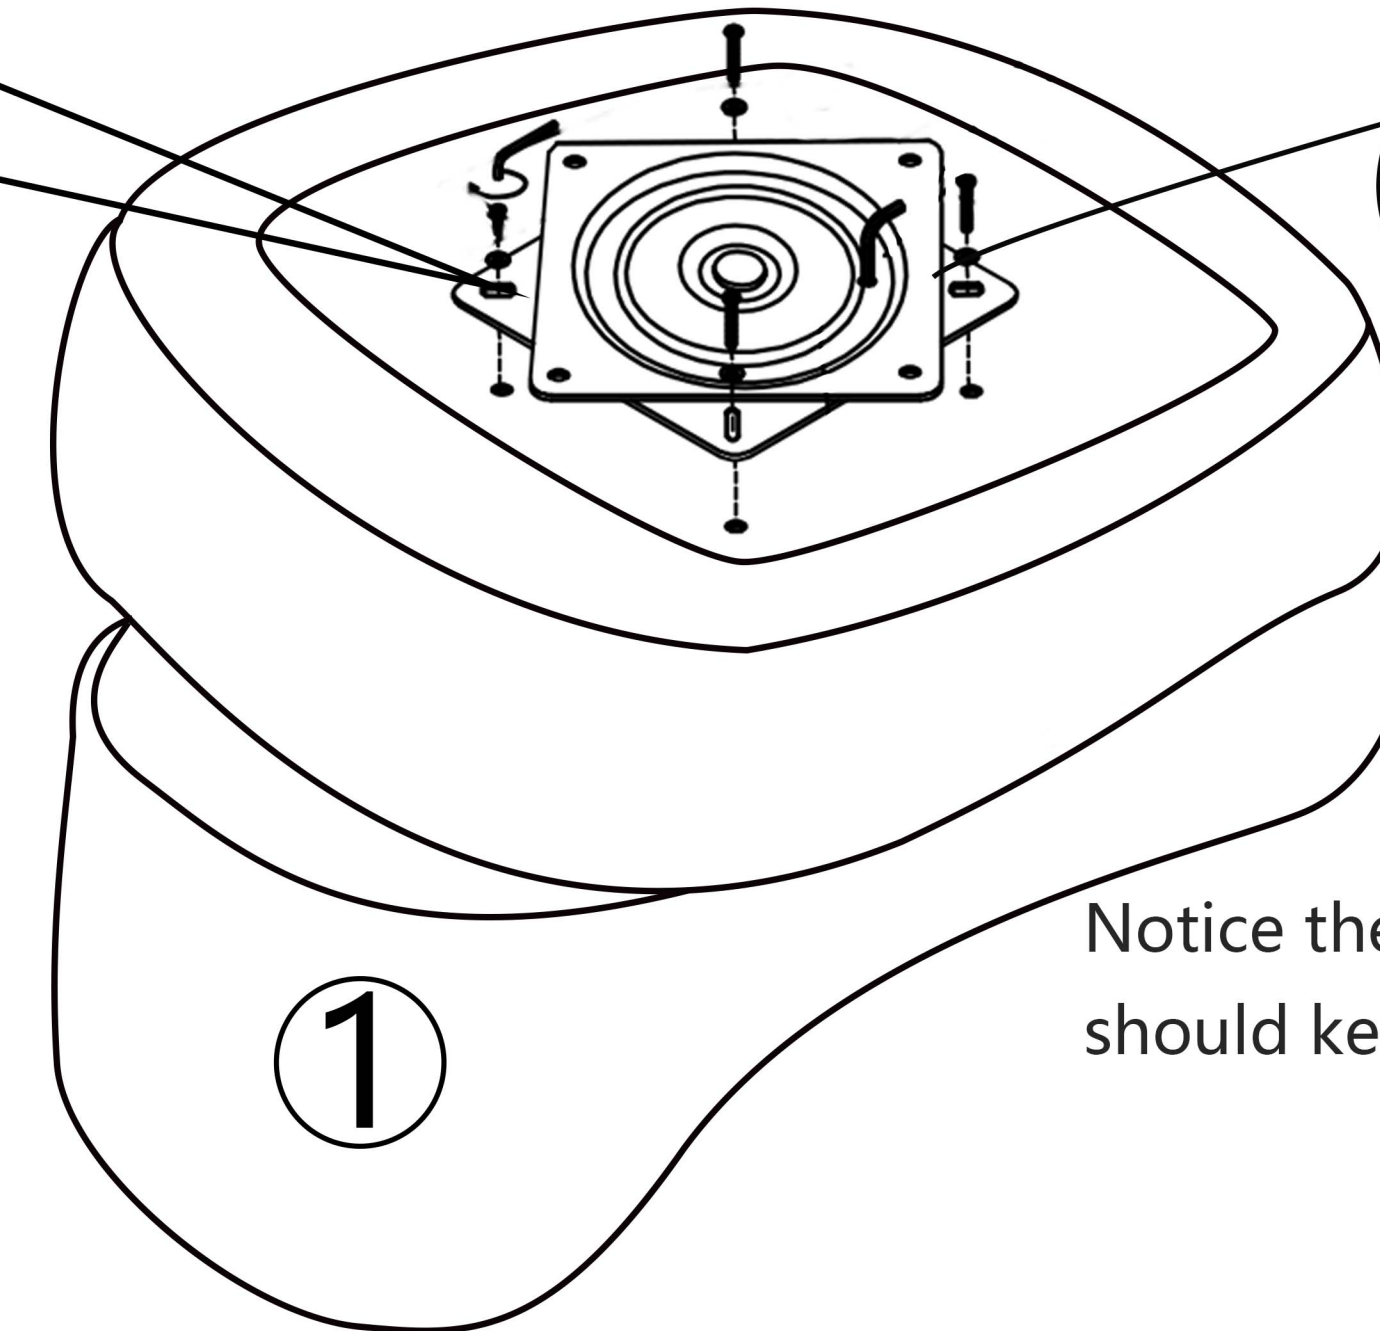 


①

 Notice the Front sticker ↑ should keep forward.

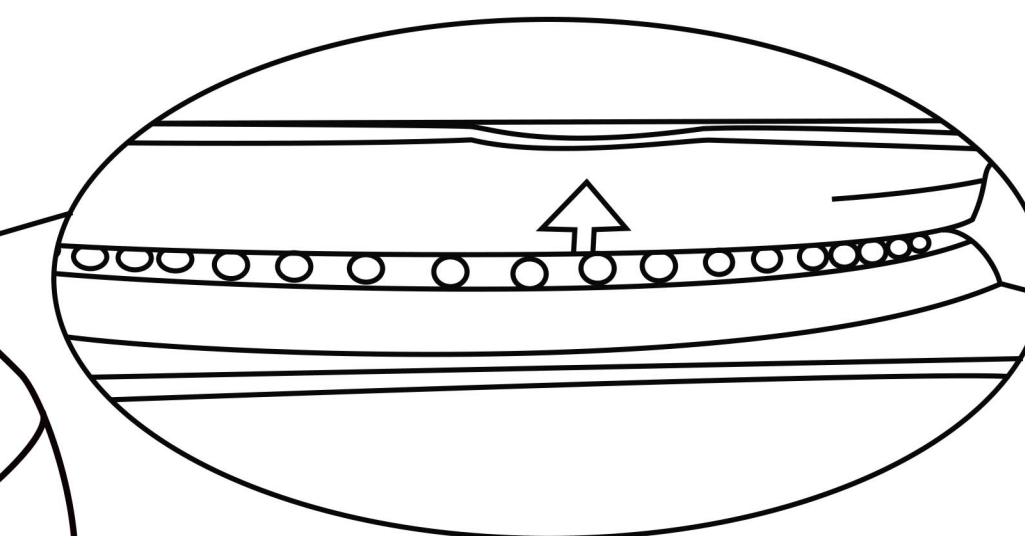


2

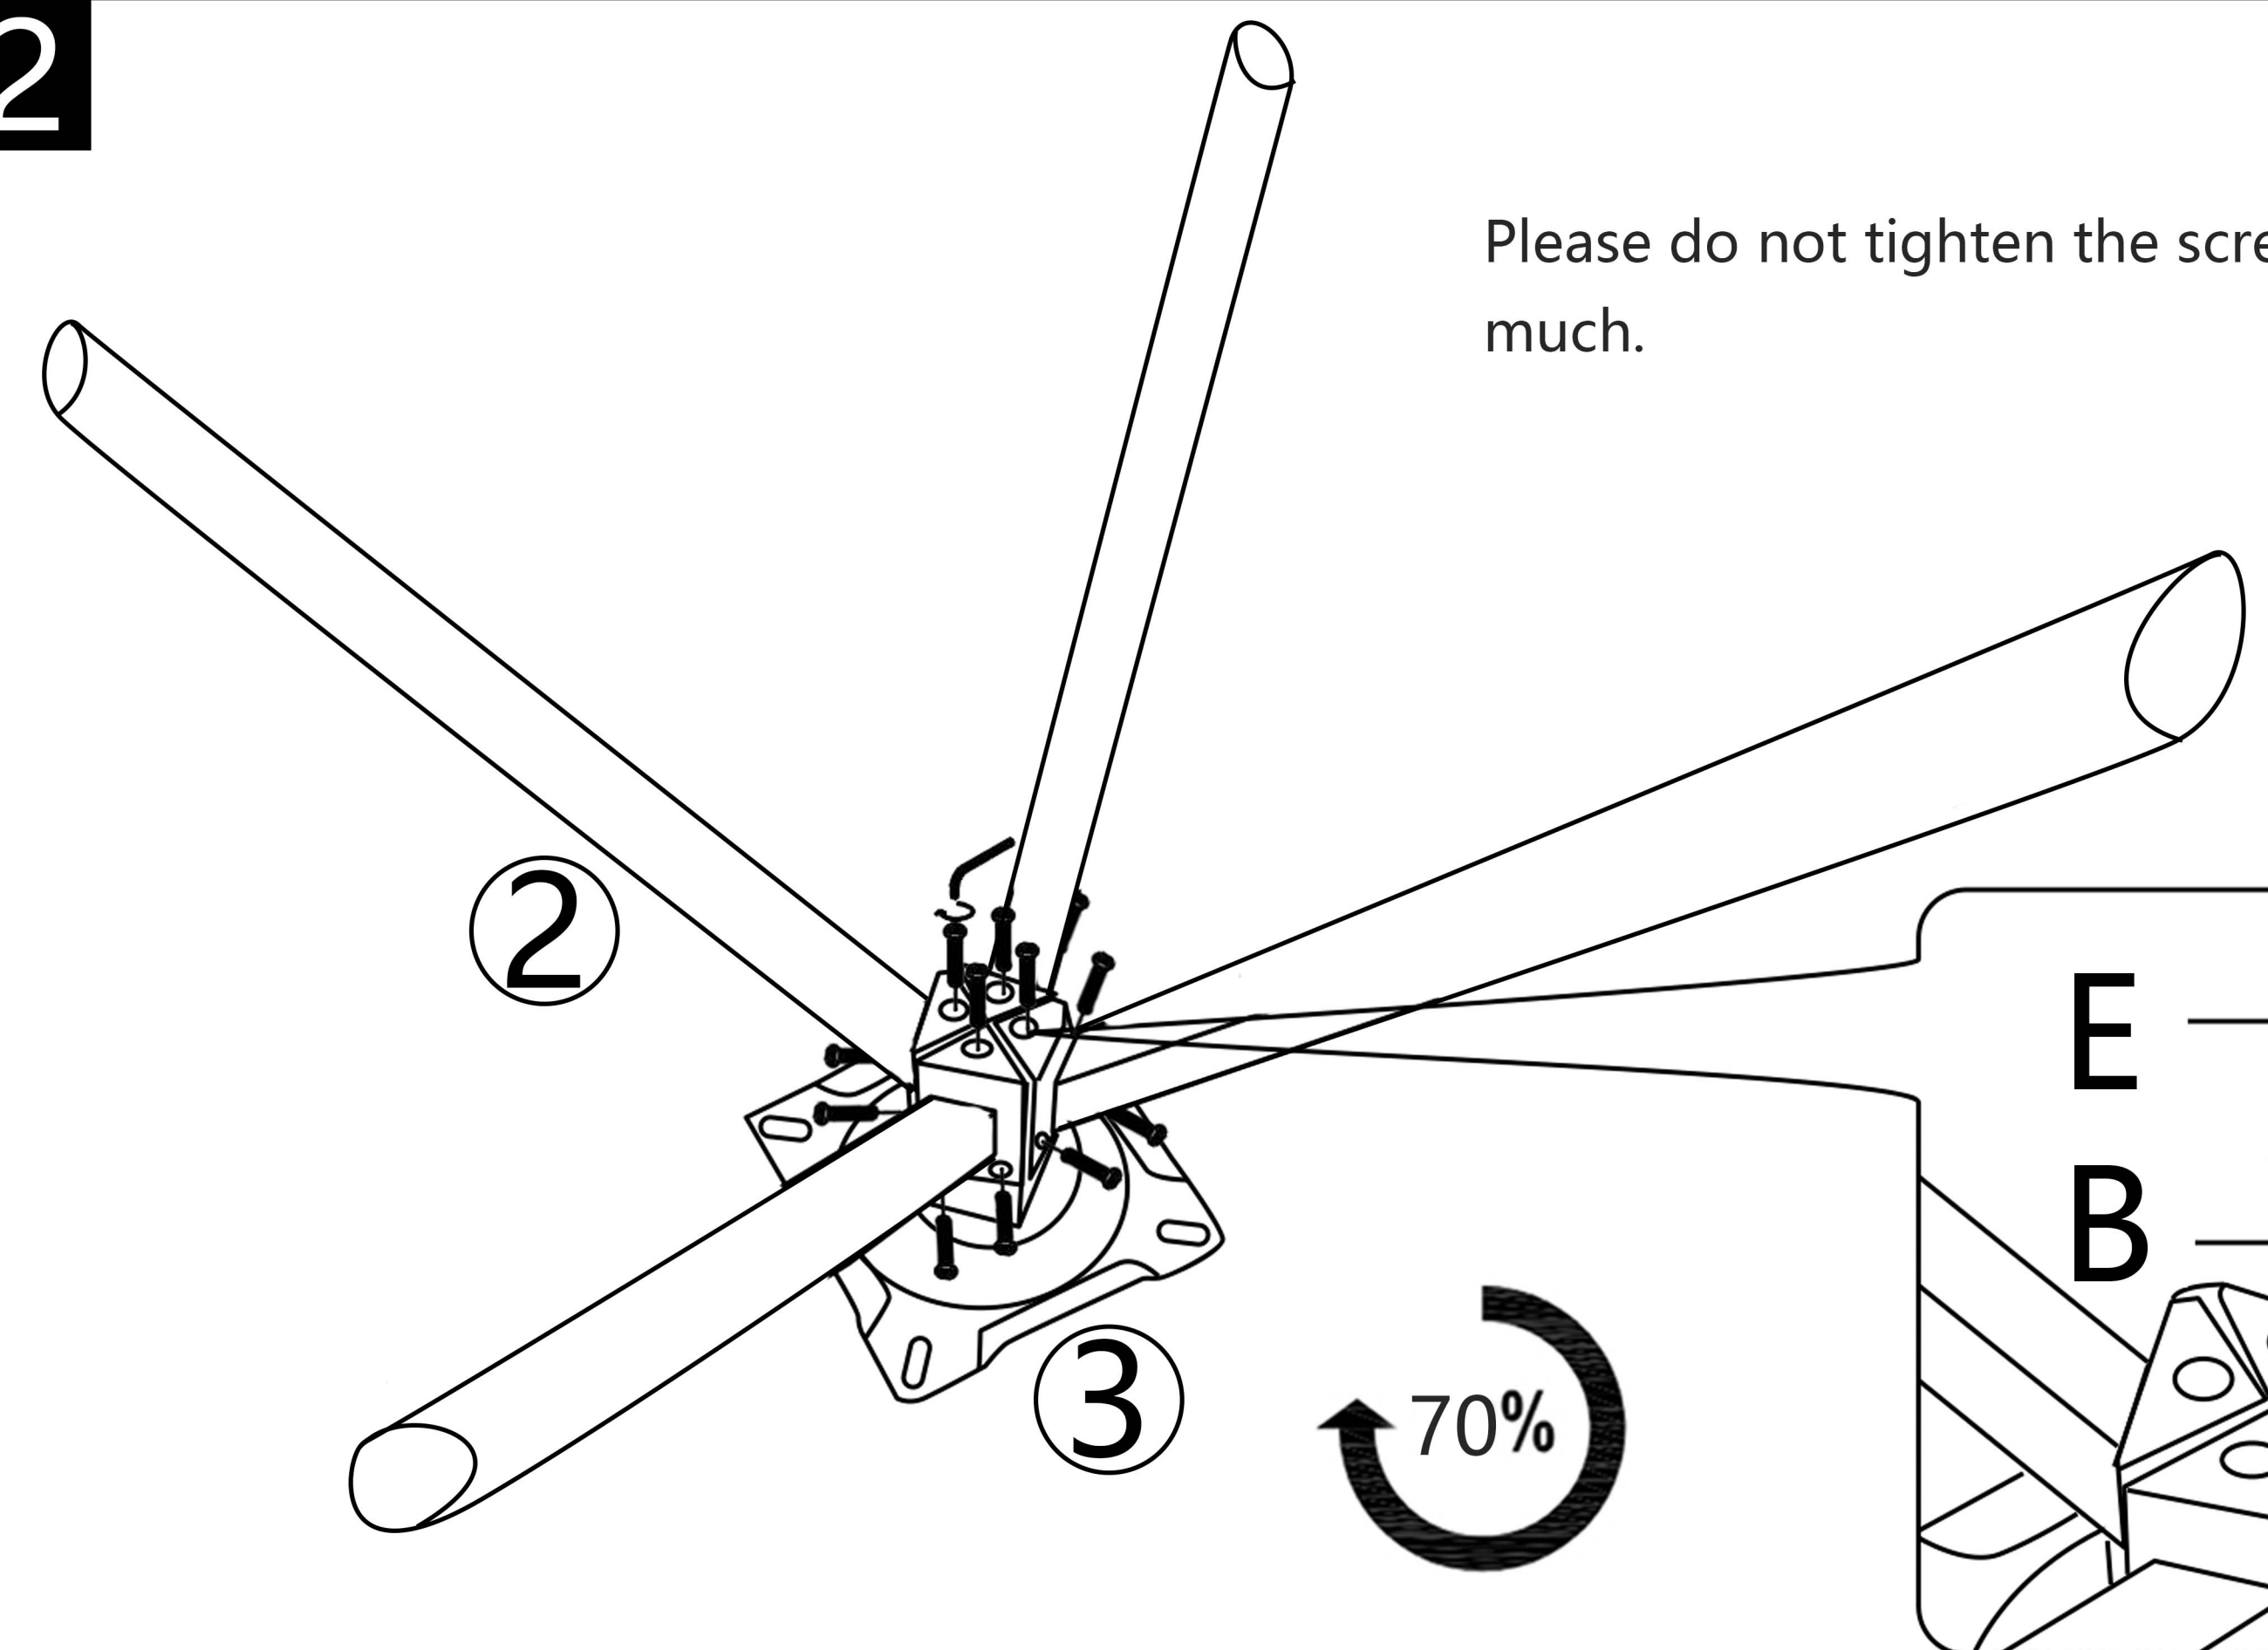 

Please do not tighten the screws too much.

②

 
③

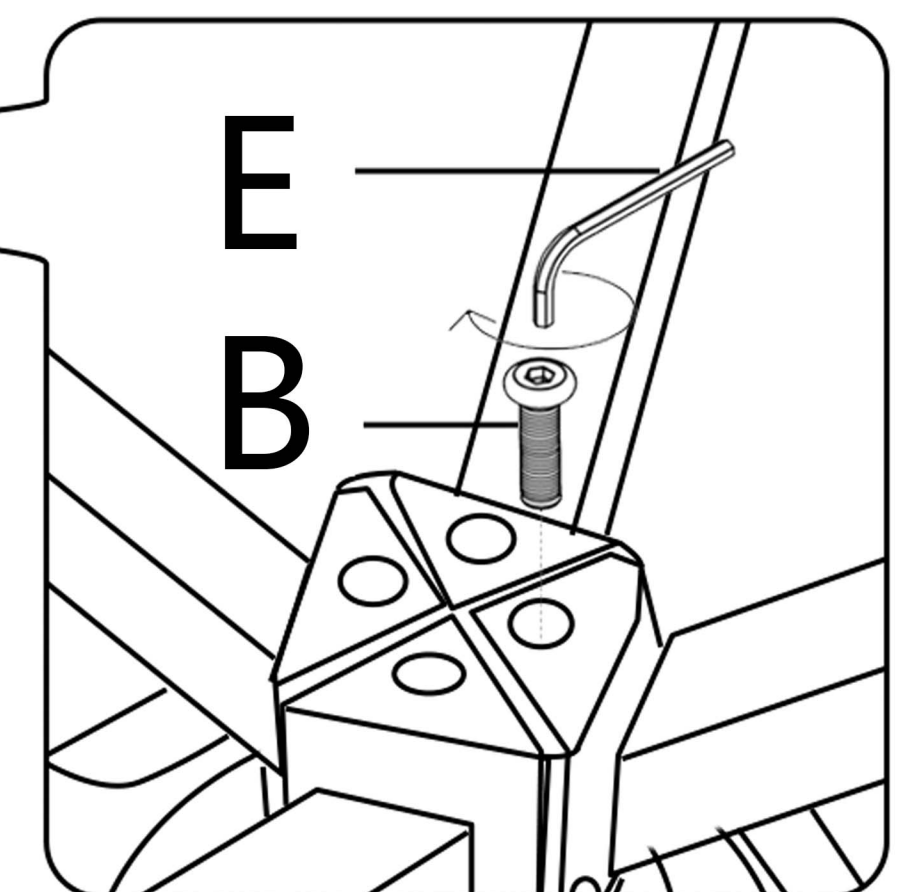


E
B

3

 Press gently to ensure that each legs is in contact with the horizontal surface.

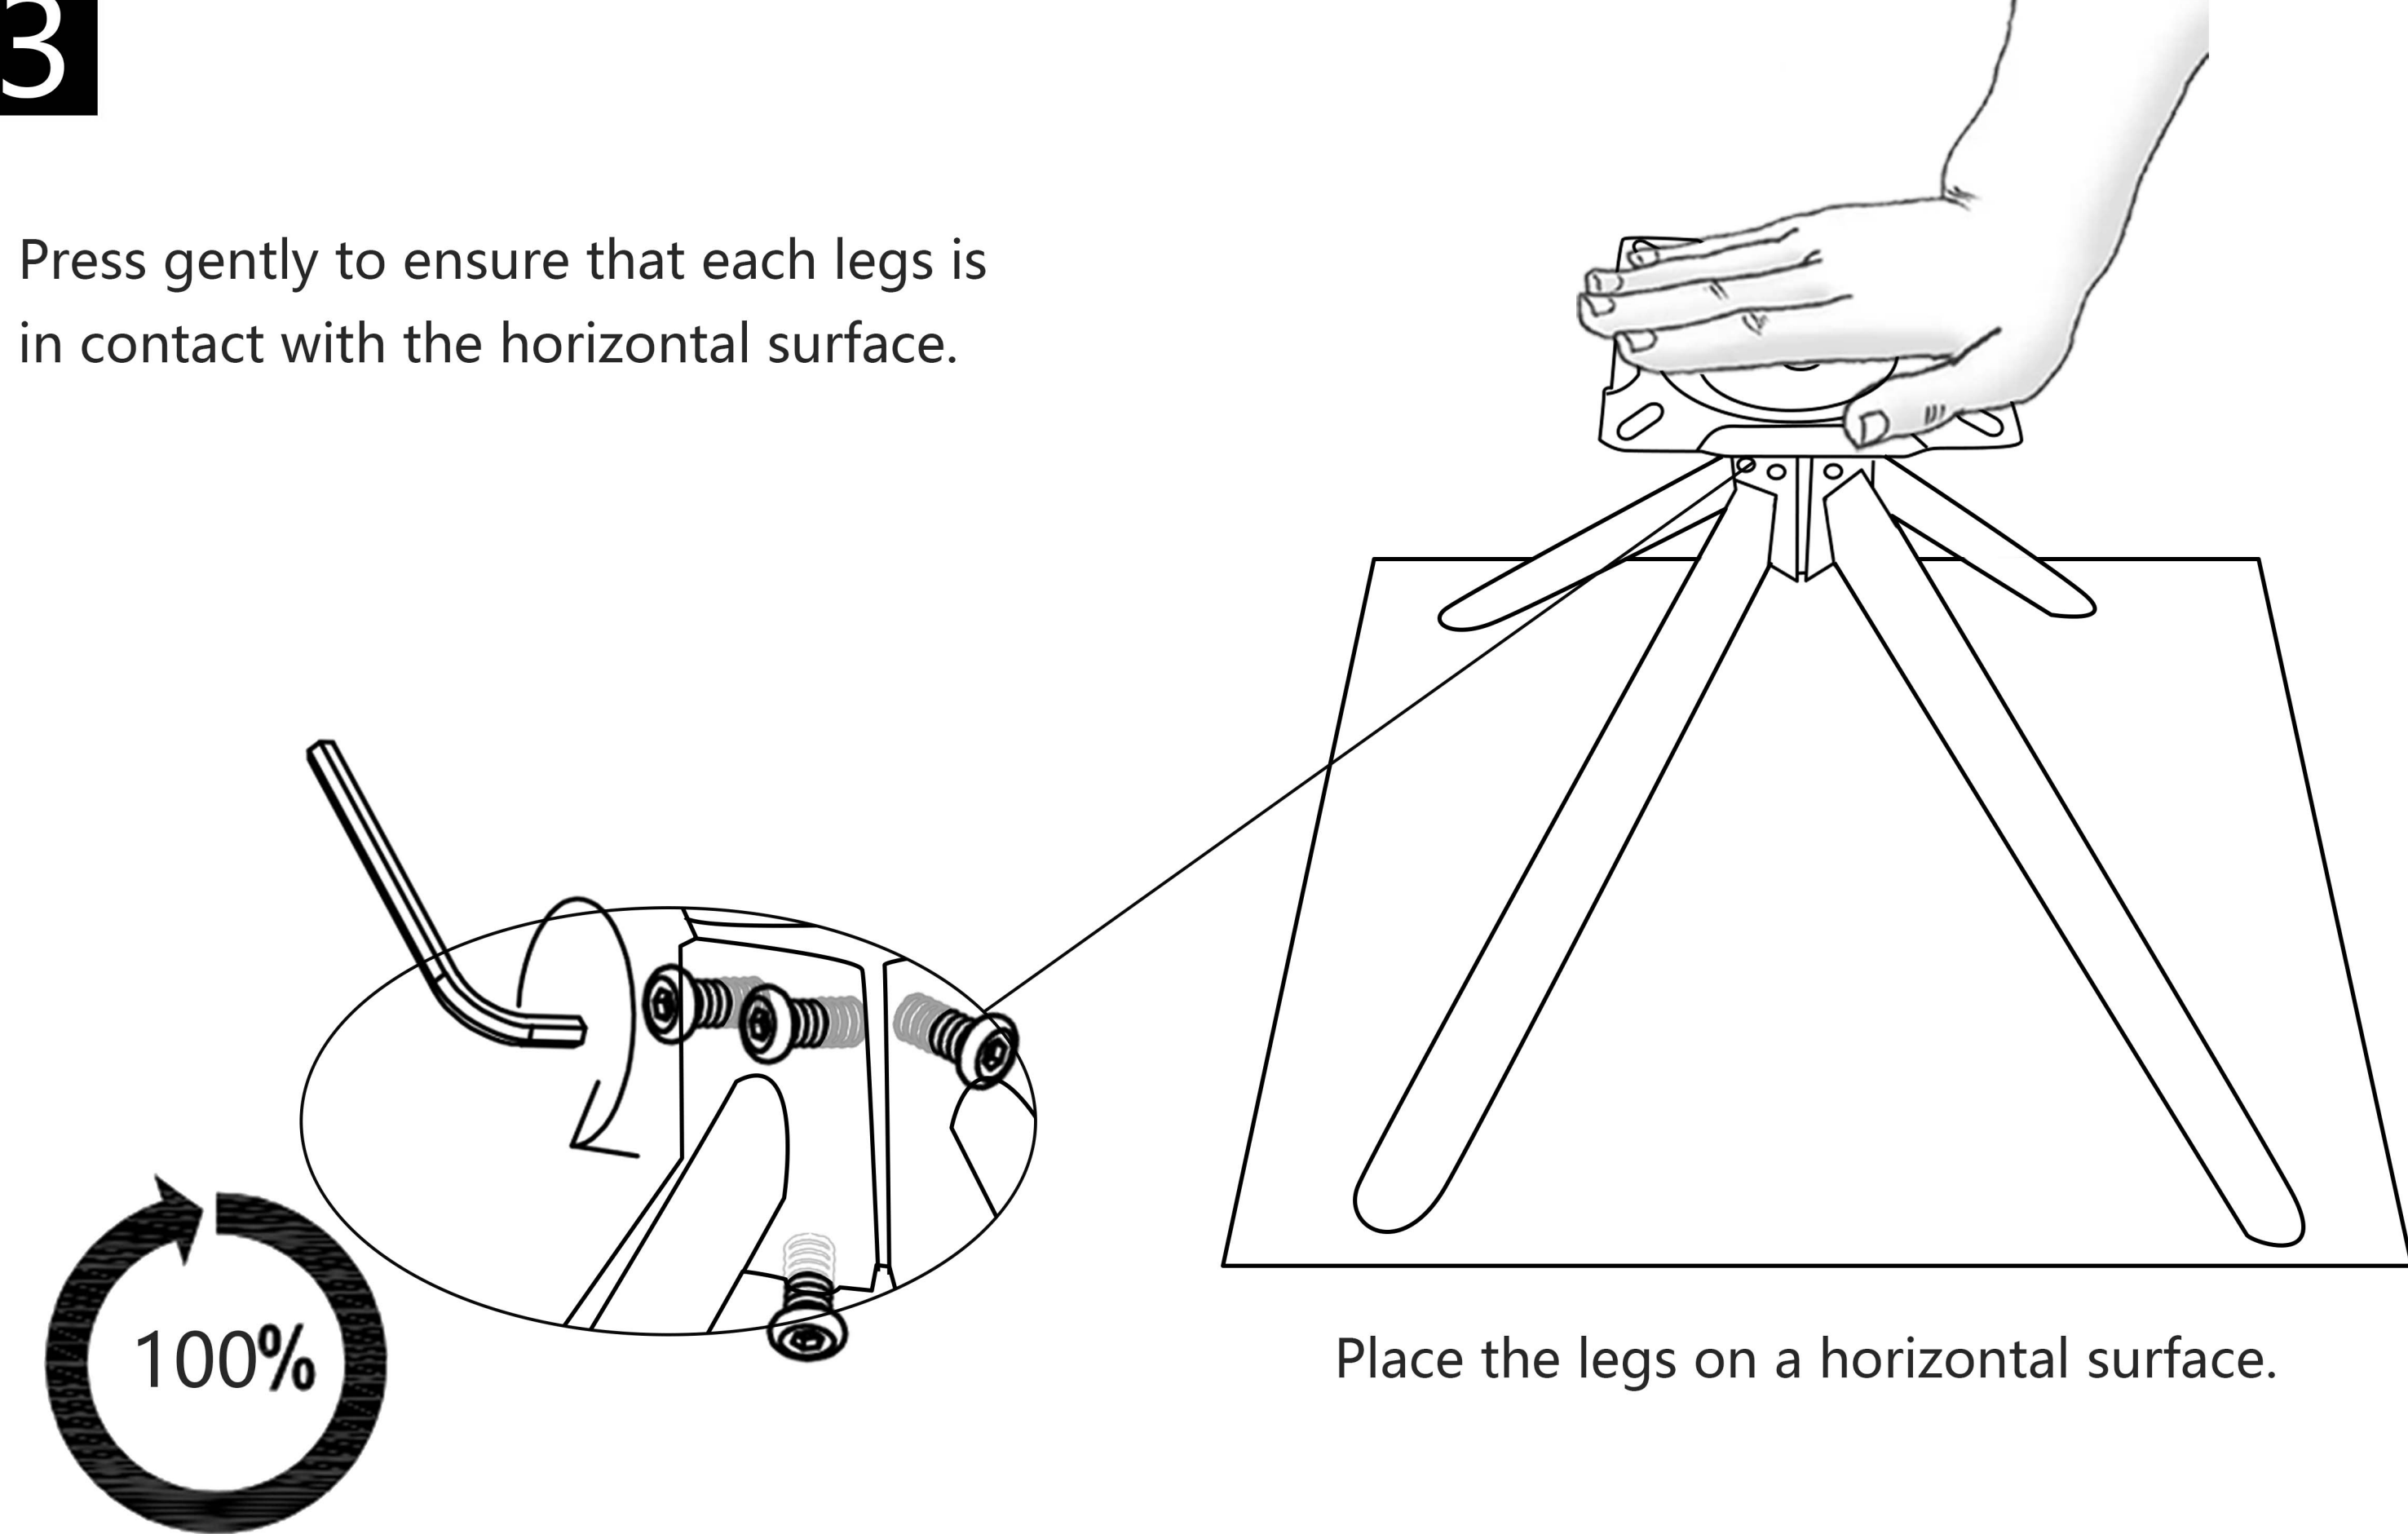

4

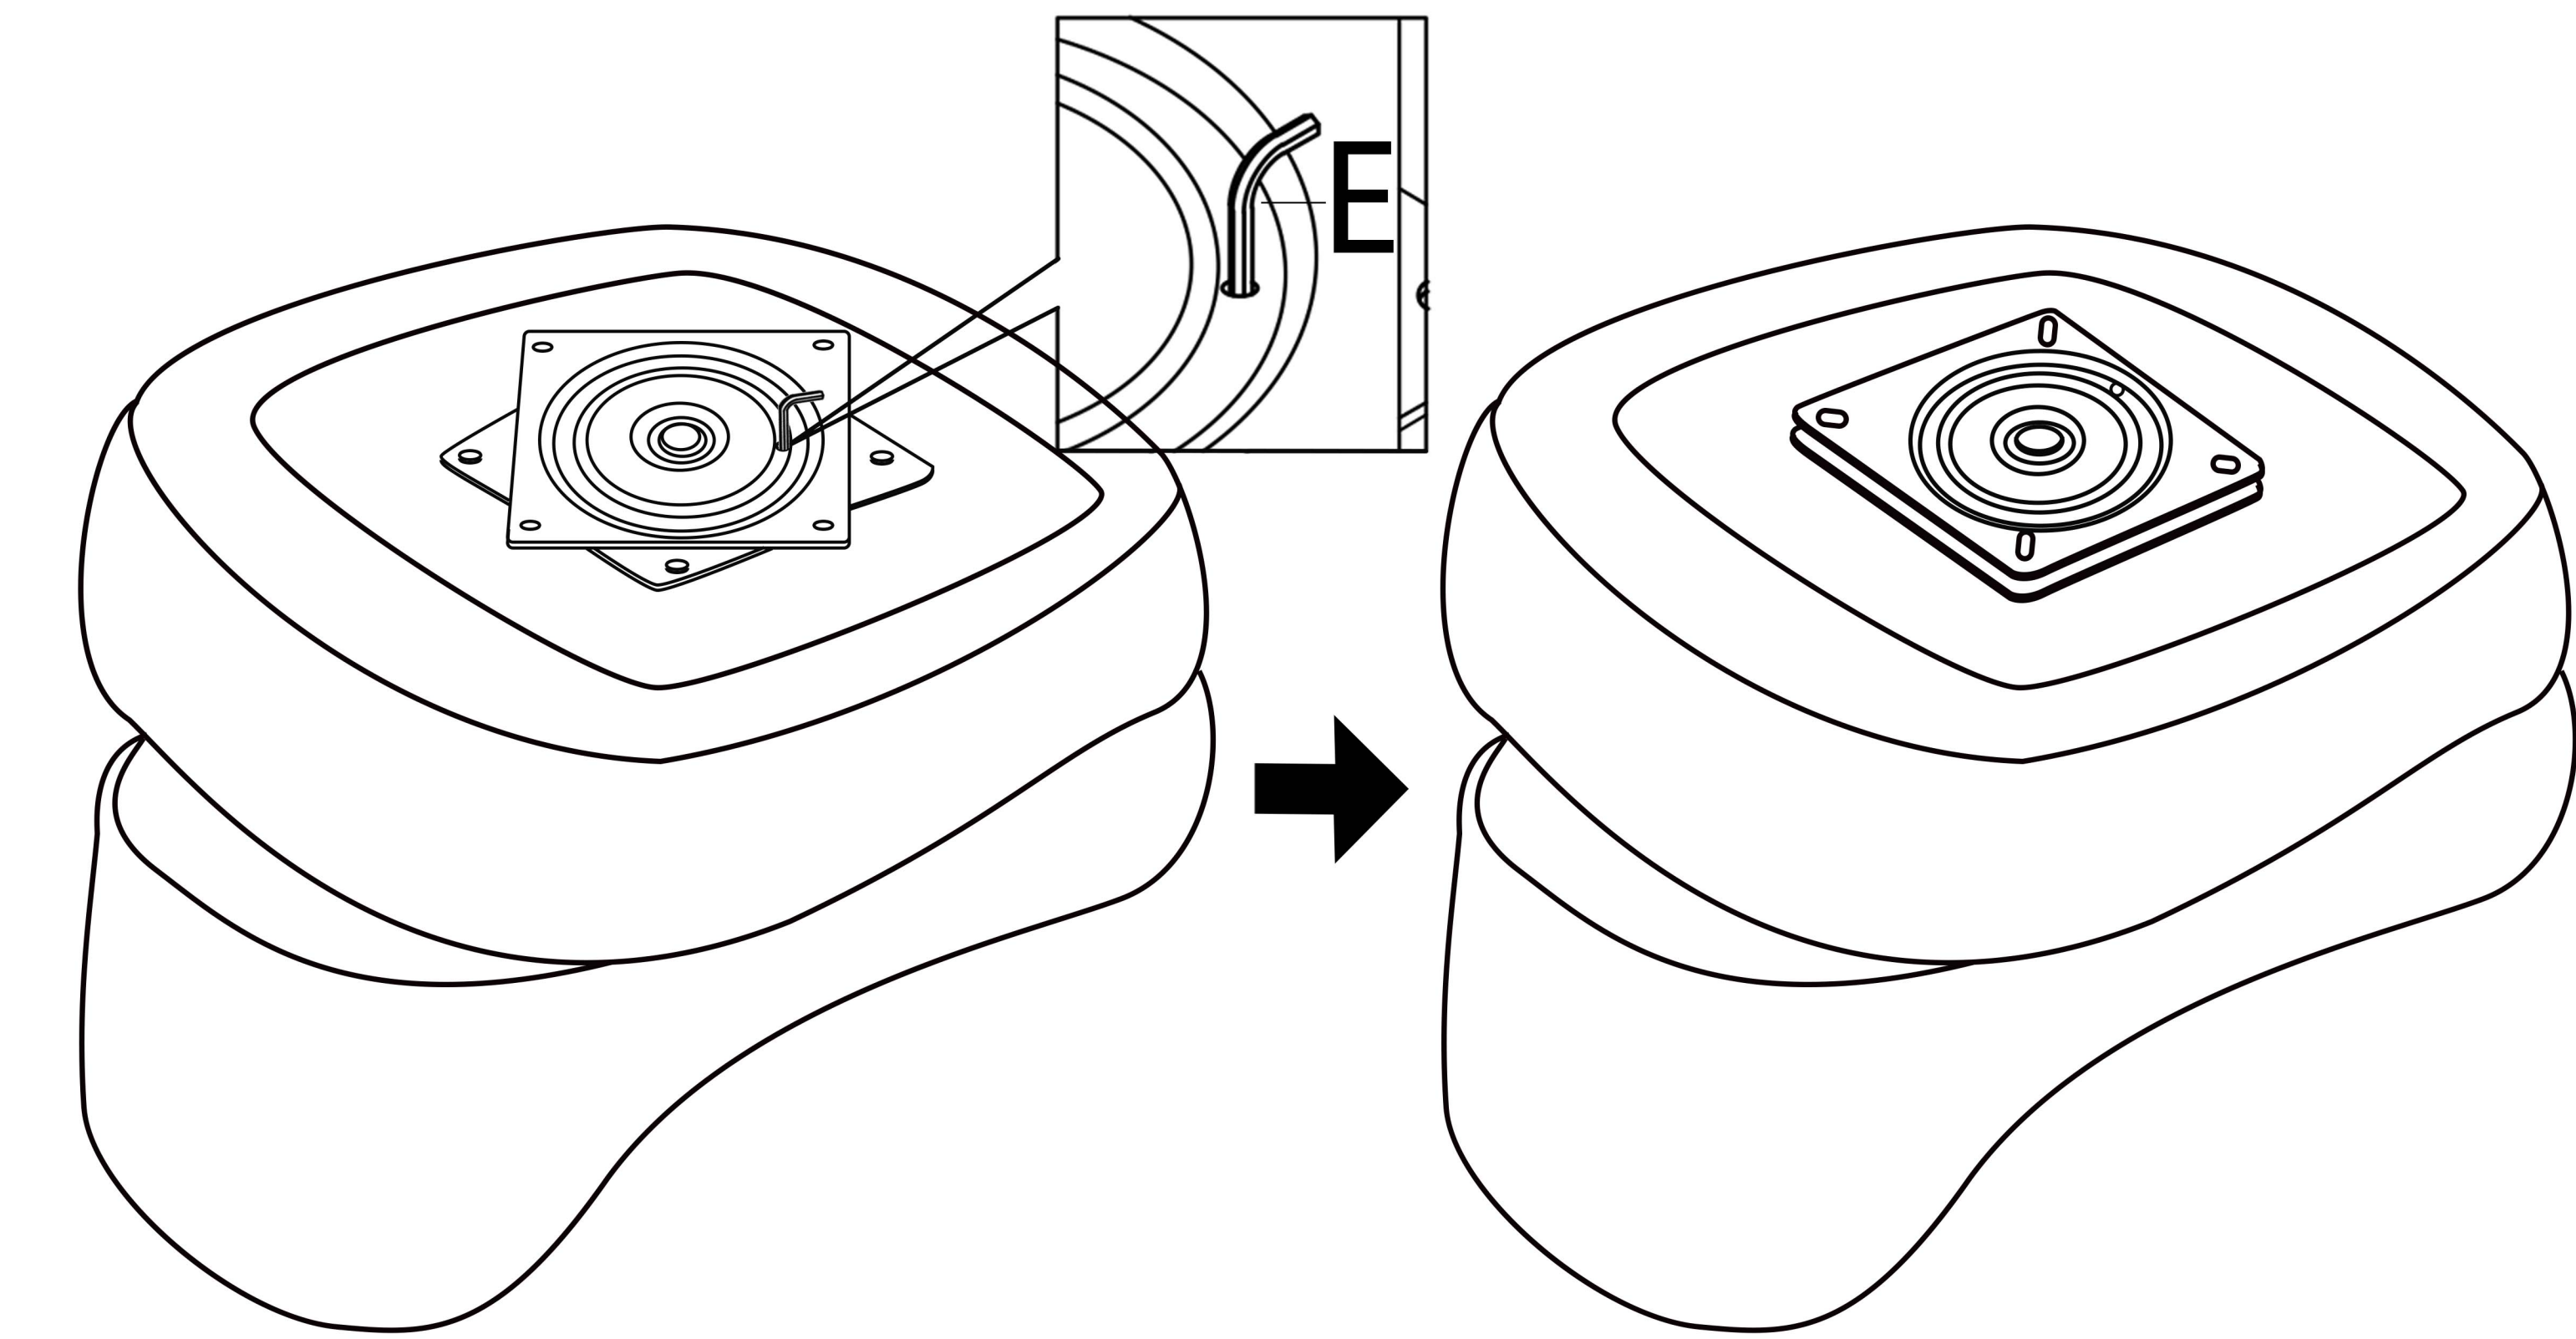 

5

