ASSEMBLY INSTRUCTION

Ax1	Fx4
Bx1 PLEASE REMOVE 	Gx4
Cx1	Hx1
Dx1	
Ex1	

1

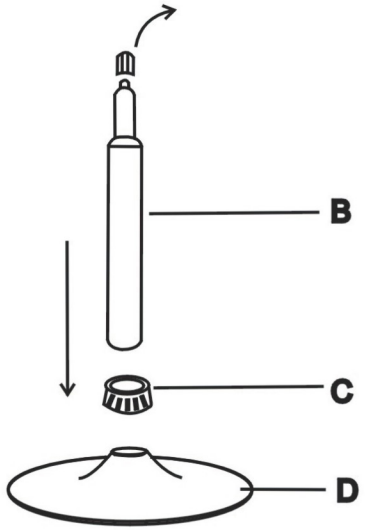

2

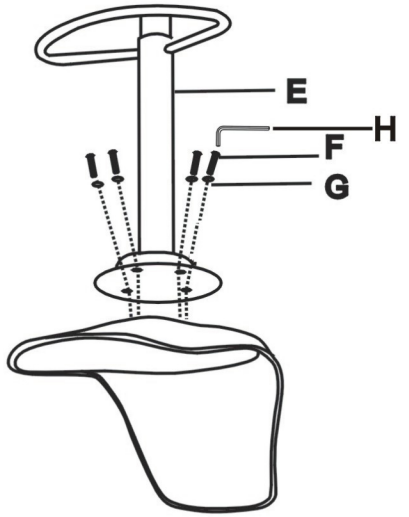

3

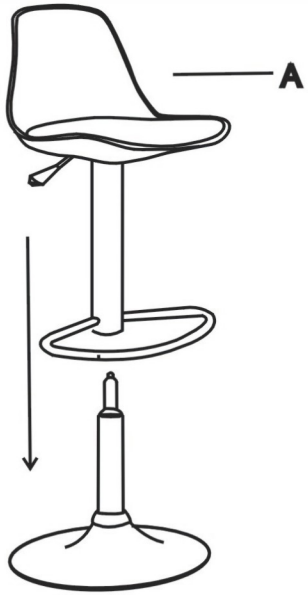

4