

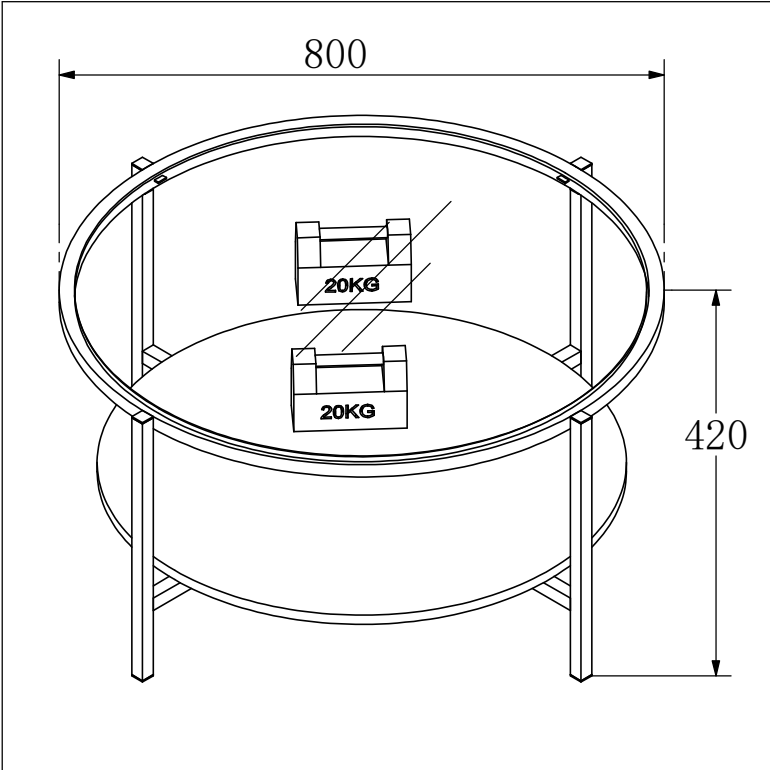
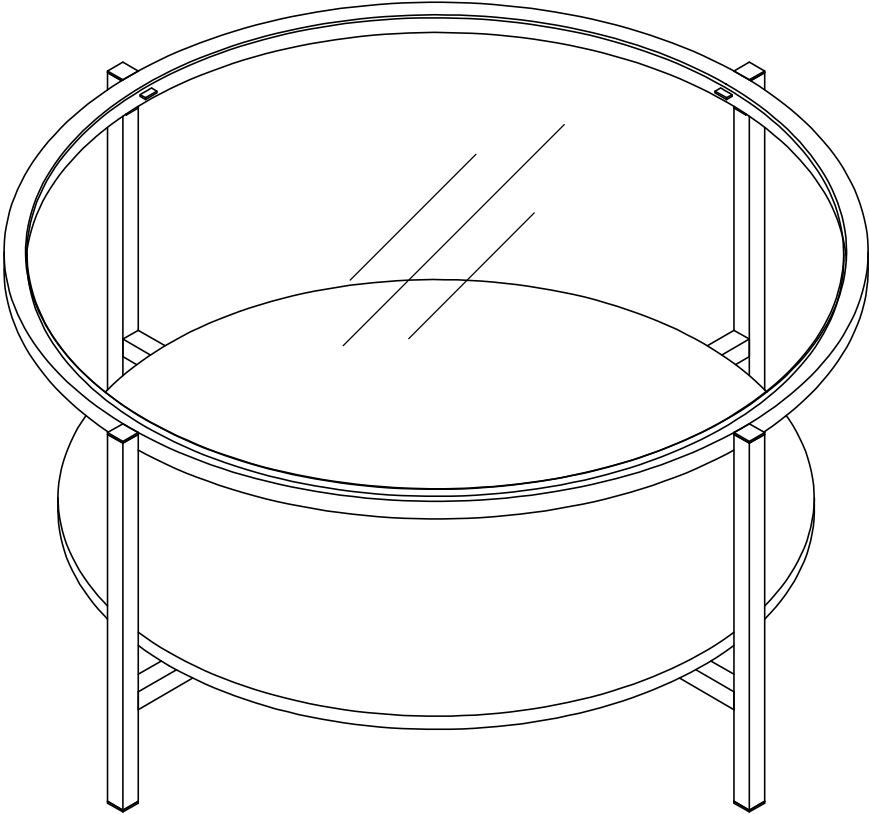
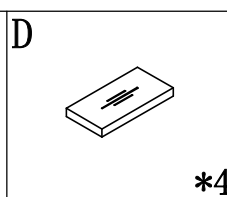
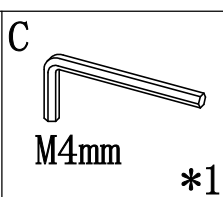
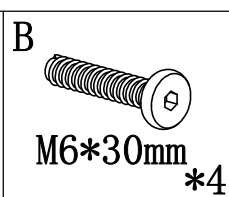
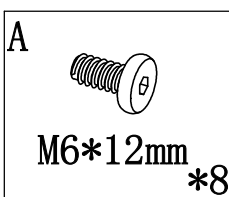
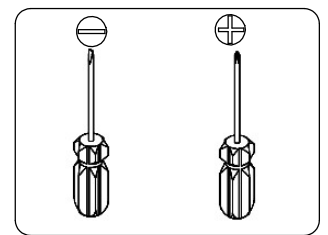
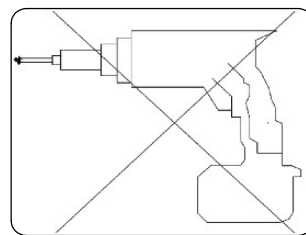
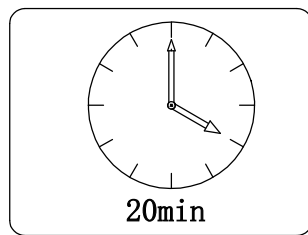
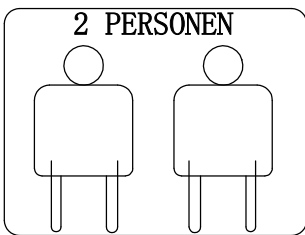







# Assembly instructions



Model: Kingston CT




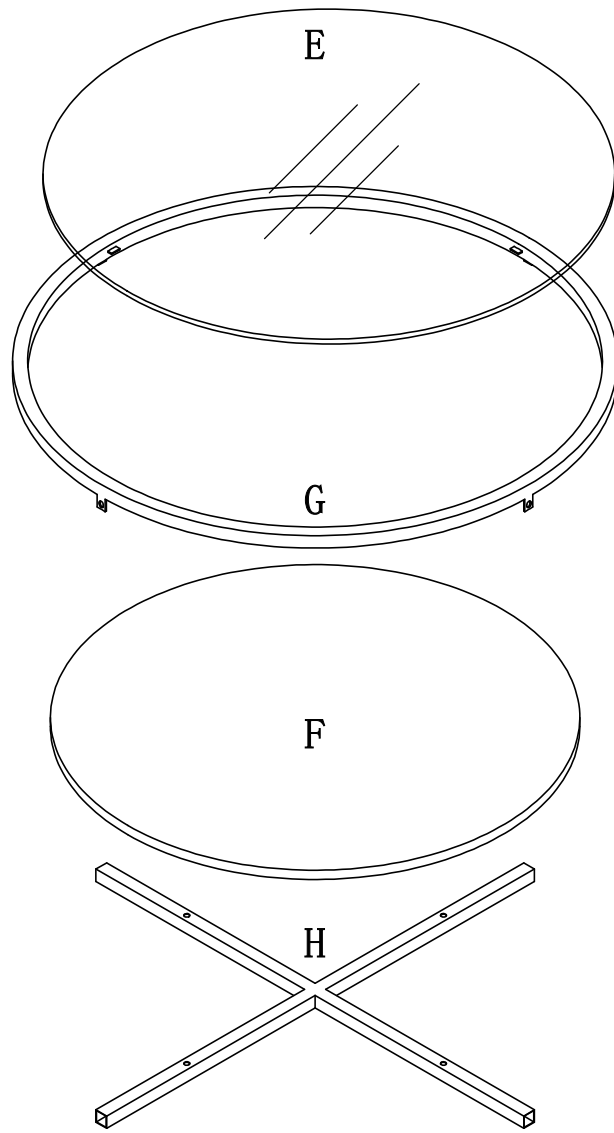




# Step:1

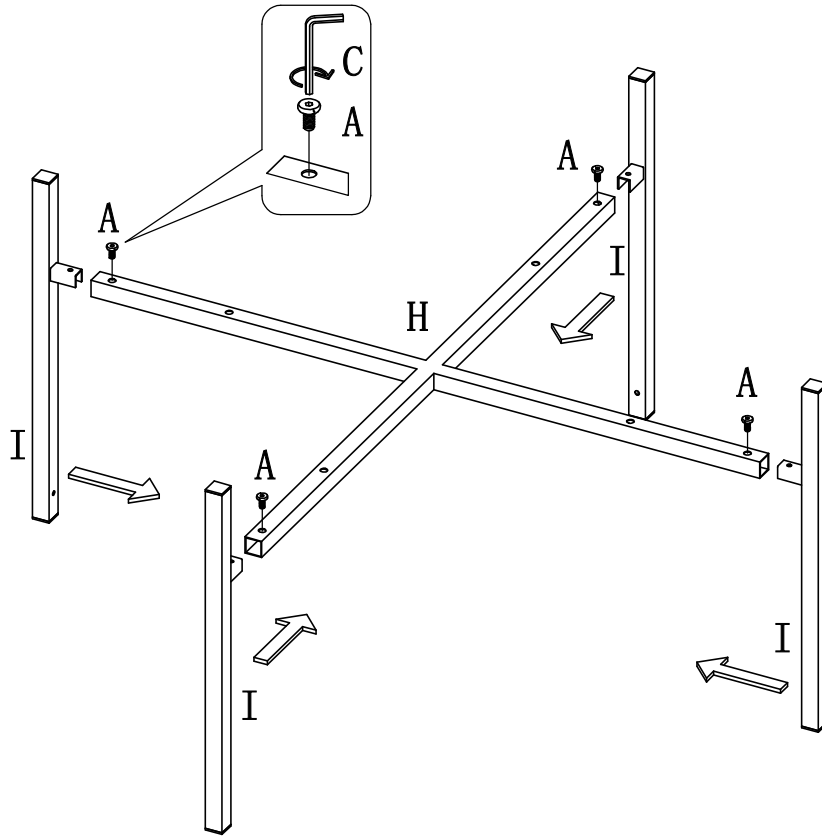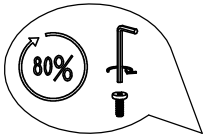






- A   
M6\*12mm  
\*4
- C   
M4mm  
\*1

# Step:2

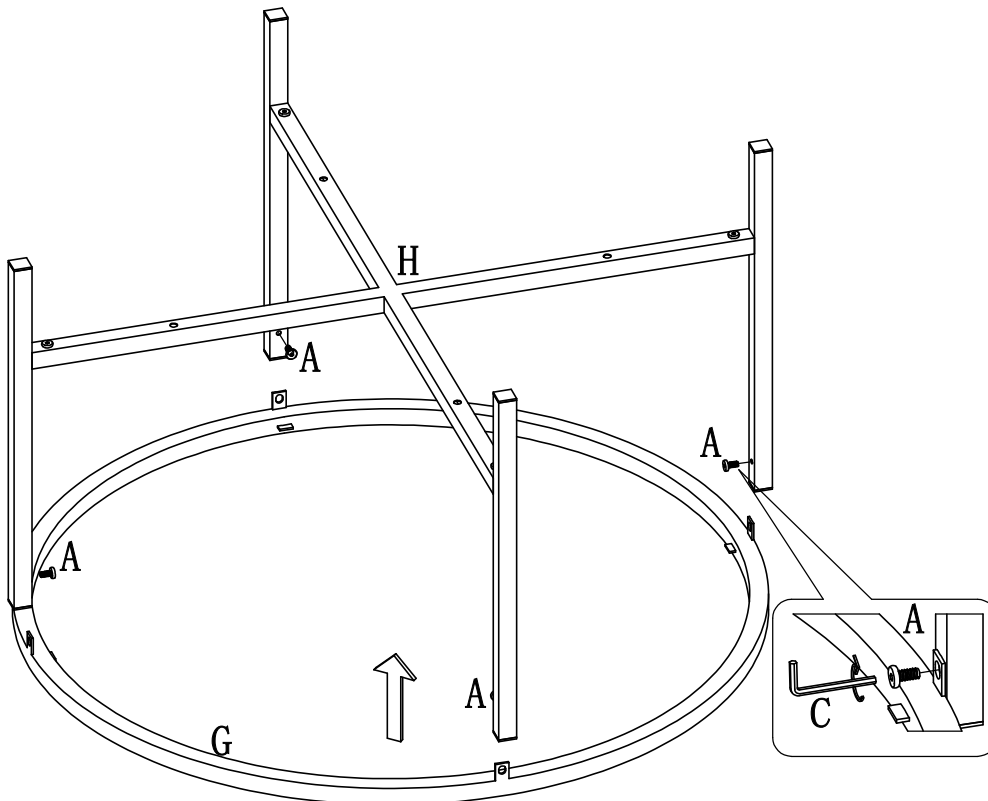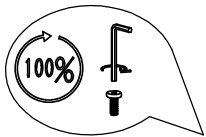

- A   
M6\*12mm  
\*4
- C   
M4mm  
\*1

# Step:3

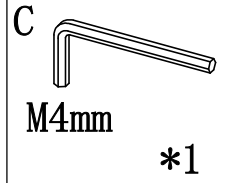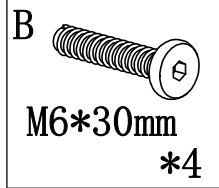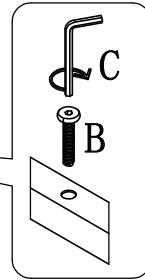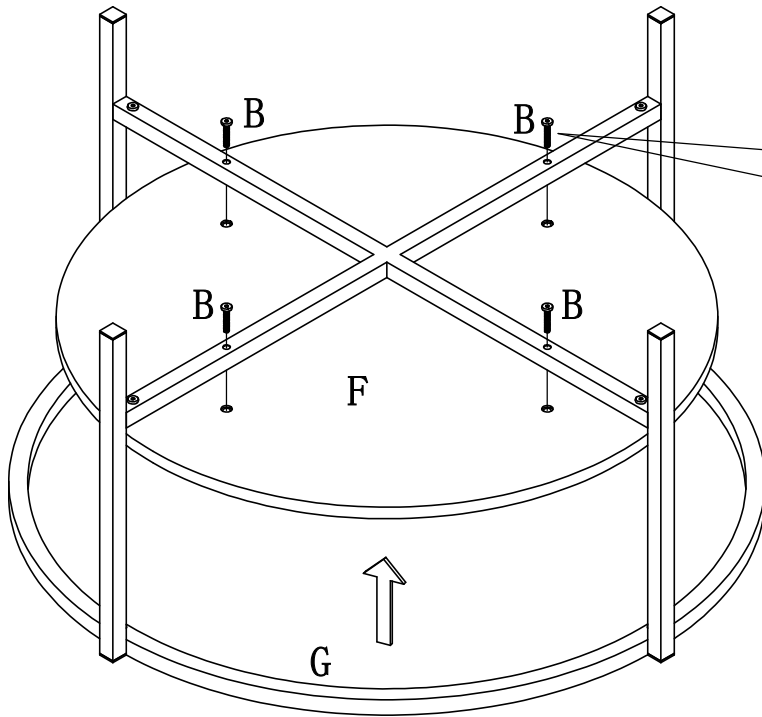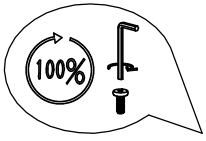

**Tighten all the screw completely**

# Step:4

