

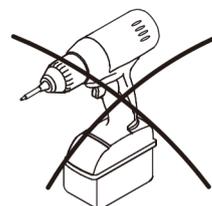
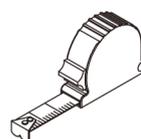
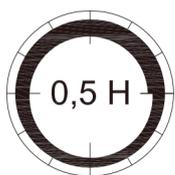




Edvin tuoli

Kokoamisohje




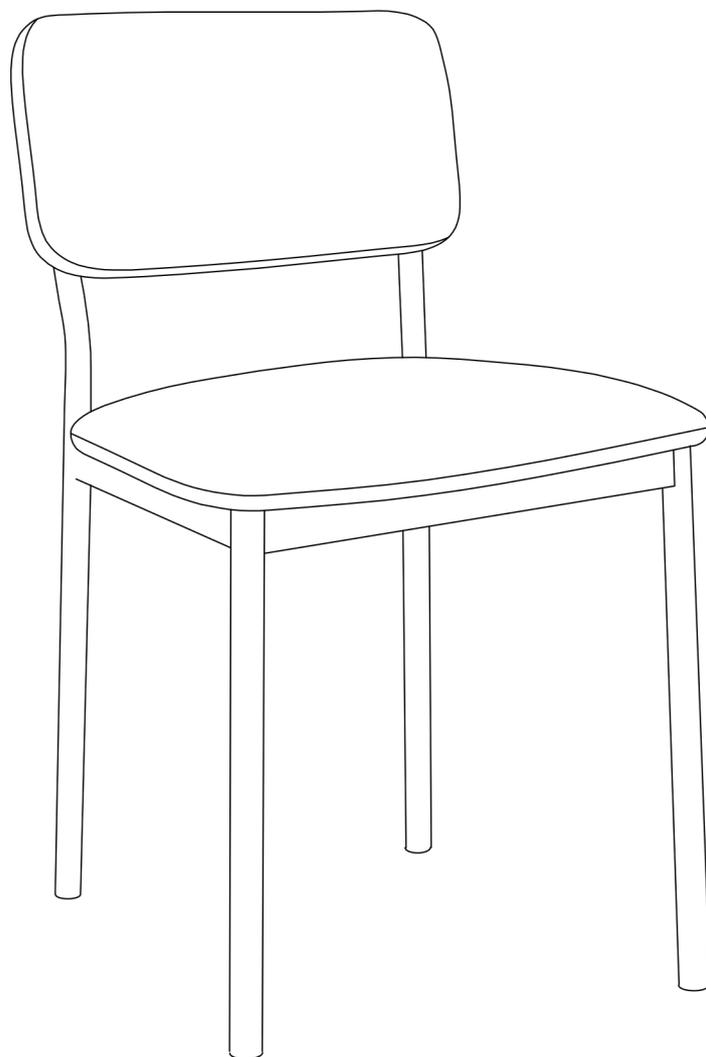


			✓
①	1	515x740x50	
②	1	515x740x50	
③	1	440x220x75	
④	1	450x430x50	
⑤	1	363/365x30x15	

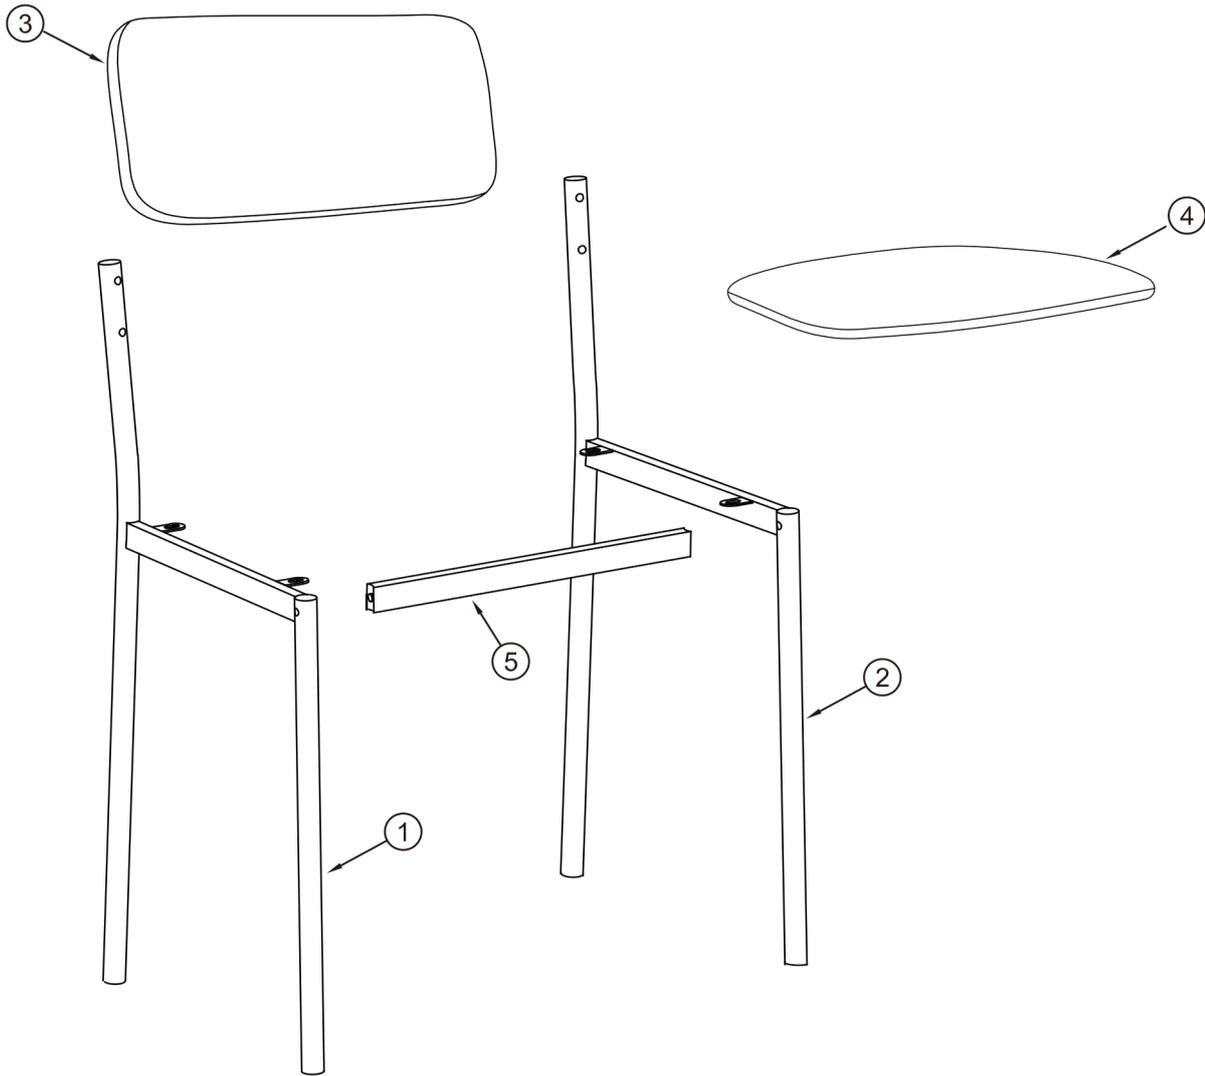

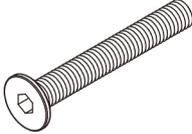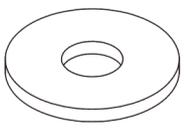
A x 4	B x 4	C x 2	D x 4	E x 1
				
M6 x 16mm	M6 x 40 mm	M6 x 40 mm	Ø6/Ø16 mm	4 mm

1

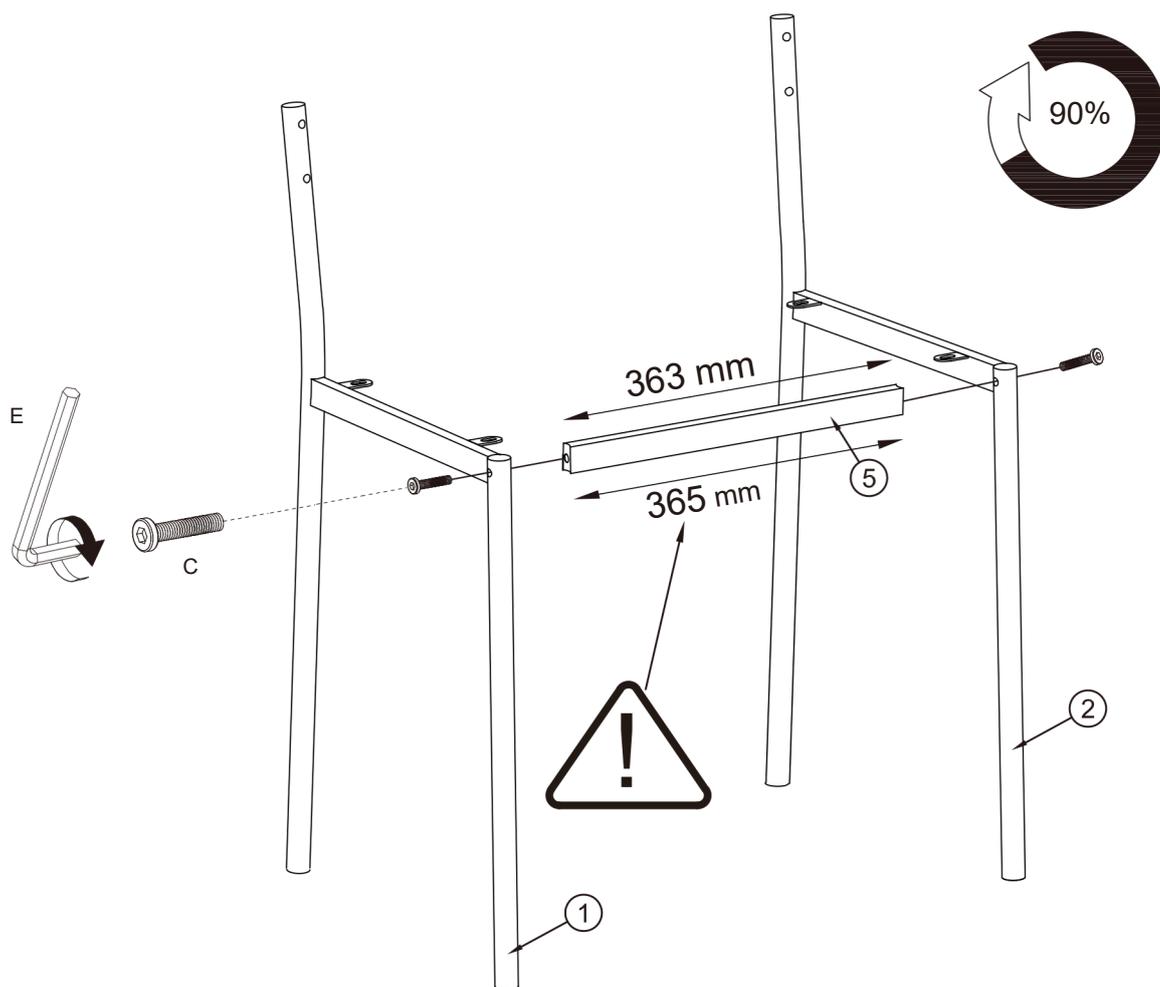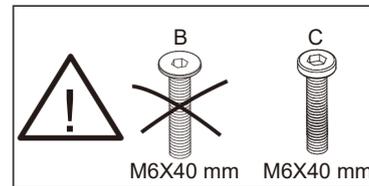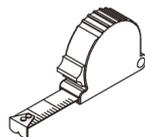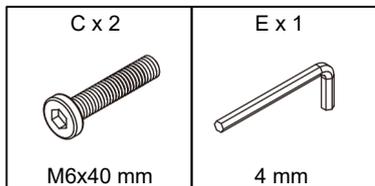



2

B x 4  M6x40 mm	E x 1  4 mm
--	--



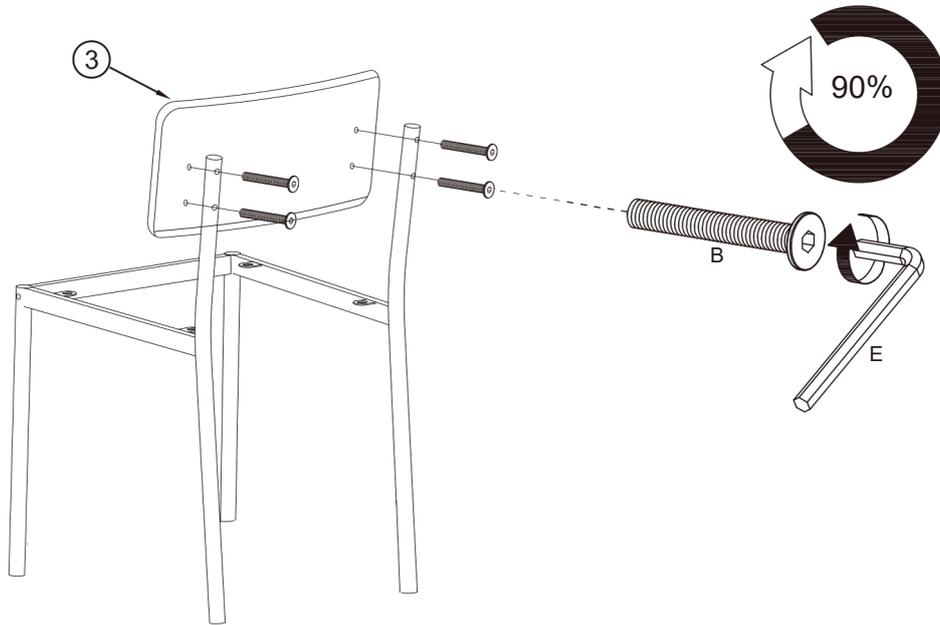


3



A x 4  M6x16 mm	D x 4  Ø6/Ø16 mm	E x 1  4 mm
--	---	--

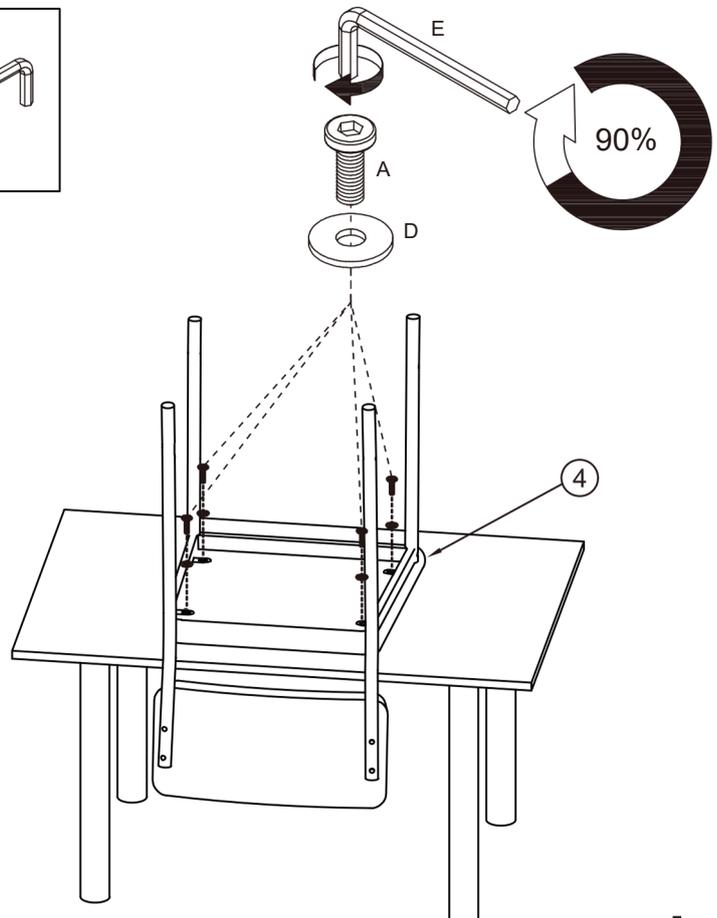

4

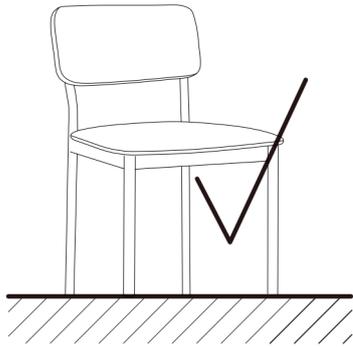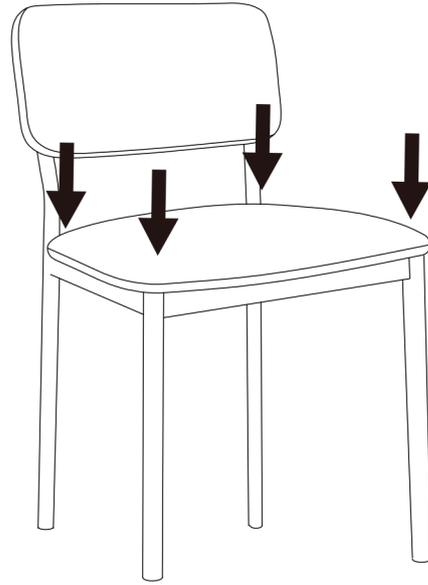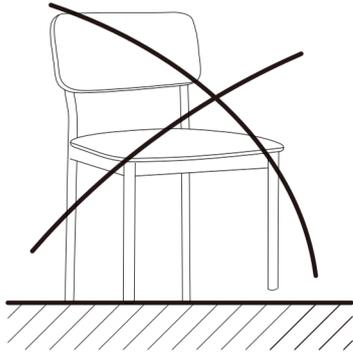

5

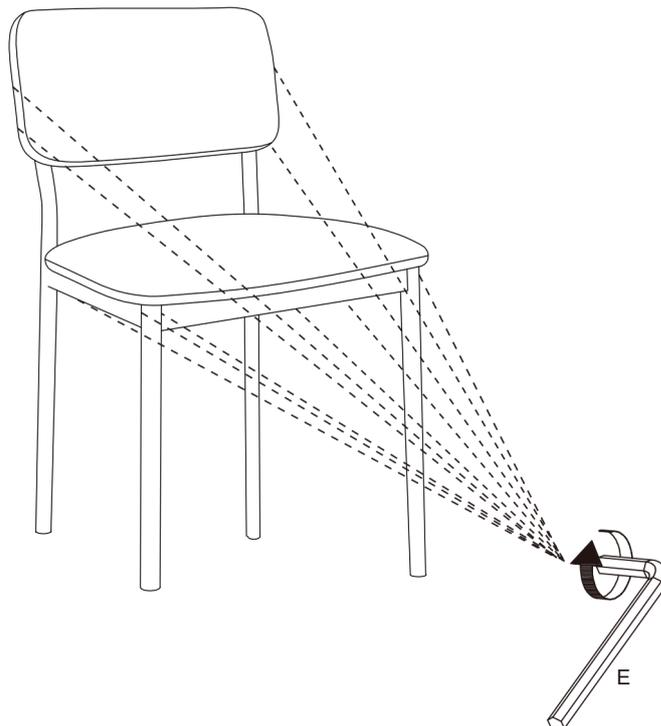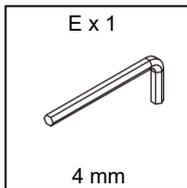

veke

6

