







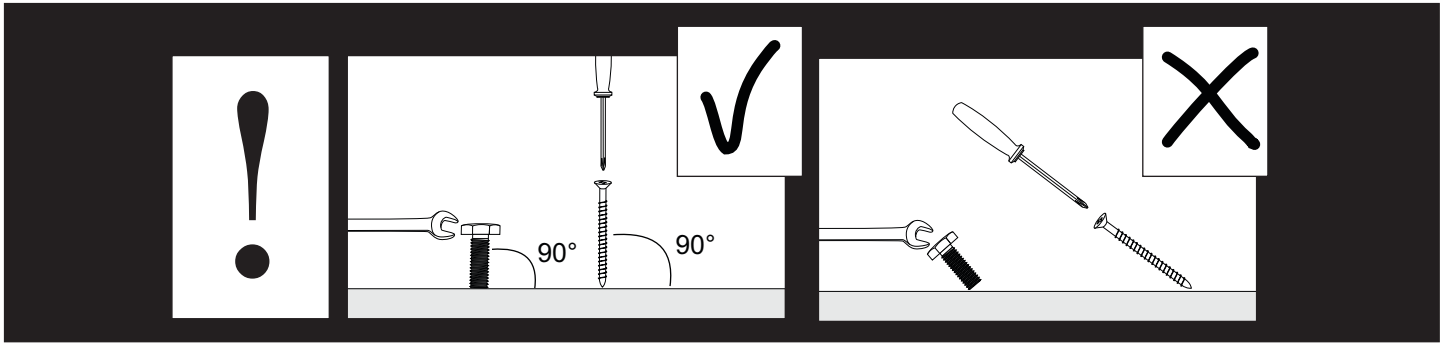




ASSEMBLY INSTRUCTION FOR BED SOFA WITH OPEN CORNER




KRP01228

<p>A</p>  <p>x8</p>	<p>B</p>  <p>M6-10 x16</p>	<p>C</p>  <p>M6-12 x4</p>	<p>D</p>  <p>x8</p>	<p>E</p>  <p>4,8-40 x8</p>	<p>F</p>  <p>x8</p>	<p>G</p>  <p>M8-50 x2</p>
<p>H</p>  <p>Ø5 x1</p>						


1

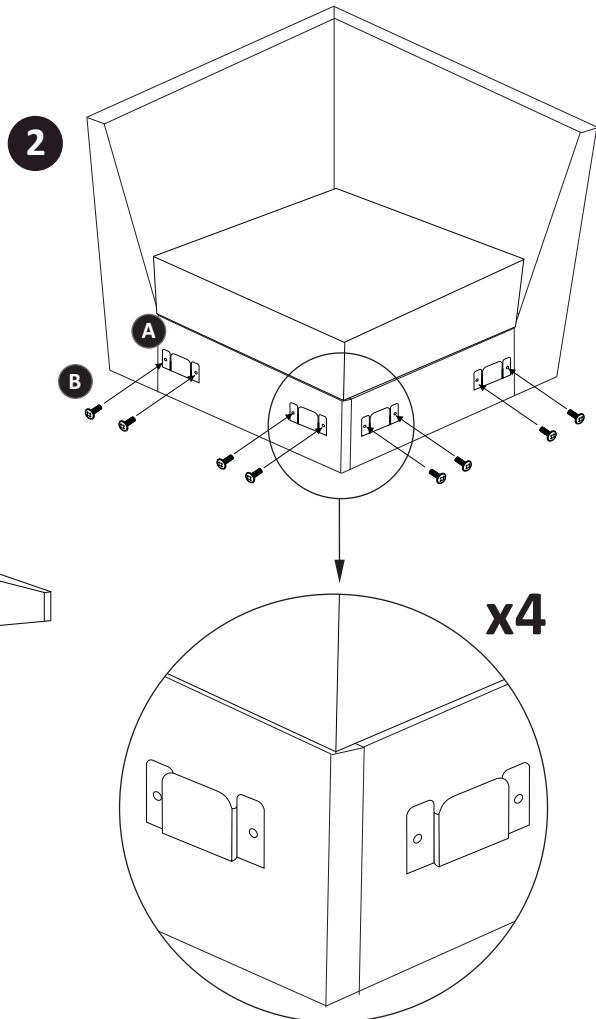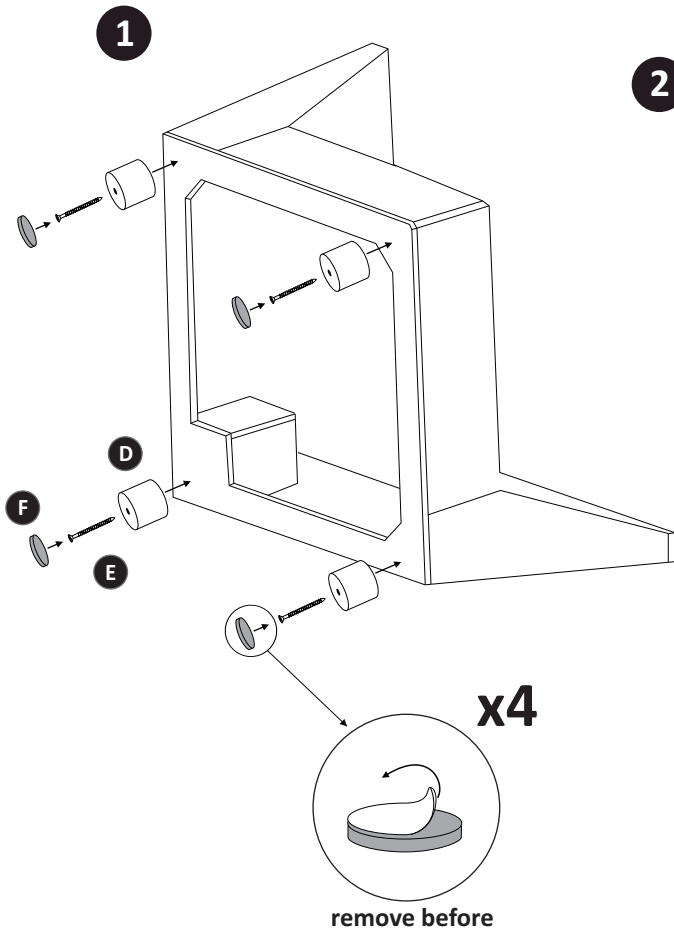


2

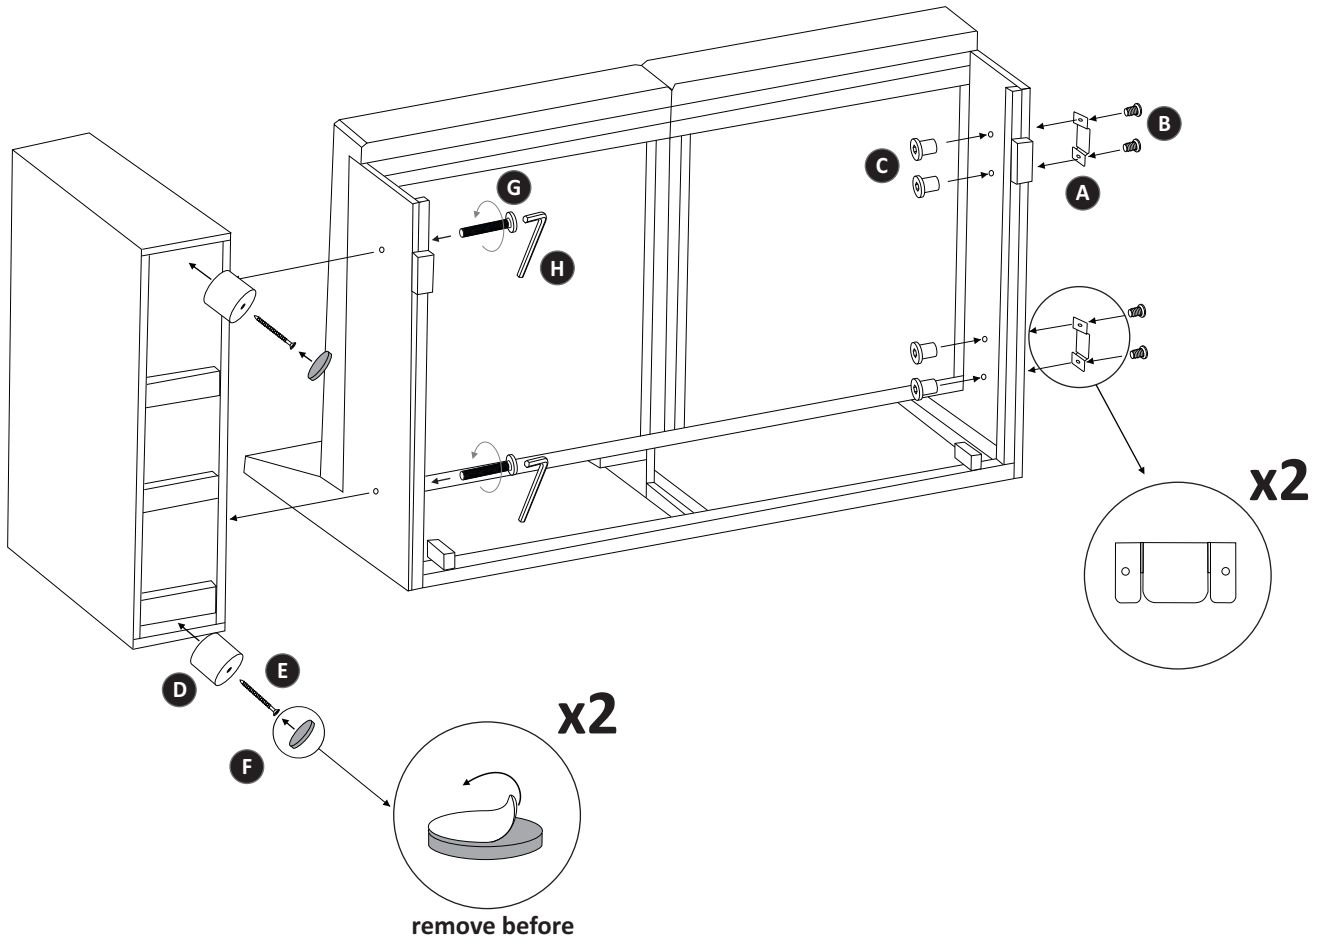



3

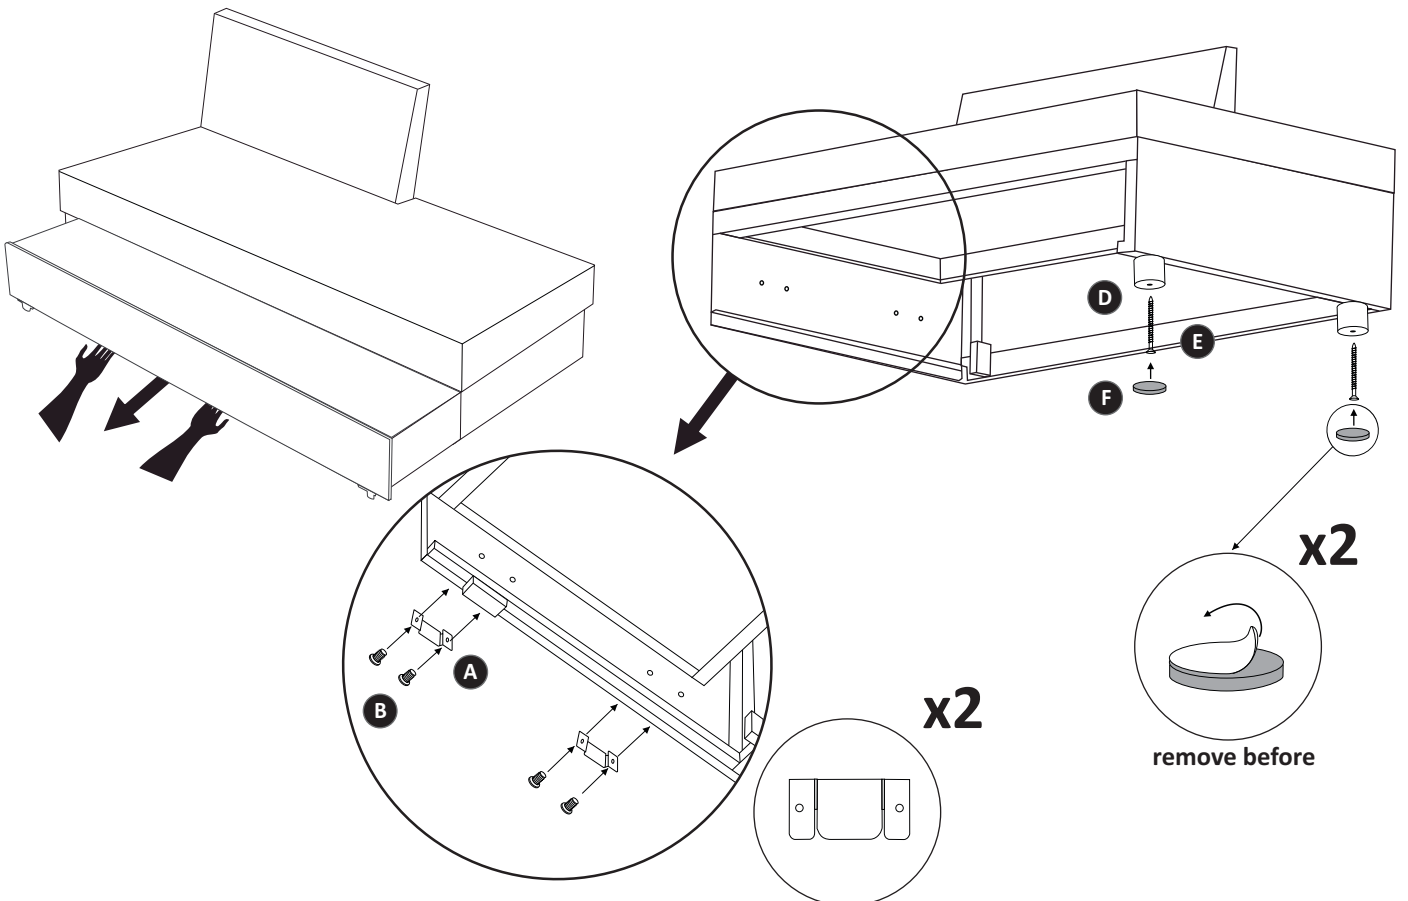

4

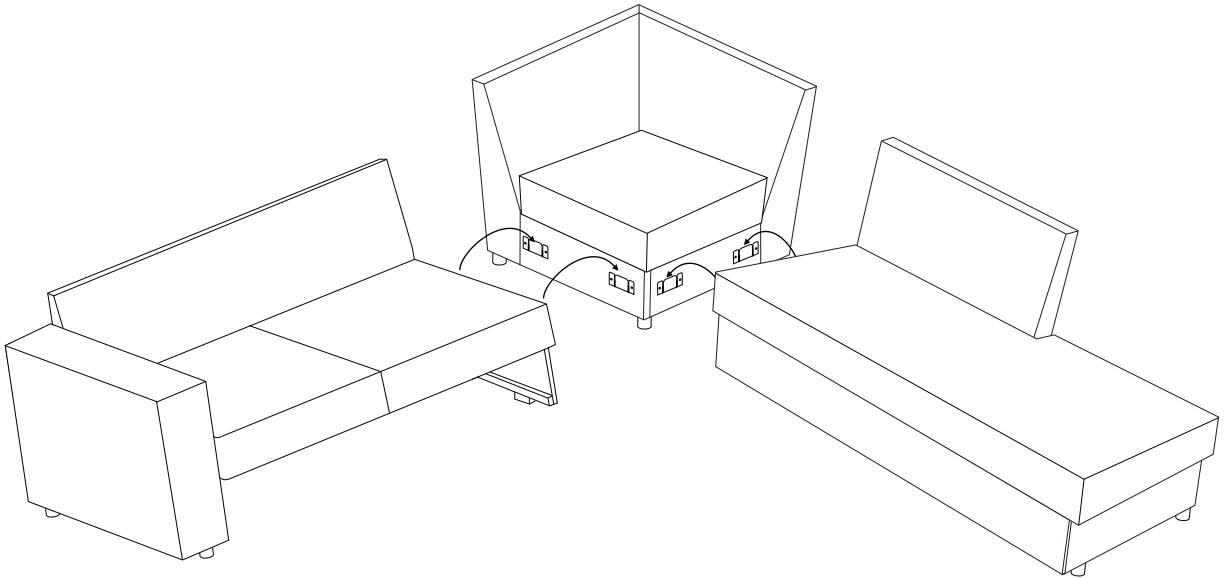

5

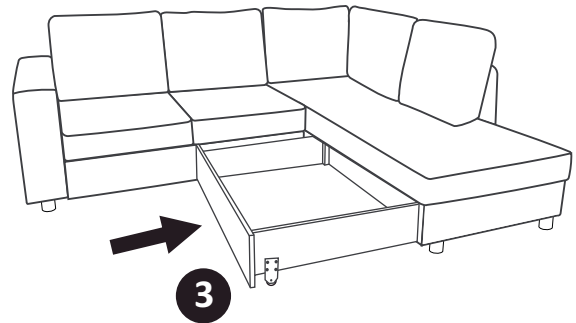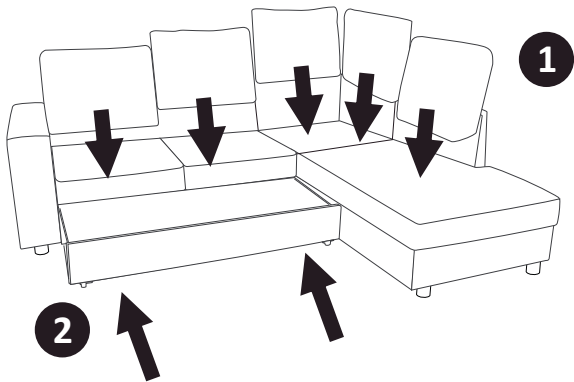

6

