




# ASSEMBLY INSTRUCTIONS

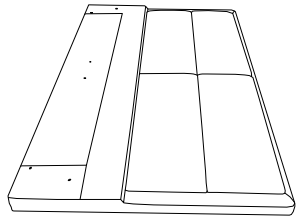


A\*1

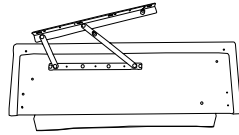


B\*2

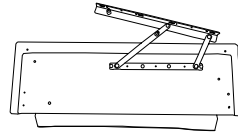


C\*2




D\*4




E\*2

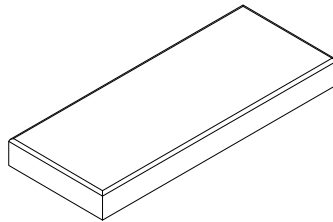


F\*2

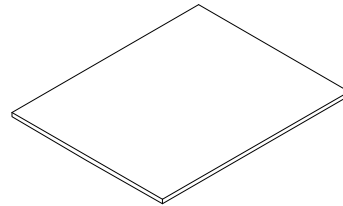


G\*1




Hx1



Ix1



1 \*10



2 \*8



3 \*8




M8

4 \*8



5 \*4



M4\*20

6 \*4




M8

7 \*6




M6\*25

8 \*64



M8\*70



9 \*6



10 \*1









11 \*1

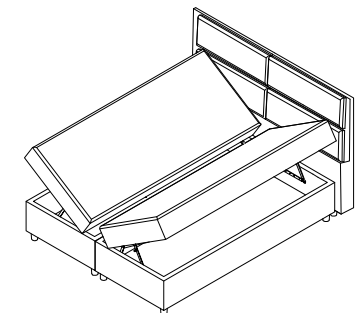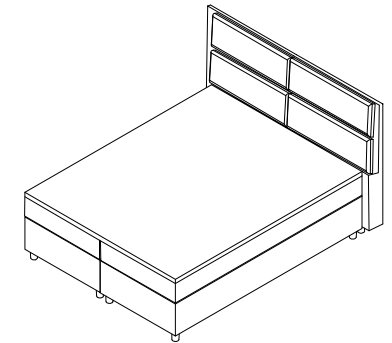



ITEM NO.:25268

# ASSEMBLY INSTRUCTIONS

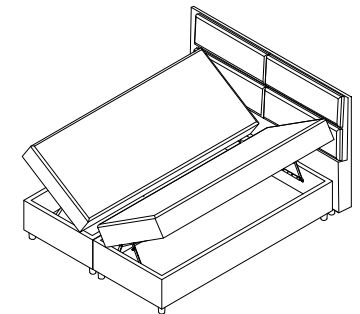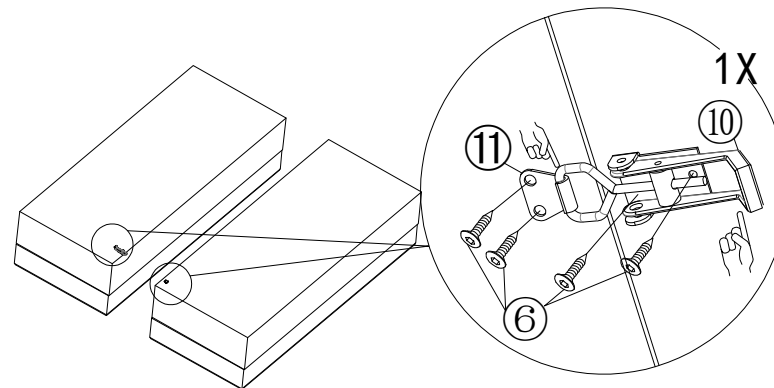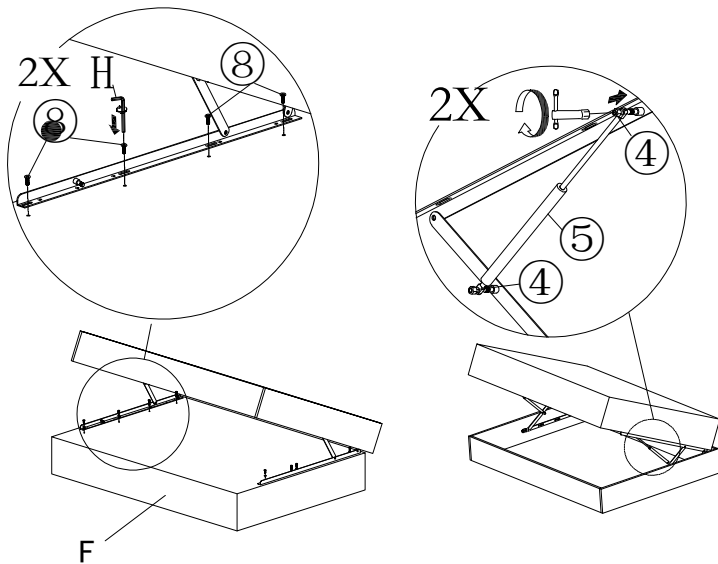
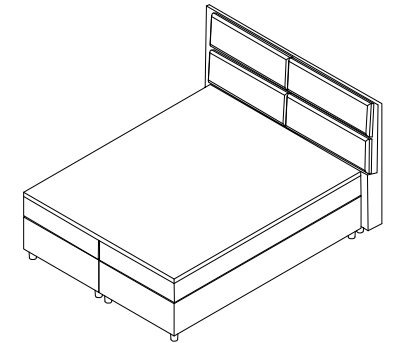
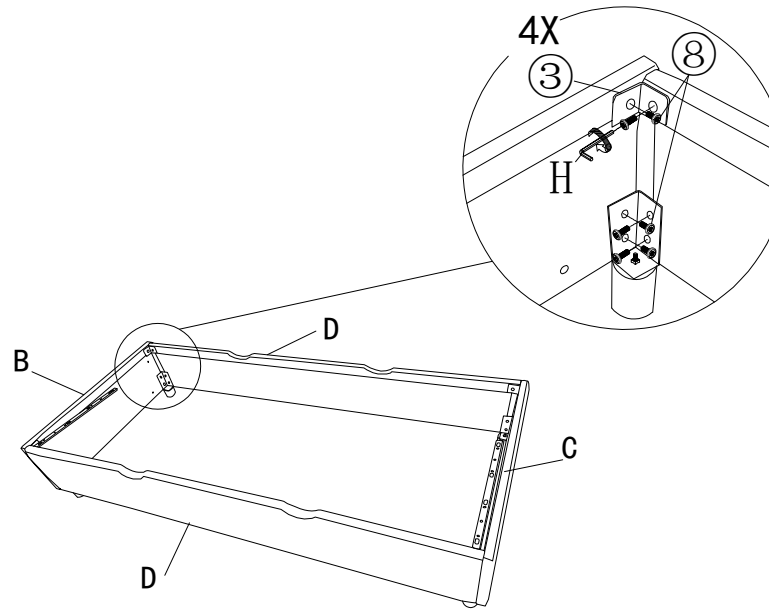
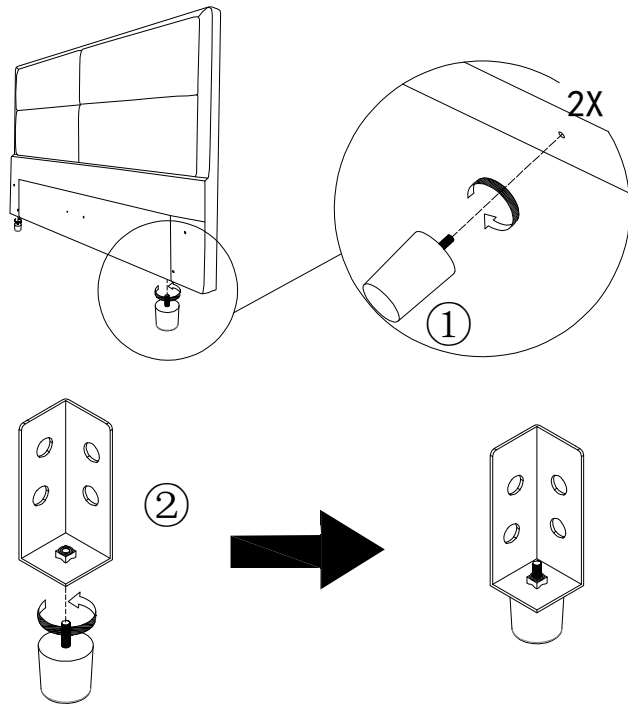


ITEM NO.:25268

Slide your hand under the foot of the bed and along both sides, then fasten the buckles.

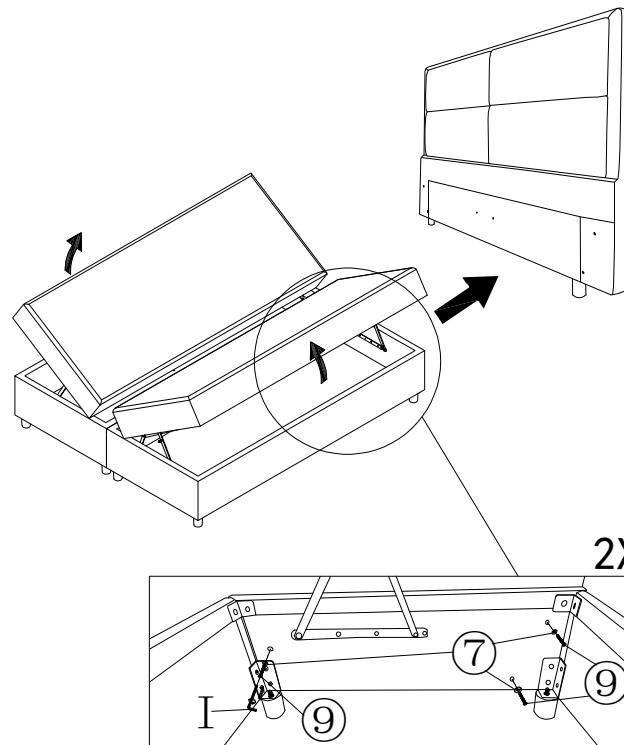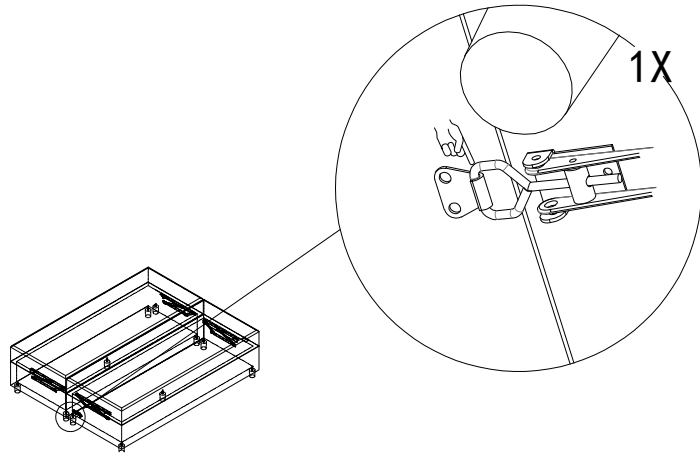

# ASSEMBLY INSTRUCTIONS

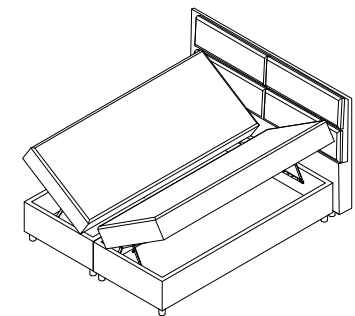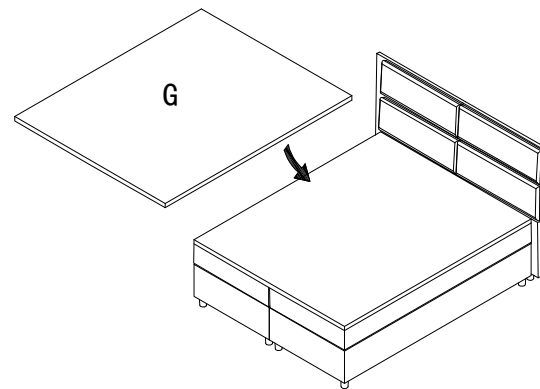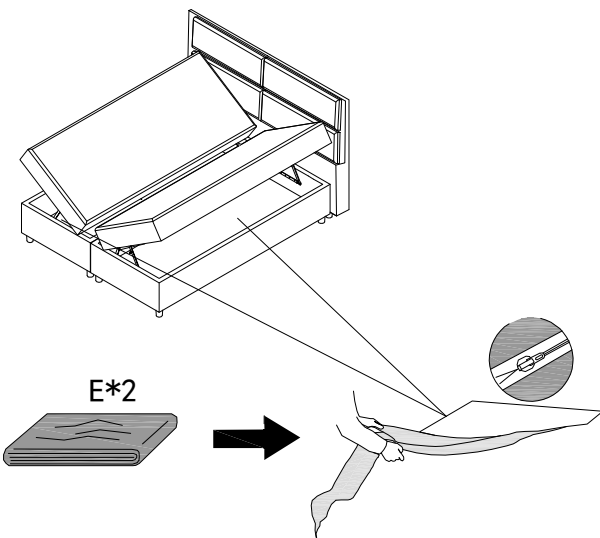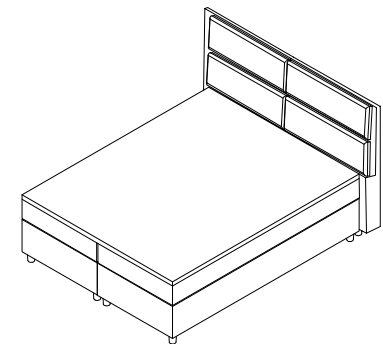

ITEM NO.:25268