


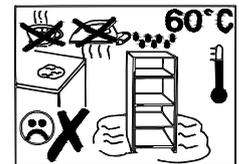
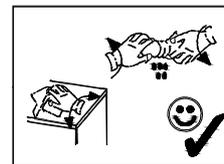
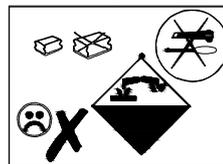
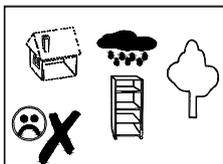
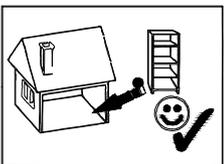

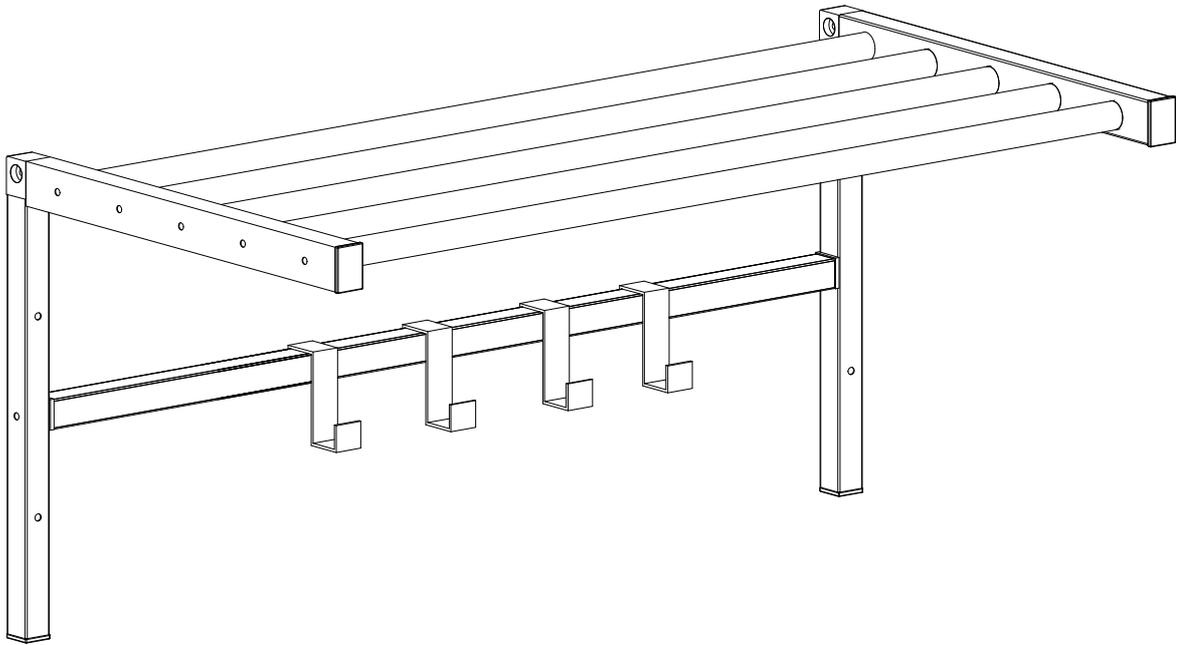
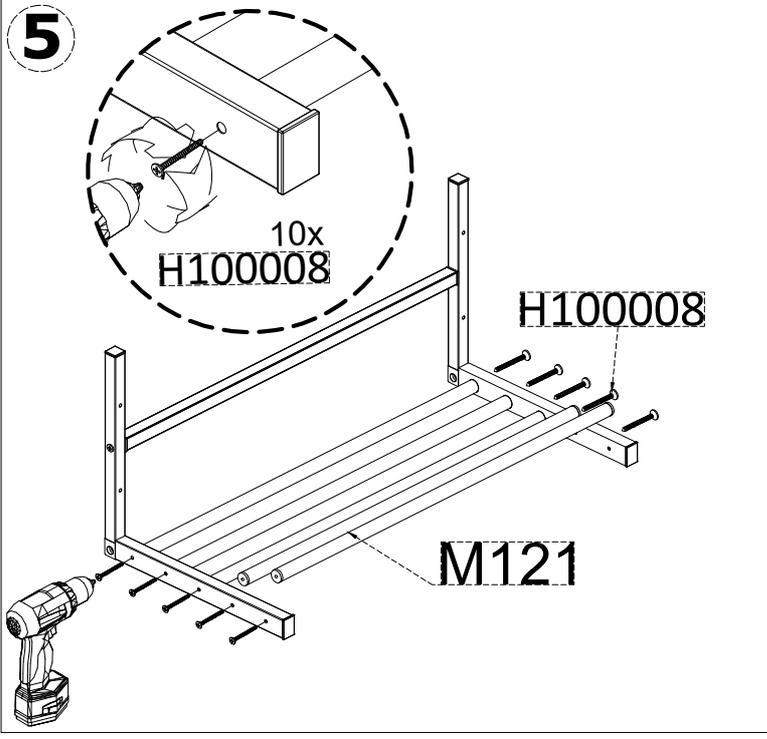
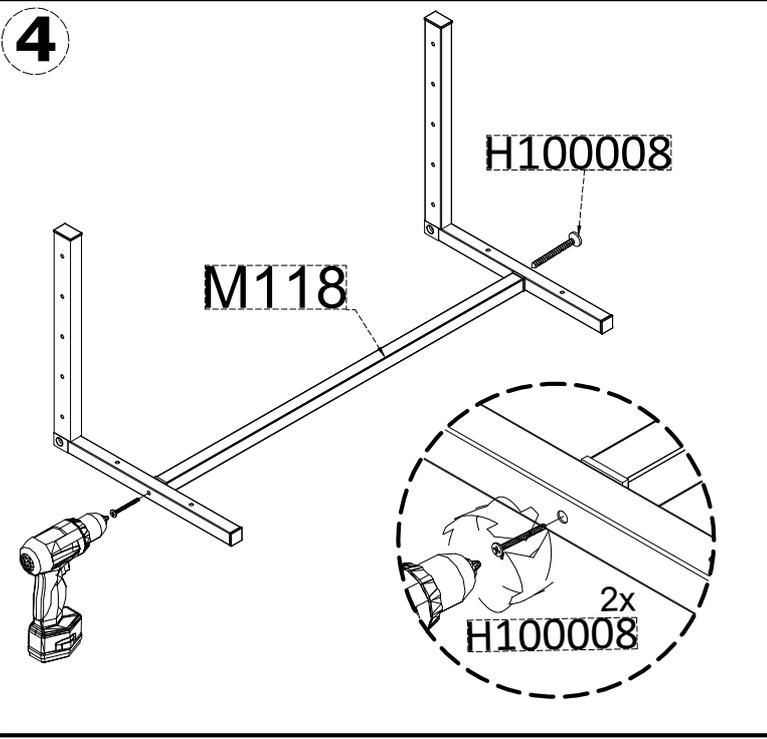
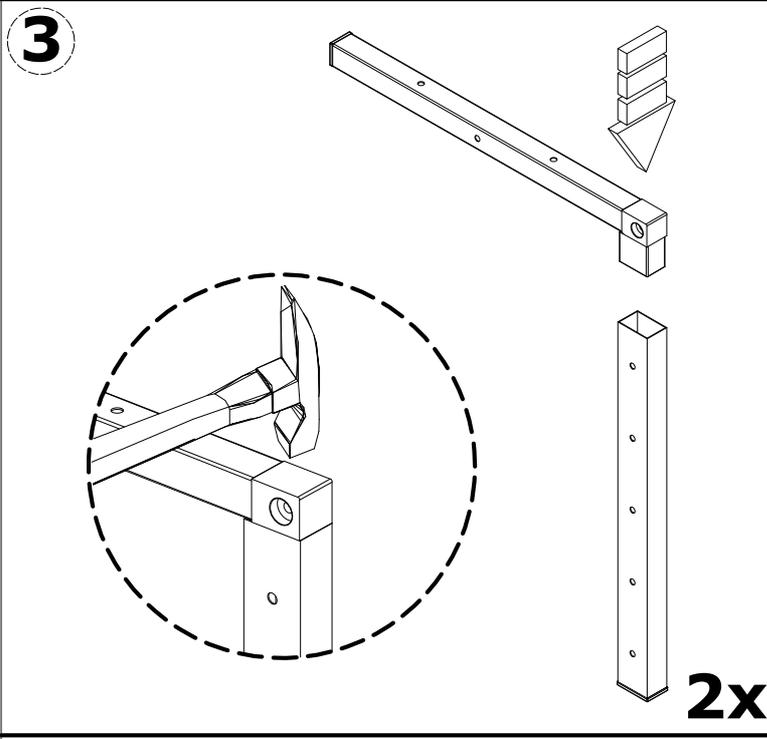
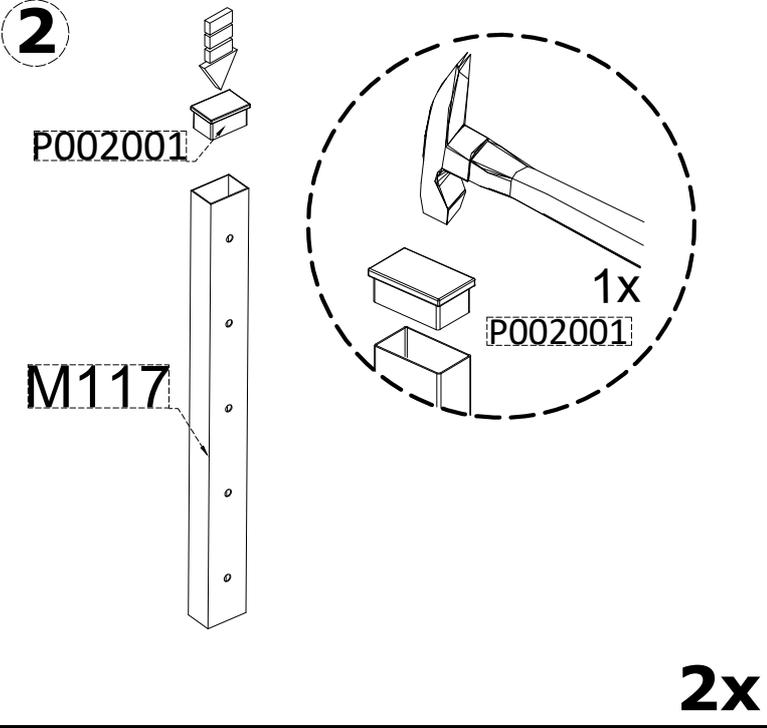
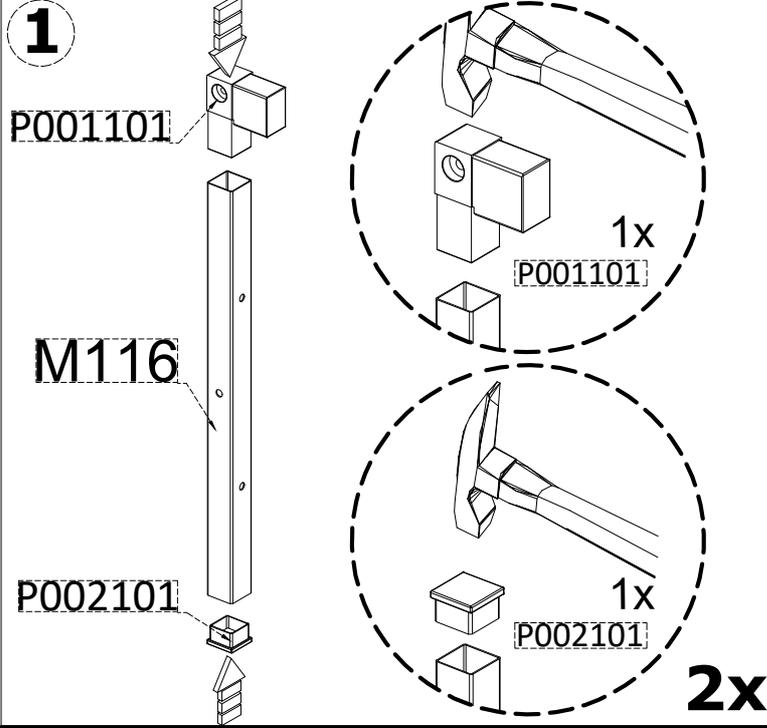


METAL COAT HANGER INSTRUCTION MANUAL

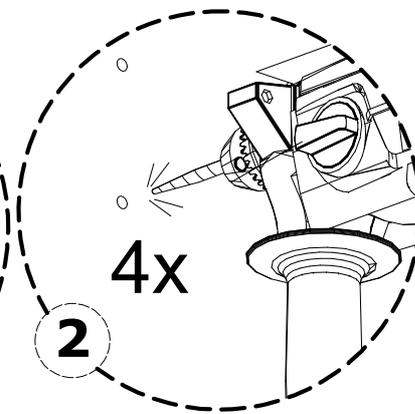


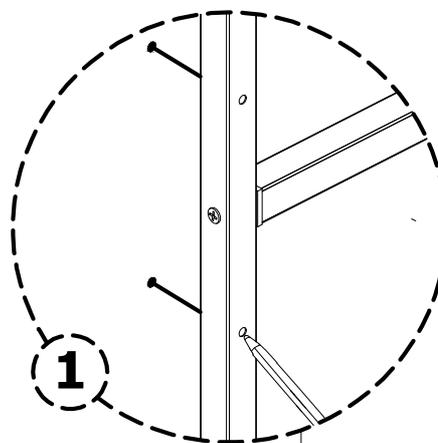


7

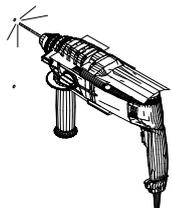

8




H100081

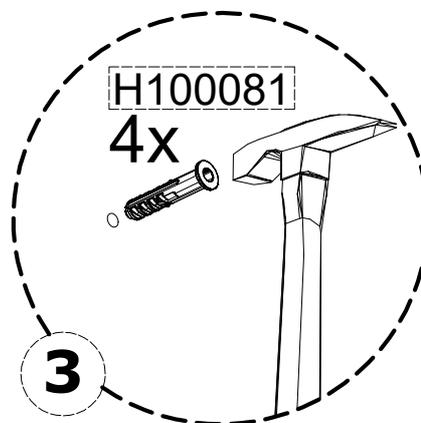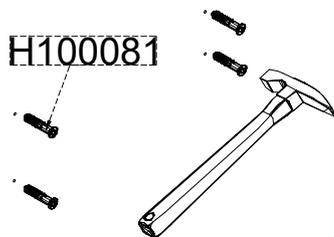

9

H100008

4x

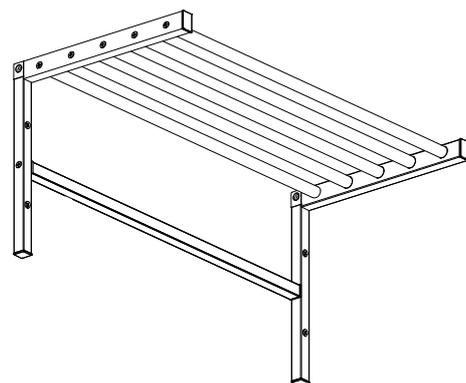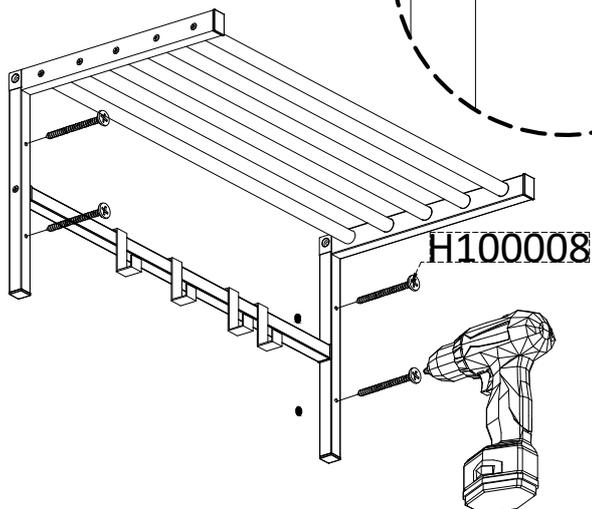
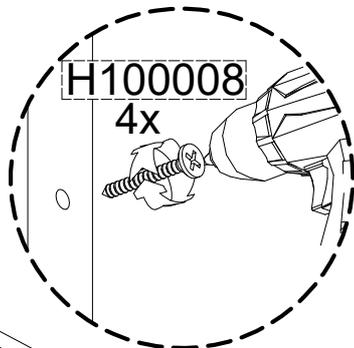



M116
2X

M117
2X

M118
1X

M121
5X

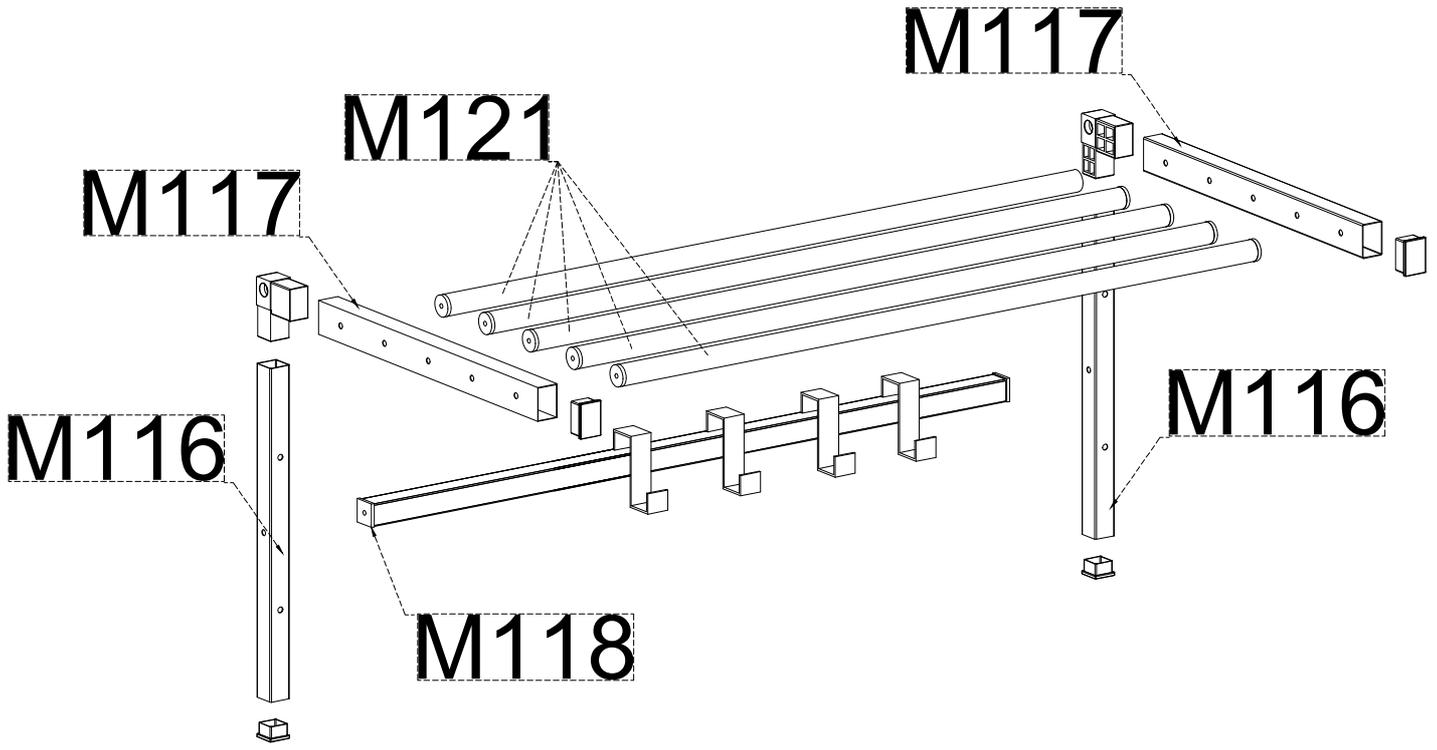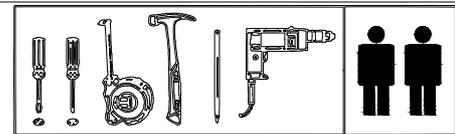

<p>NO:H100008 5x50 MM</p>  <p>16 X</p>	<p>NO:P002101 20x20 MM</p>  <p>02 X</p>	<p>NO:P002001 20x30 MM</p>  <p>02 X</p>	<p>NO:H100089</p>  <p>04 X</p>	<p>NO:P001101 20x30 MM</p>  <p>02 X</p>	<p>NO:H100081</p>  <p>04 X</p>		
--	--	--	---	--	---	--	--