


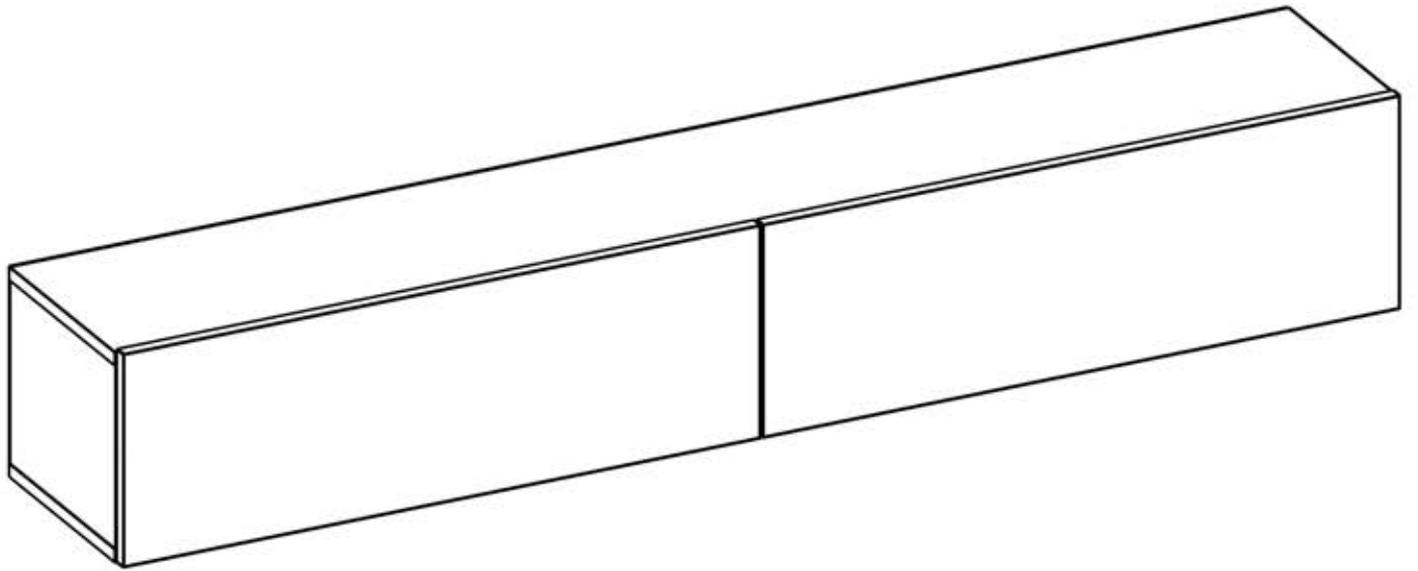
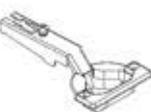


FR8

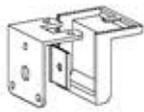

 B0501 x12	 B0502 x12	 B0503 x12	 B0504 x12	 B0301 x46
 B0306 x7	 B0105 x4	 B0101 x4	 B1102 x4	 B0318 x28
 B1303 x7	 B0317 x7			

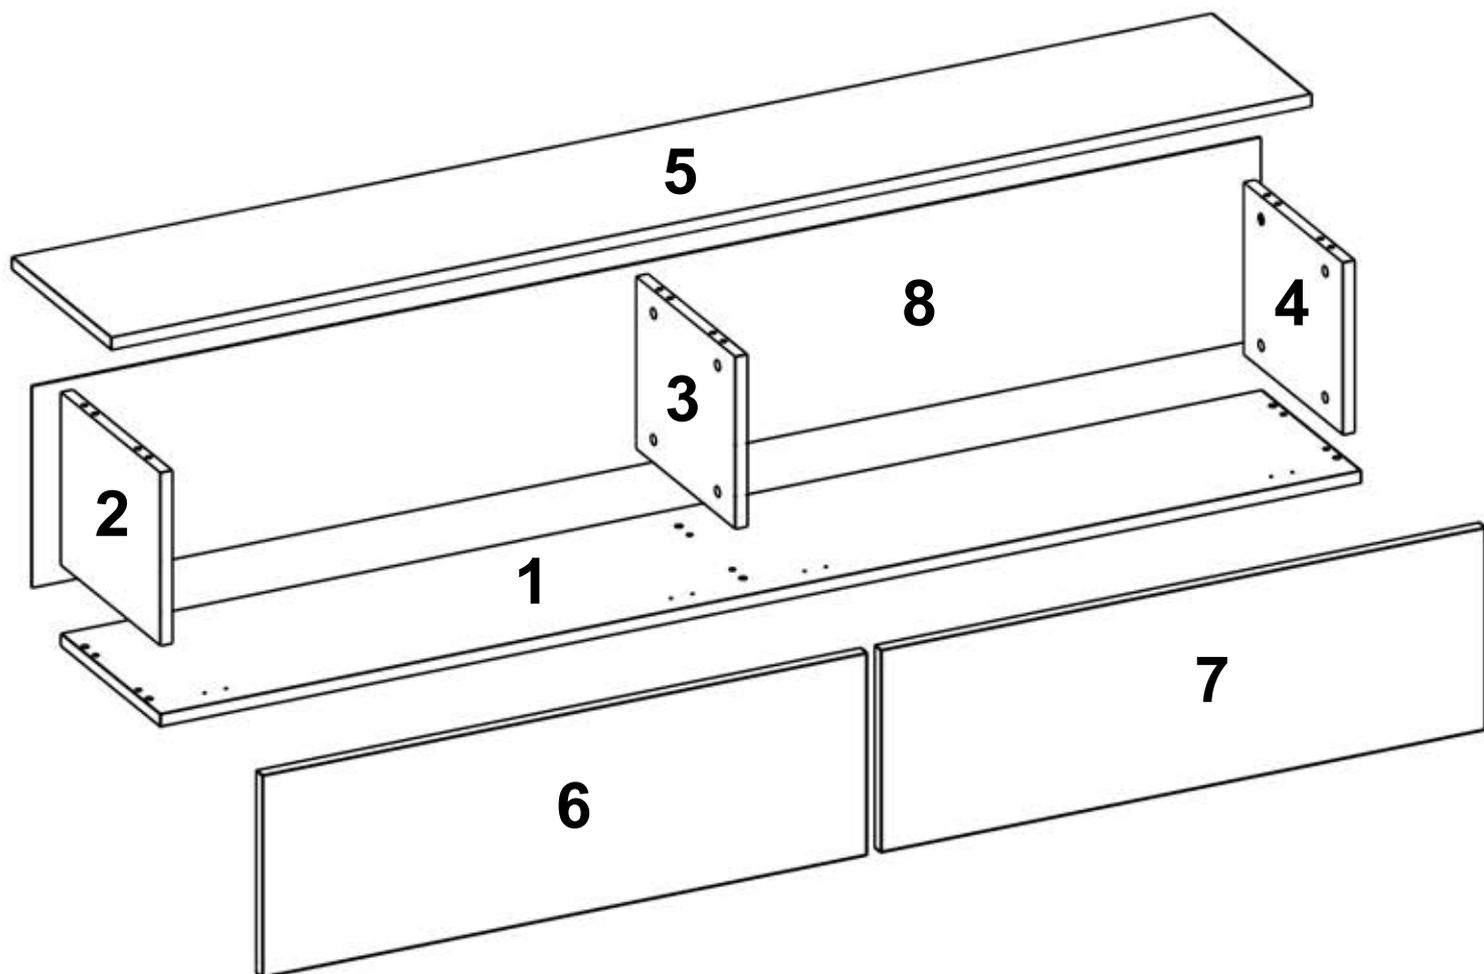

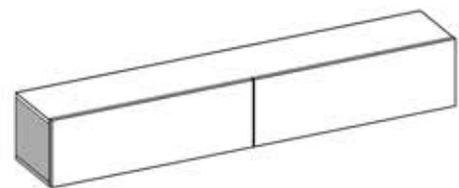

B0502

B0503

B0504

B0501









x6

x6

x6

x6

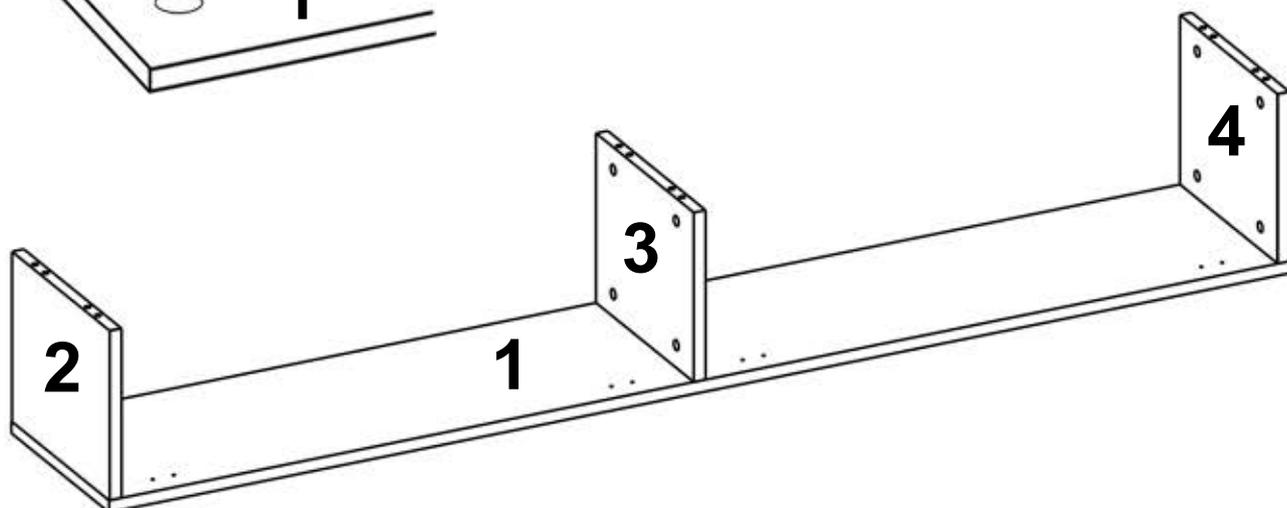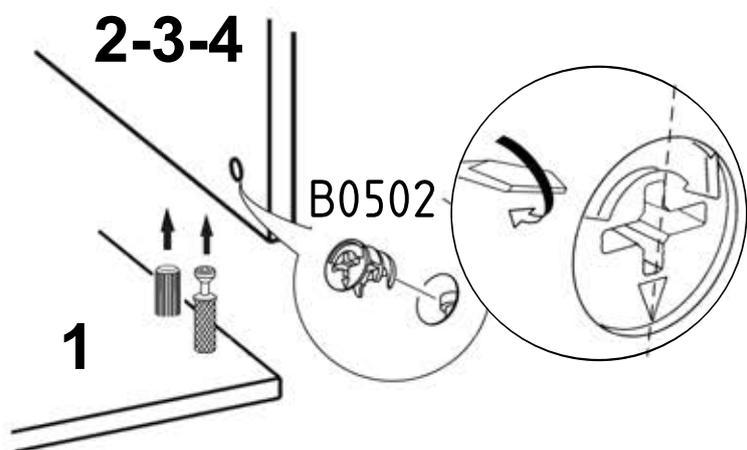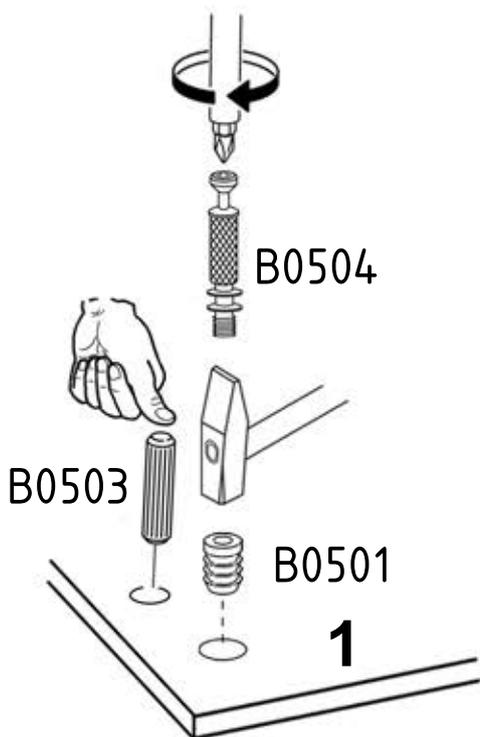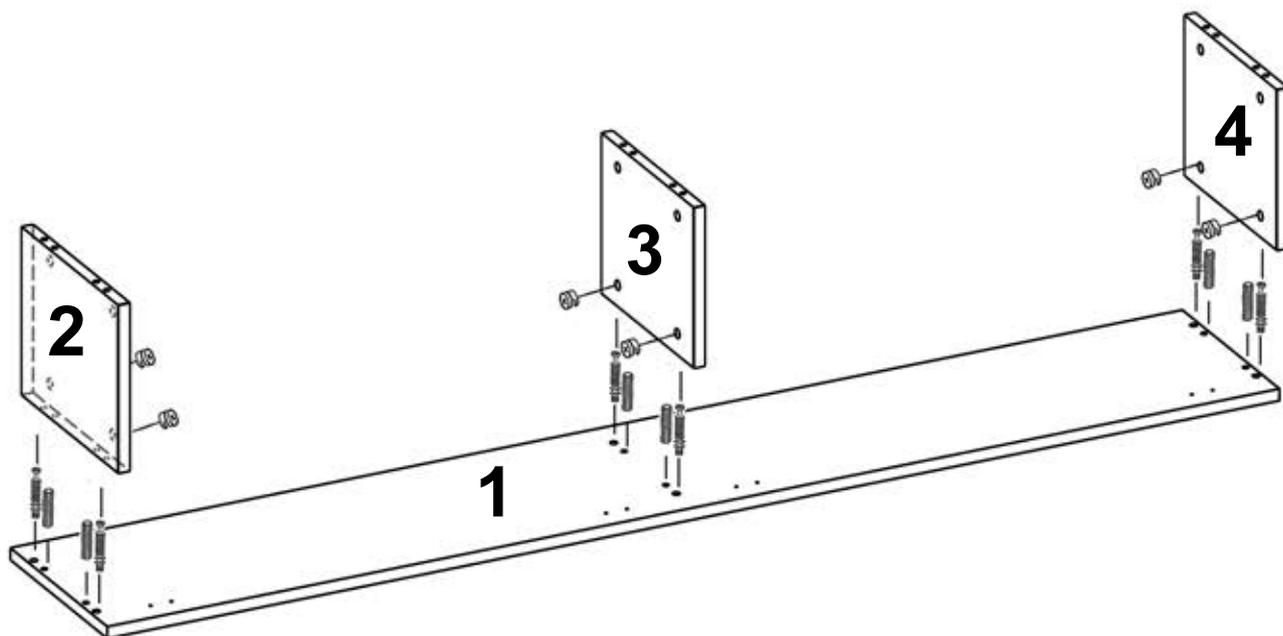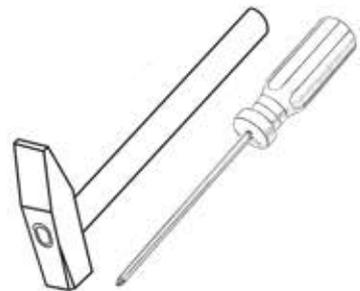

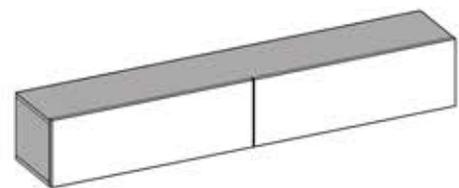


B0502

B0503

B0504

B0501



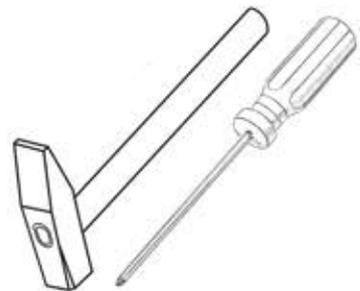



x6

x6







x6


x6

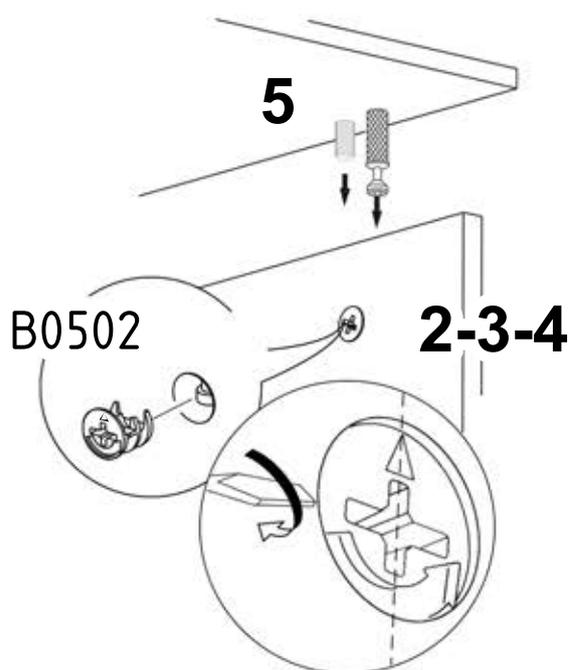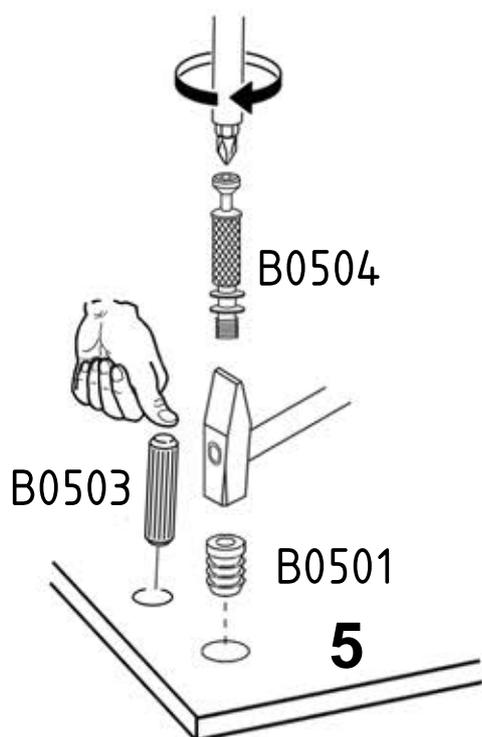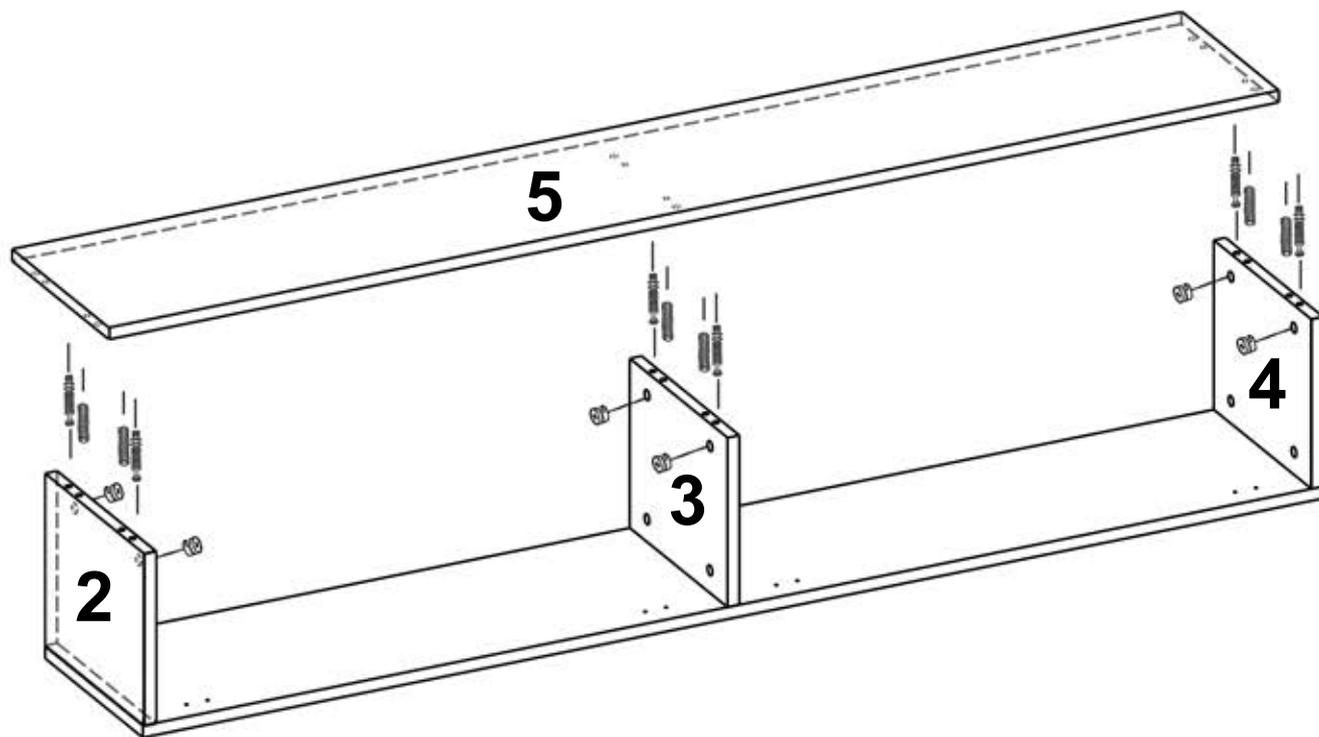

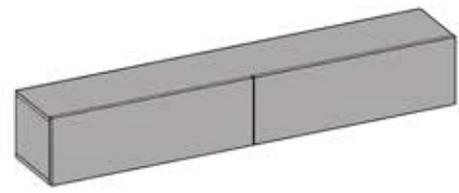



B0301 B0105 B0101 B1102
x32 x4 x6 x4

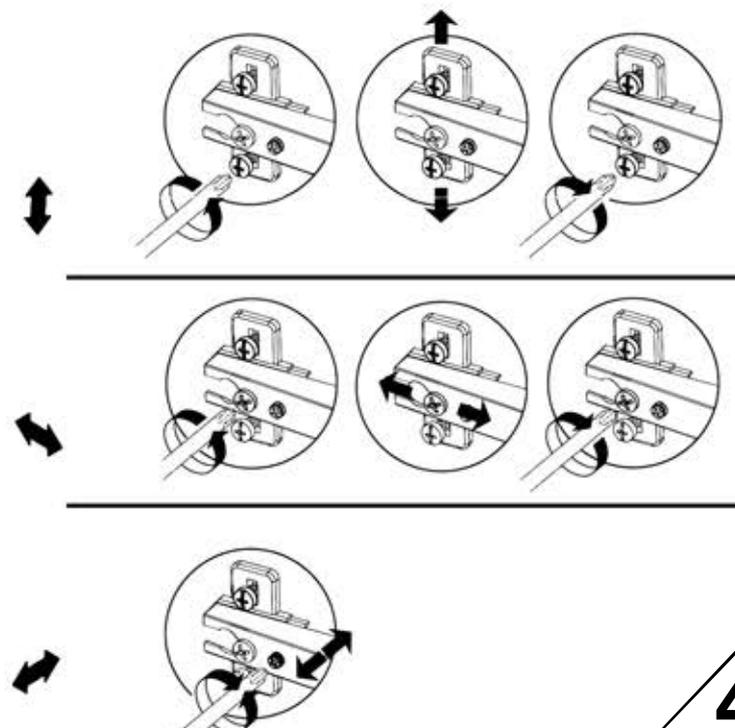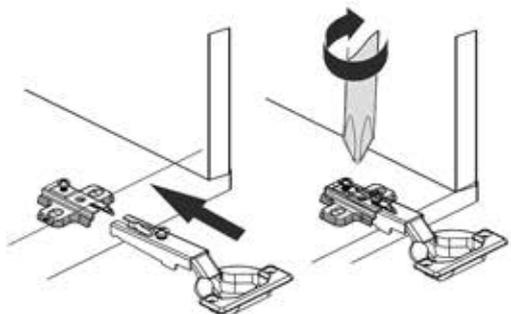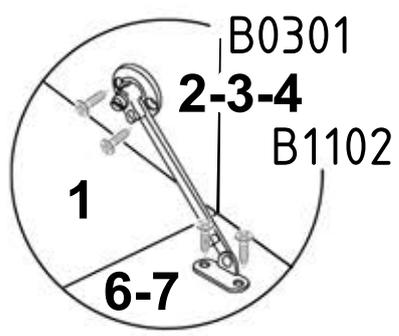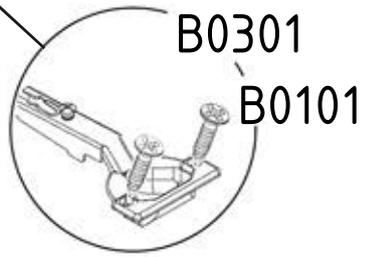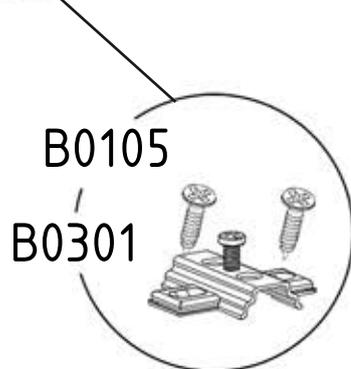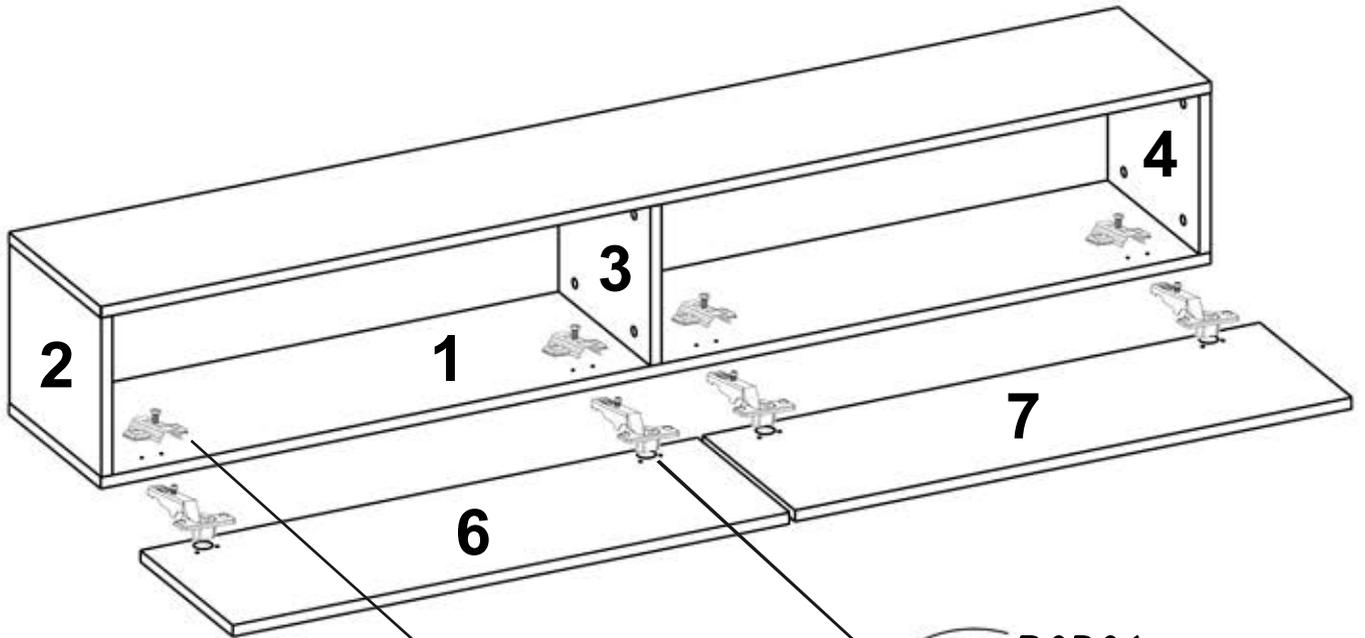

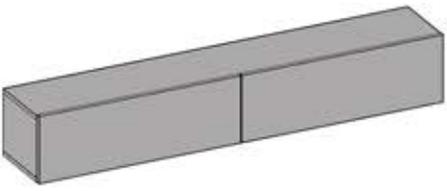

B0318 B1303 B0306 B0317 B0301

x28 x7 x7 x7 x14

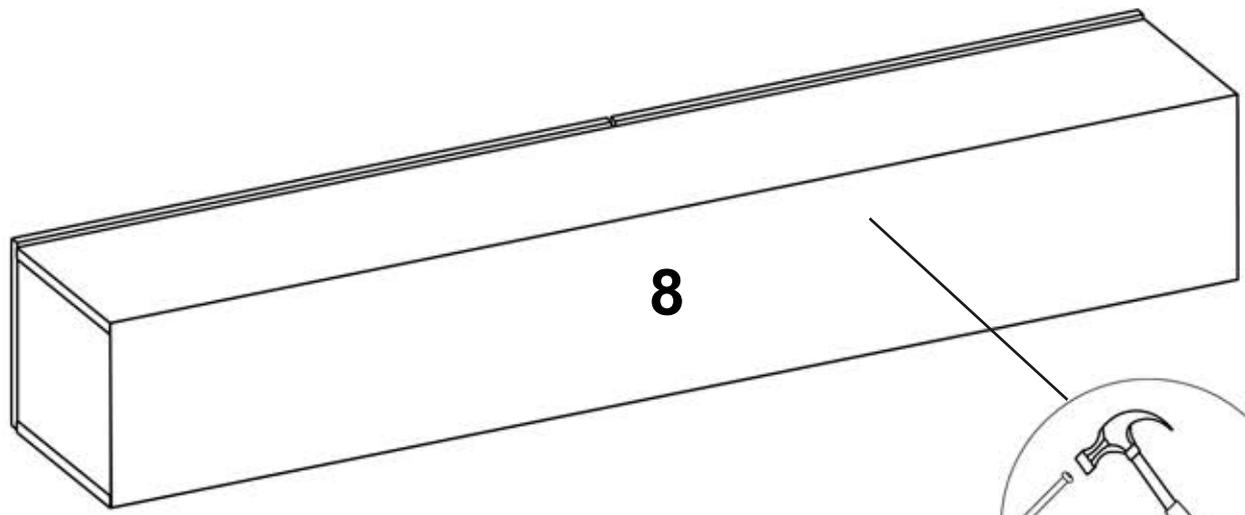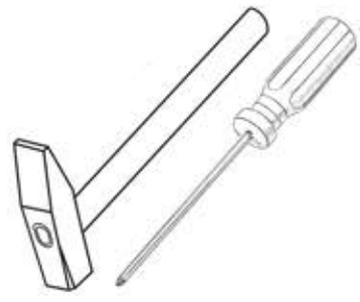

8



B0318

