




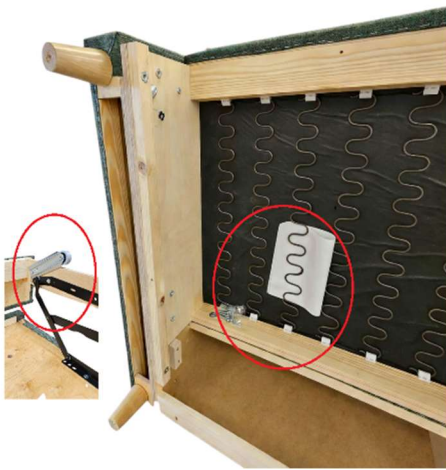

1. Includes 2 installed rolls, 8 bolts, instruction

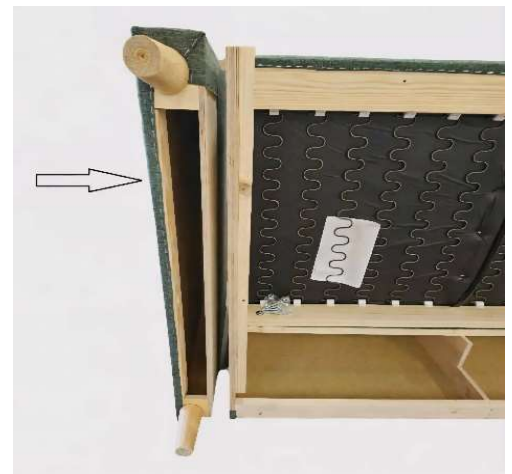

2. Put armrest like shown

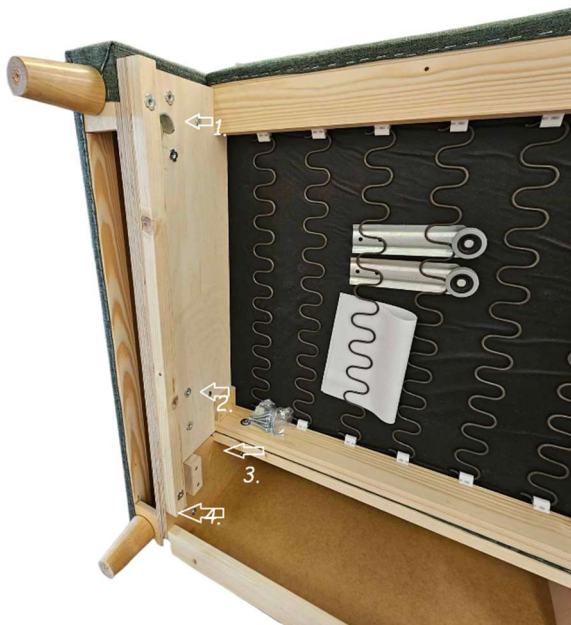

3. Attach the armrest with 4 bolts



4. Take the bolt out and install rolls in straight position (next picture)



5. Attach rolls with bolts straight

