



# veke

## ASSEMBLY INSTRUCTION


Sandvik sohvaryhmä musta/ ruskea

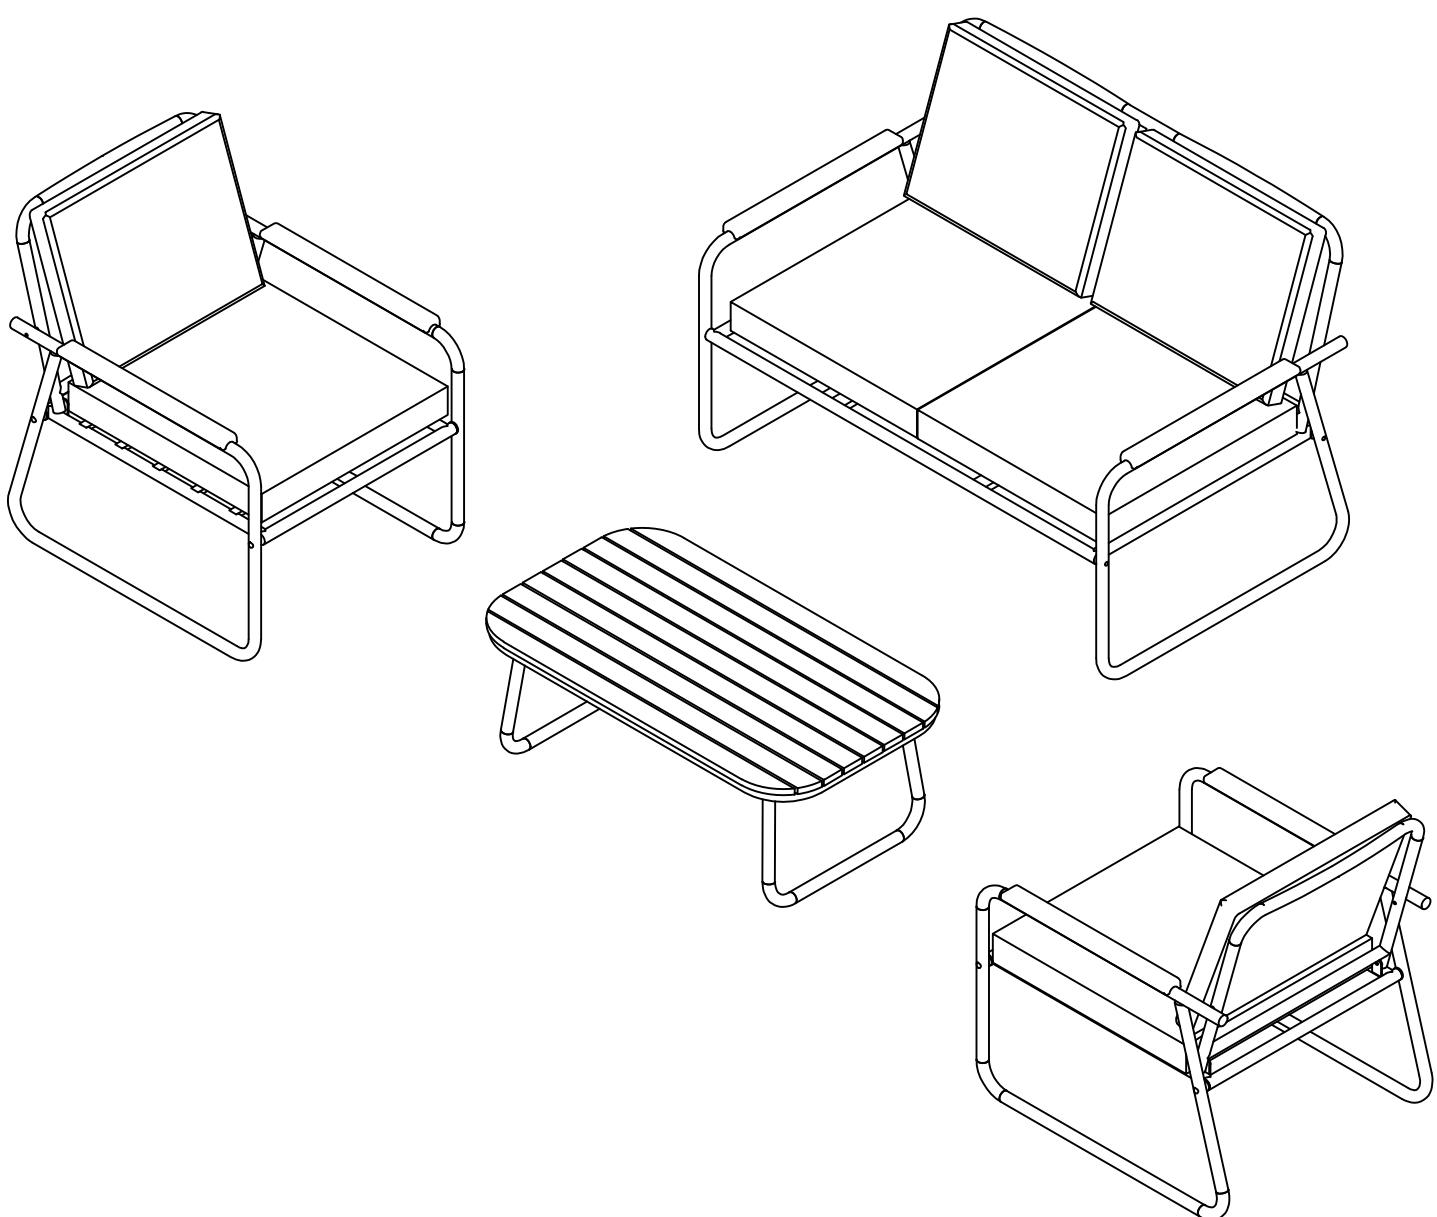

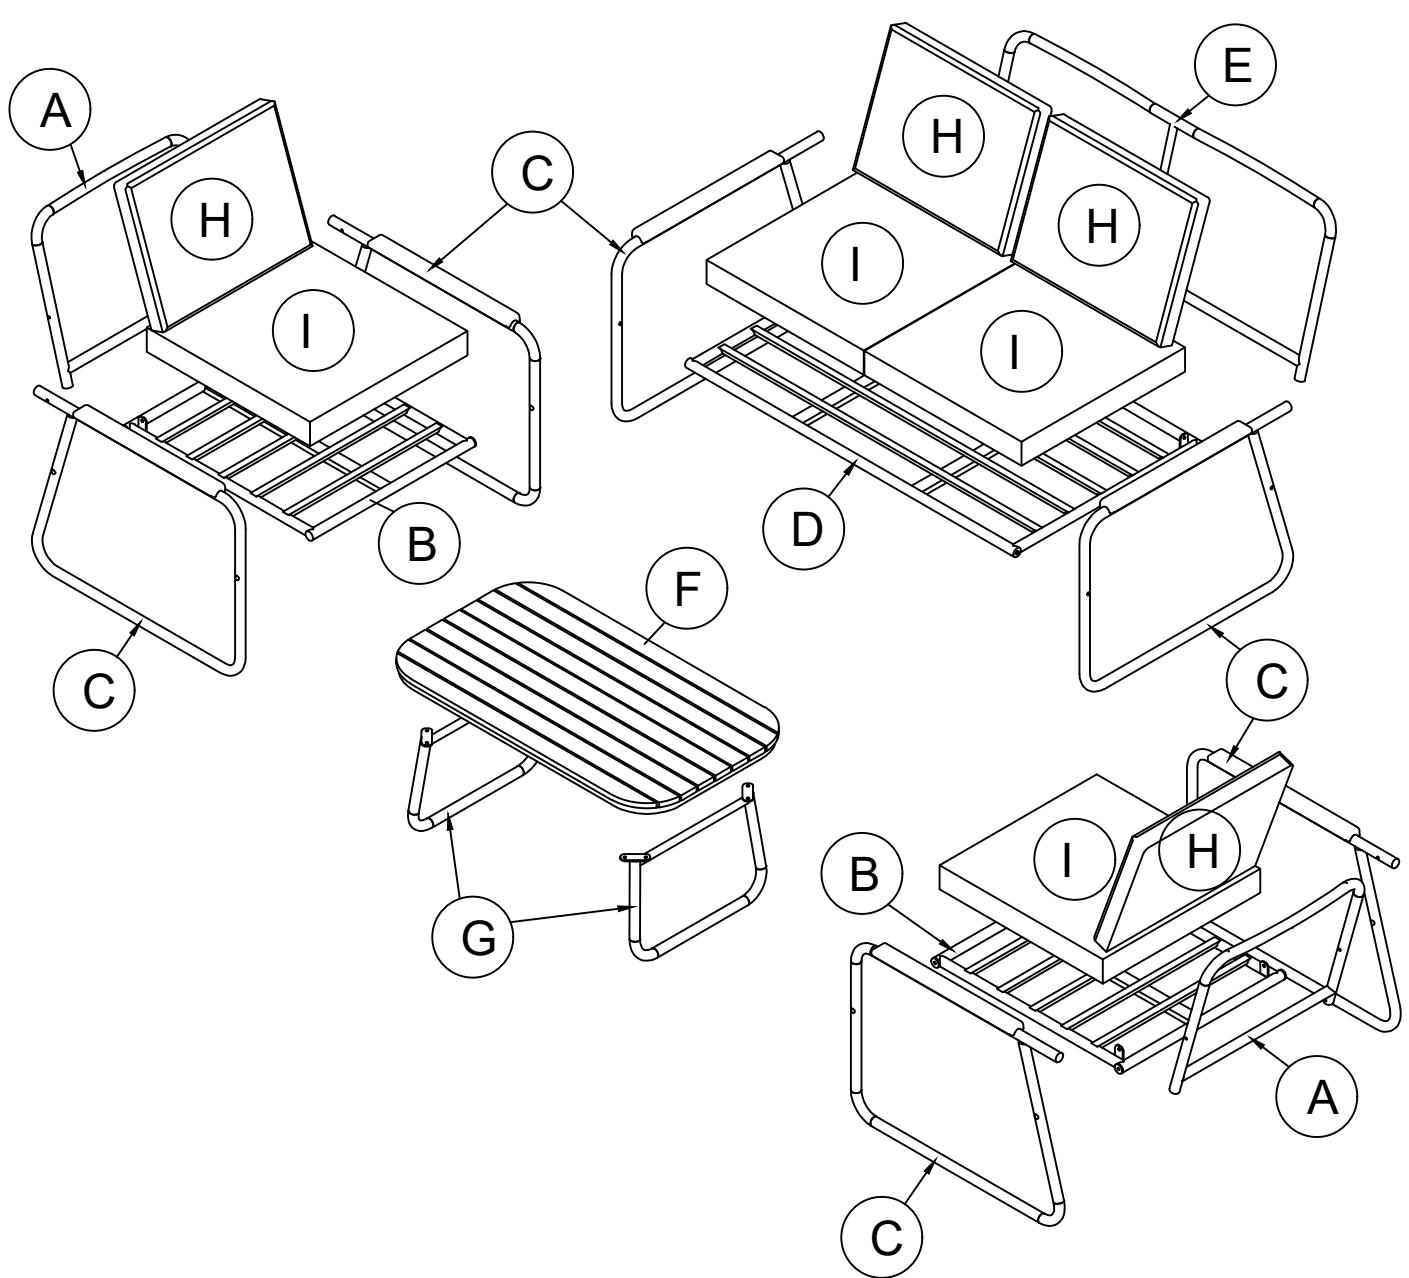


## Parts List:


A x2

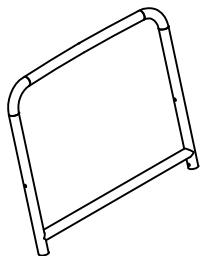


B x2

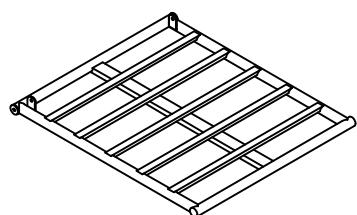


C x6

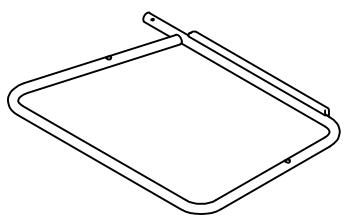


D x1

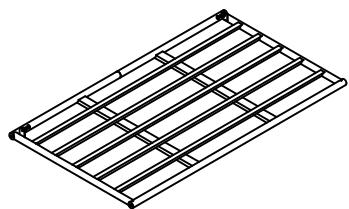


E x1

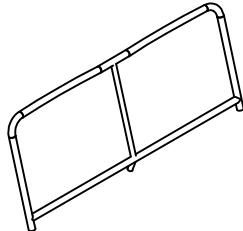


F x1

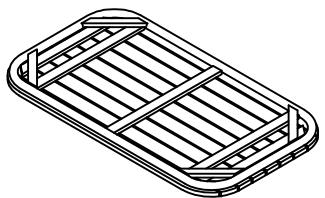


G x2

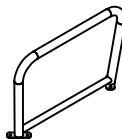

H x4

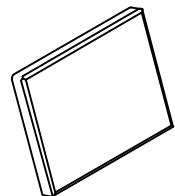

I x4

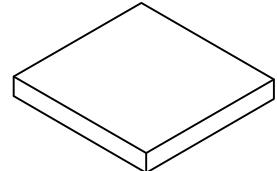

## Hardware:

1



Bolt M6x40 ( 19 pcs)  
Extra ( 2 pcs)

2



Bolt M6x20 ( 14 pcs)  
Extra ( 2 pcs)

3




Washer M6x20 ( 33 pcs)  
Extra ( 3 pcs)

4




Allen Wrench (1 pc)

# STEP 1

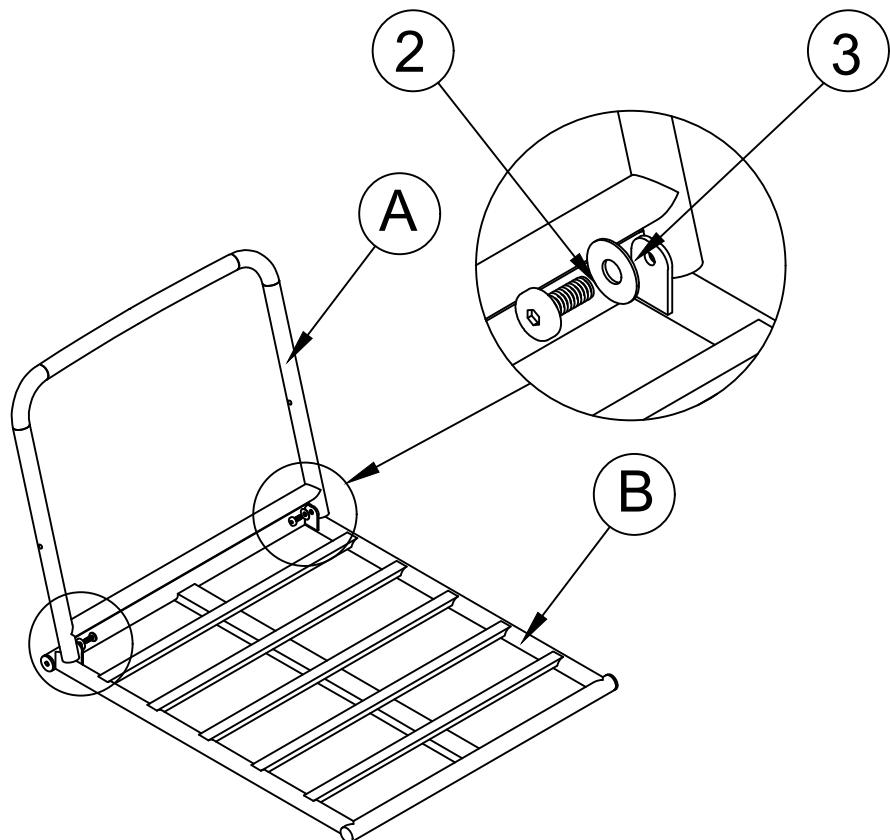

X2

# STEP 2

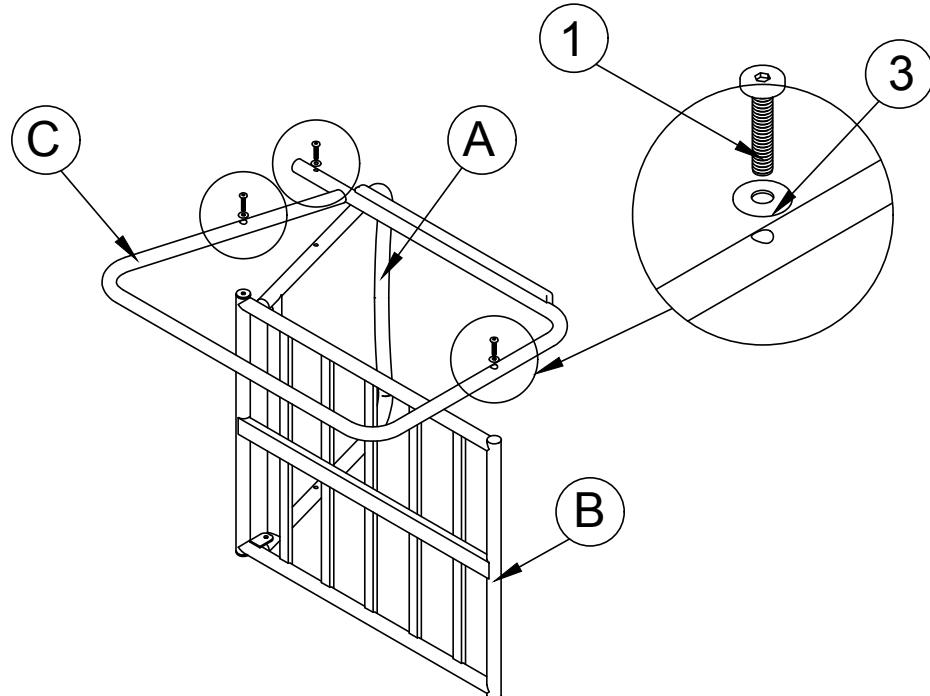


X2

## IMPORTANT NOTE:



Do not tighten all screws/bolts until all completely assembled.  
Thank you.

# STEP 3

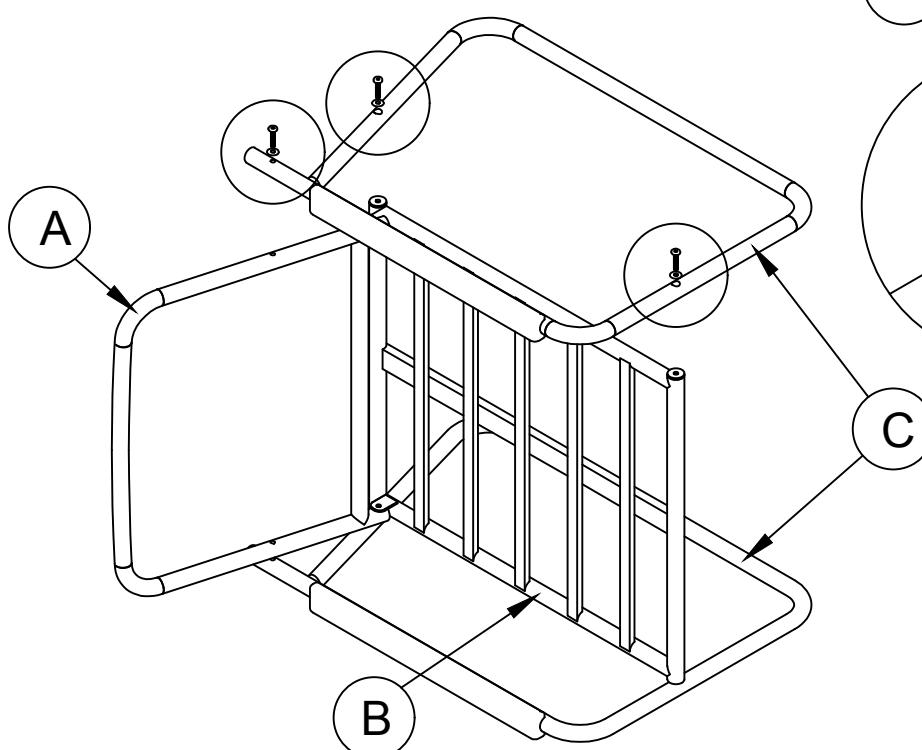

X2

# STEP 4

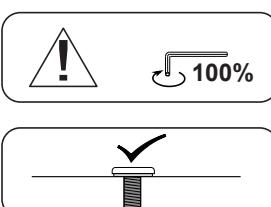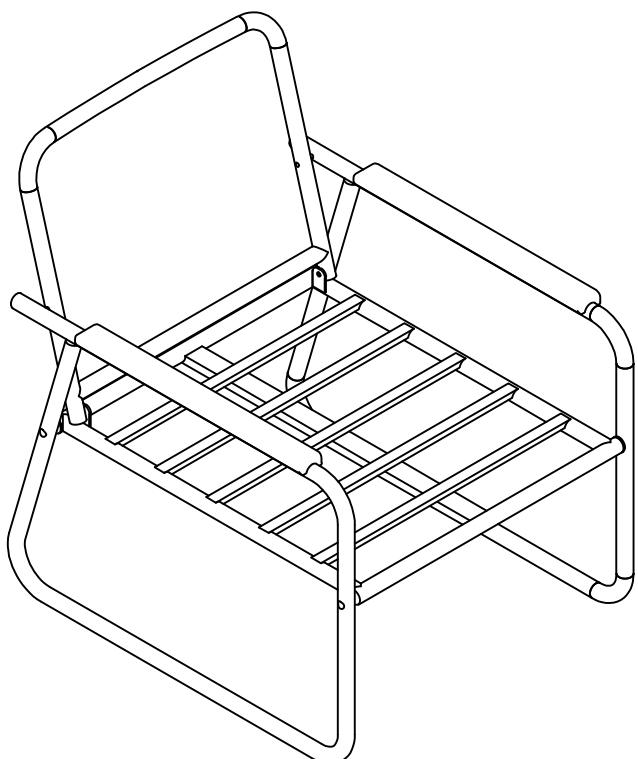


## IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.  
Thank you.


X2

## STEP 5

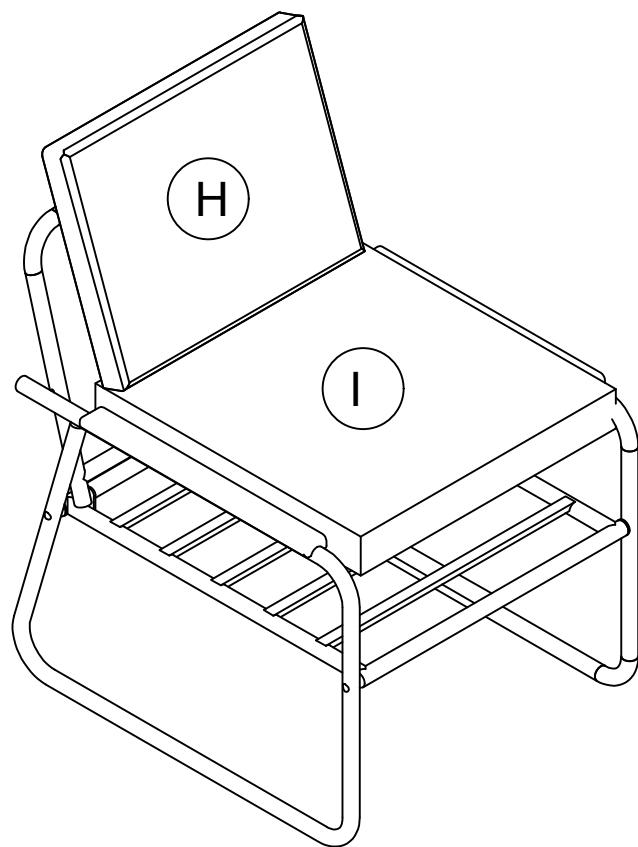

X2

## STEP 6

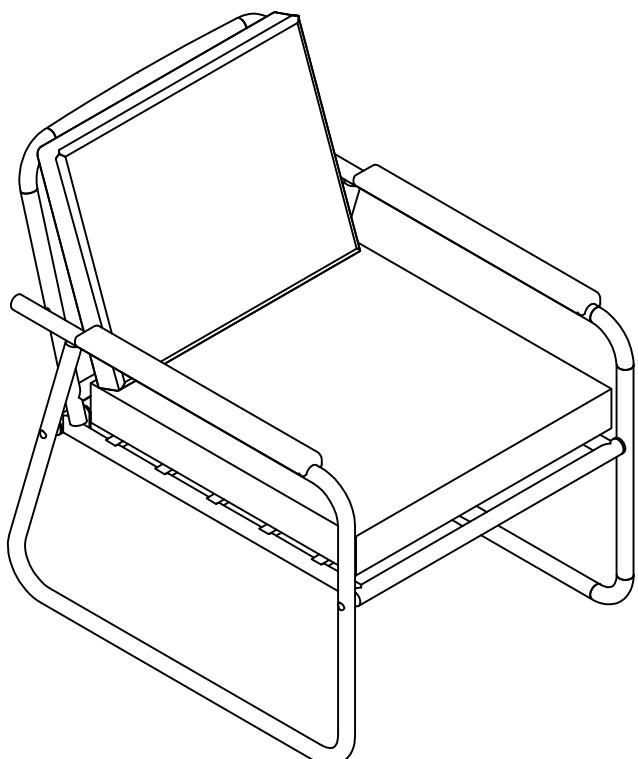


X2


IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.  
Thank you.

# STEP 7

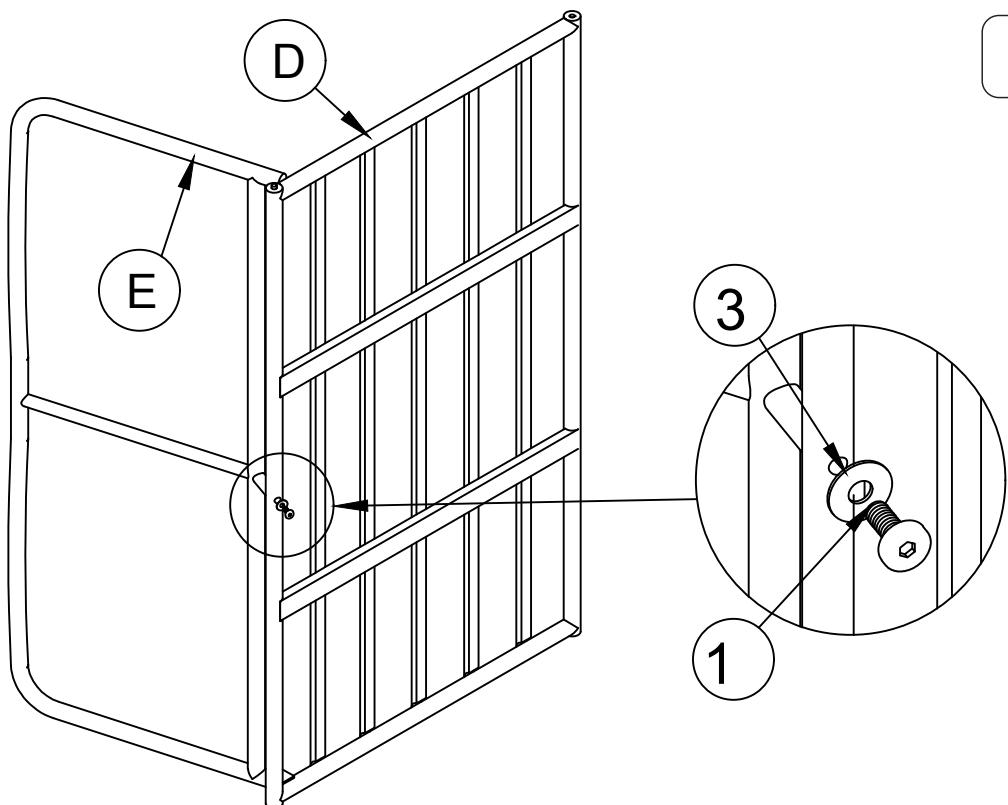

## STEP 8

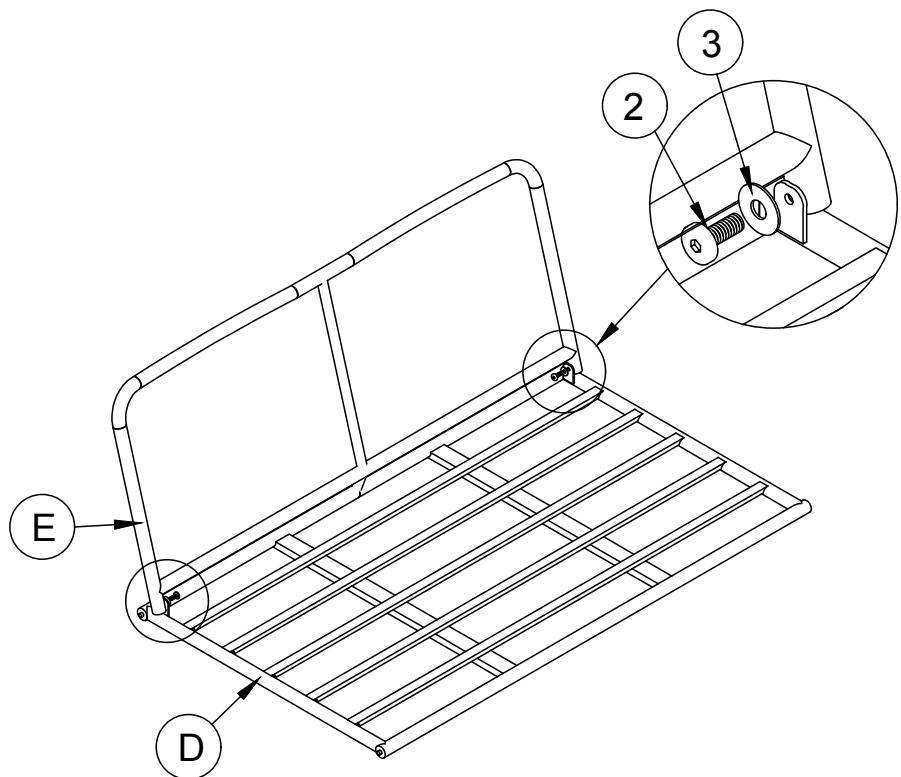


### **IMPORTANT NOTE:**


---

Do not tighten all screws/bolts until all completely assembled.  
Thank you.

## STEP 9

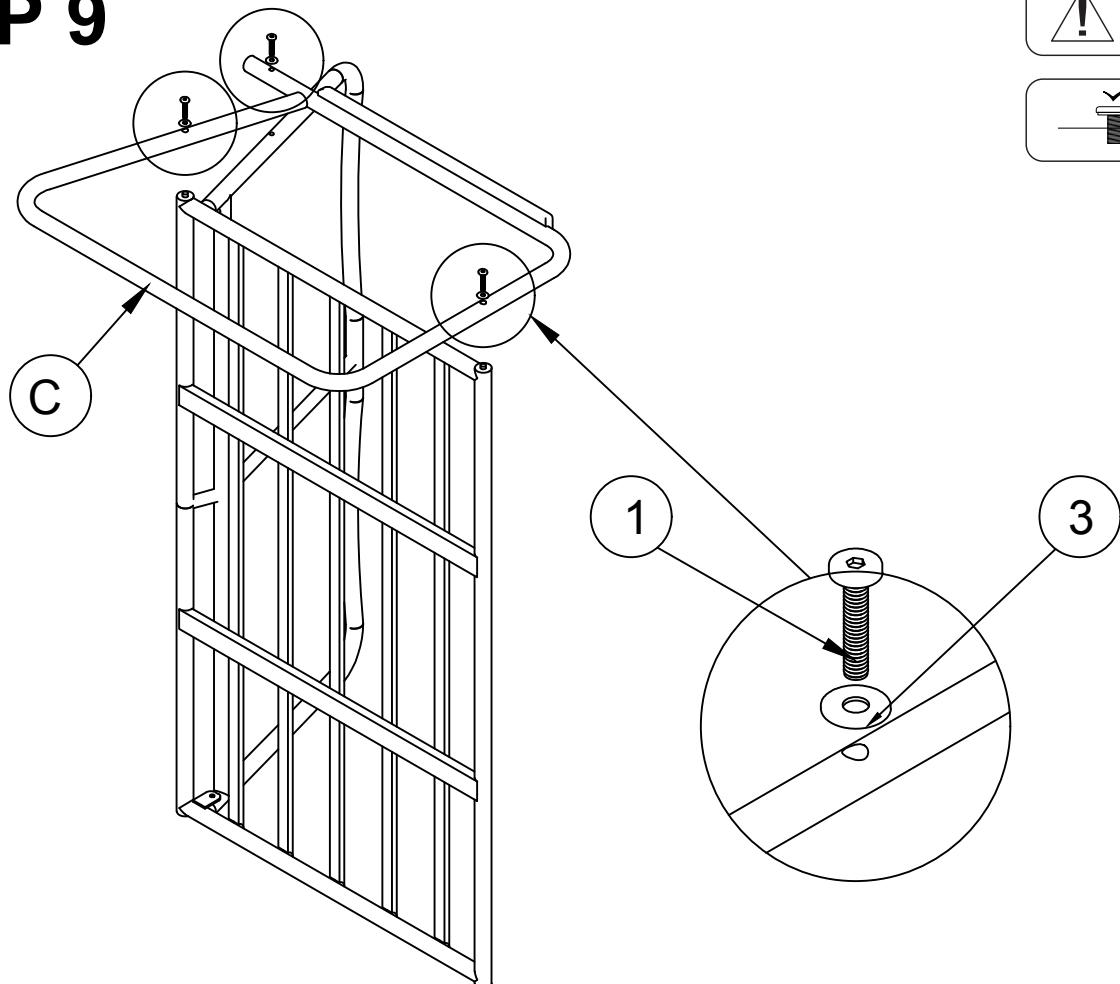


## STEP 10

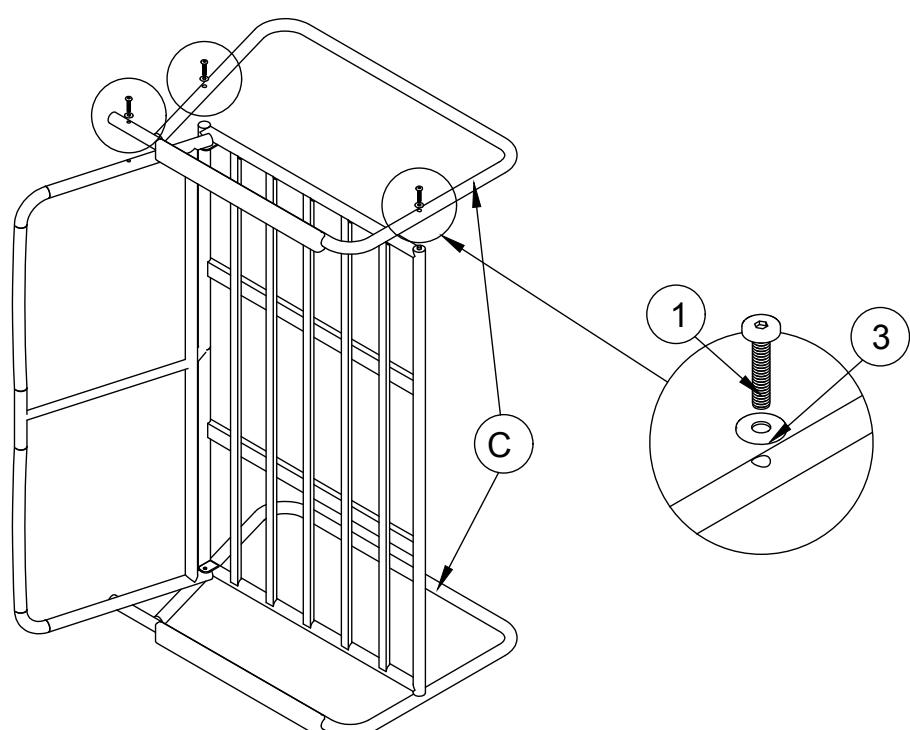


### IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.  
Thank you.

# STEP 11

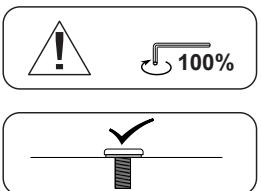


# STEP 12

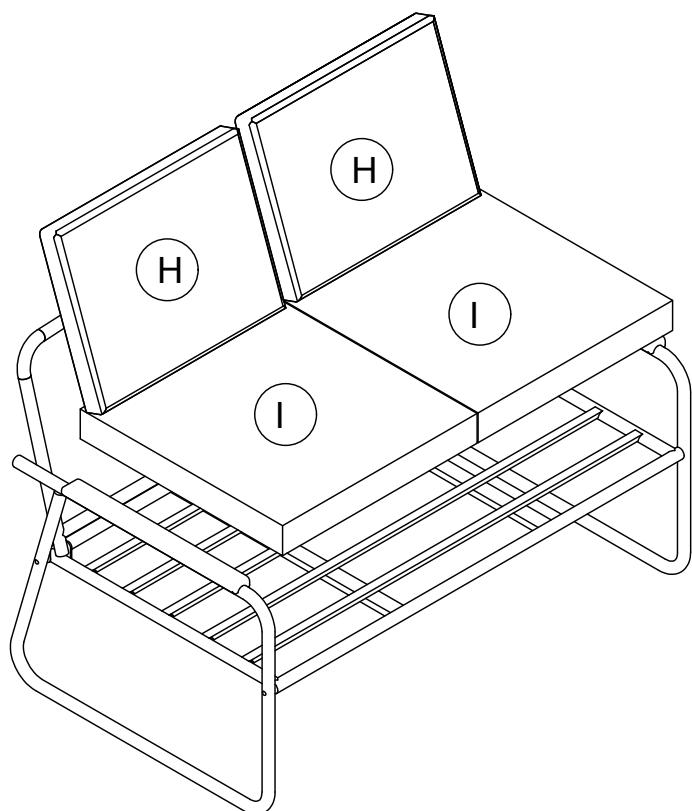


## IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.  
Thank you.

# STEP 13

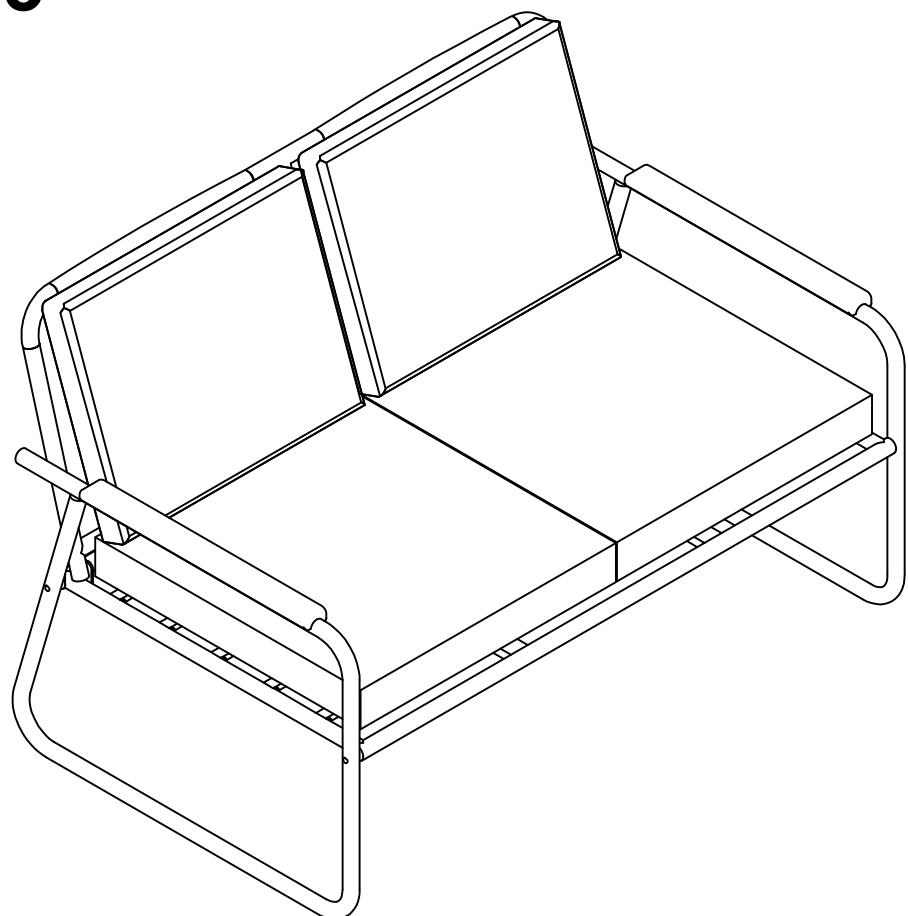


# STEP 14

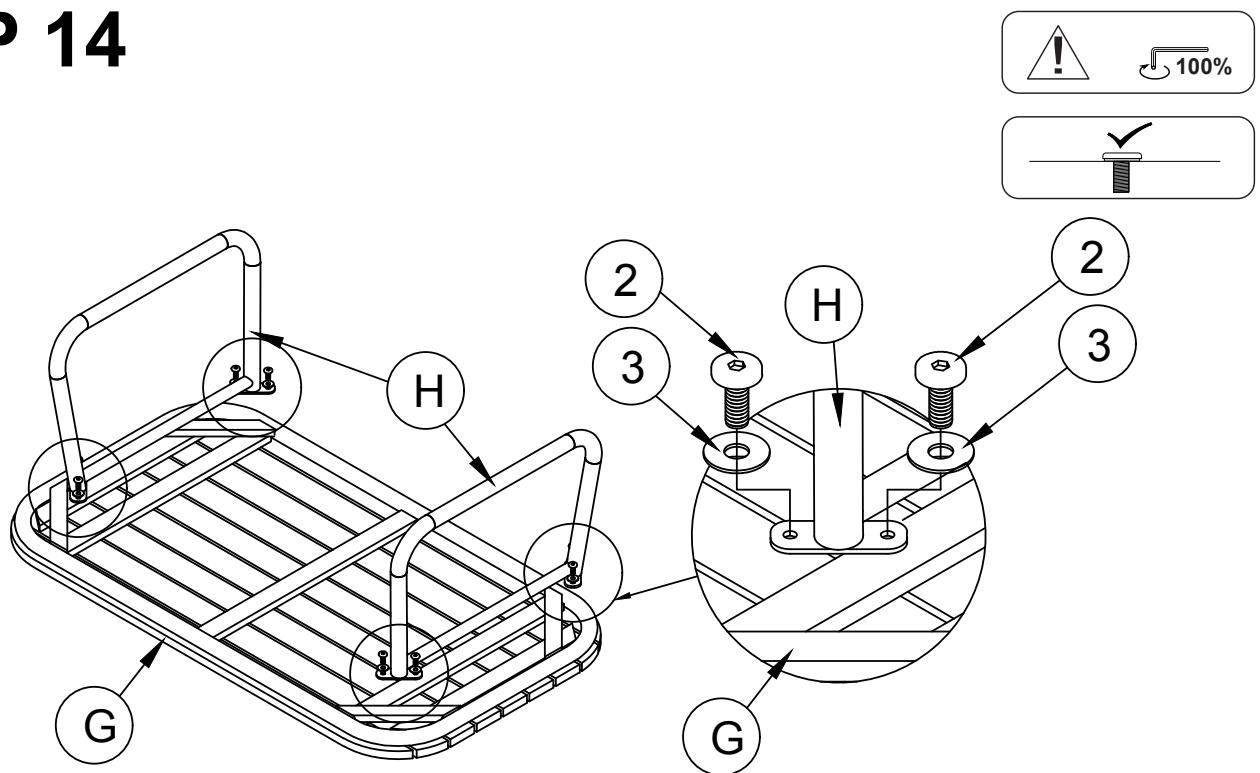




#### IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.  
Thank you.

# STEP 15

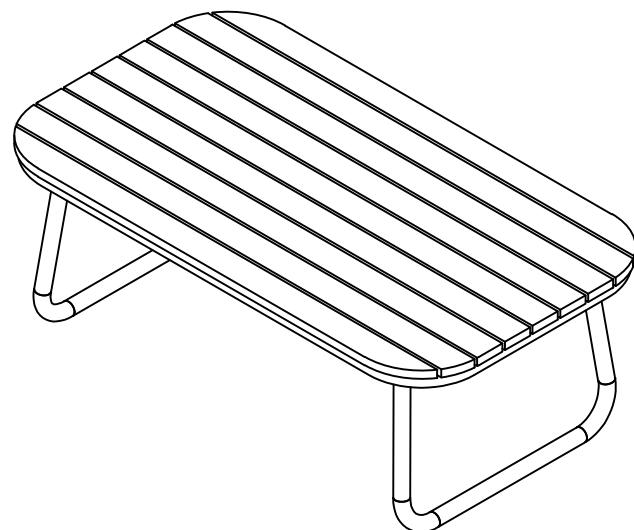

# FINISH

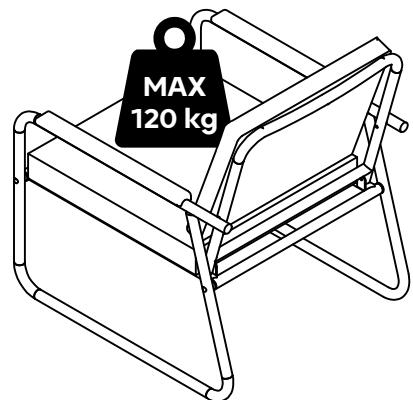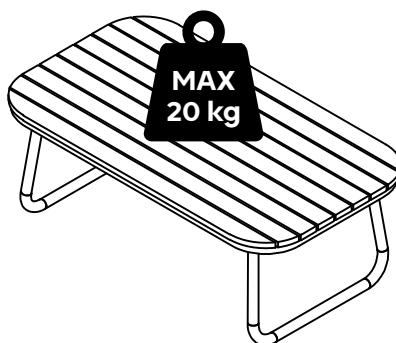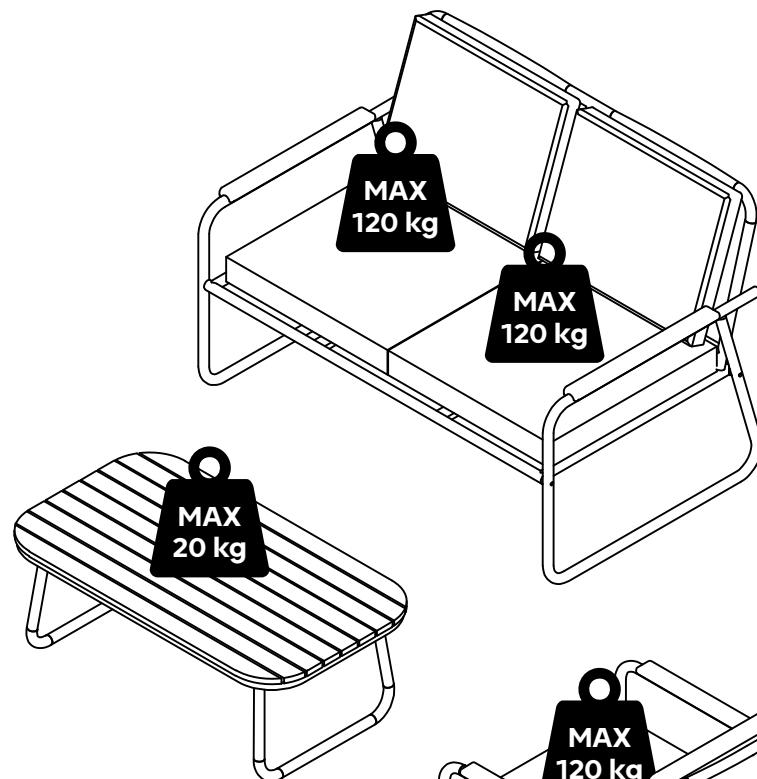

Veken Kaluste Oy  
Kulvakontie 11  
97700 Ranua, Finland  
[www.veke.fi](http://www.veke.fi)  
Art. No. 6456781  
PO#: 641423