



Toronto 2100+RD+OE assembly

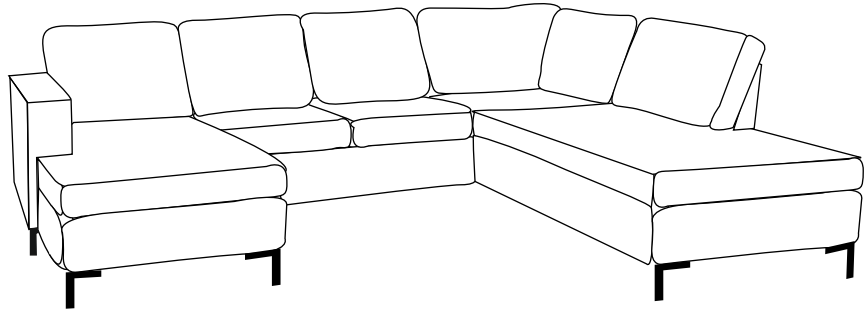

8 x



4 x


27∅



Felt

12 x

8 x

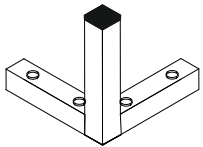

8 x

32 x



M4x40



4 x

27∅




Felt

12 x



1 x

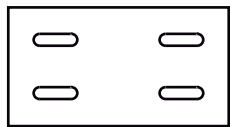



1 x






4 x

M6x30

Important!
screw it 5-6mm
above the
ground
leave 5-6mm
Connect plastic
support legs to the
pre drilled holes.

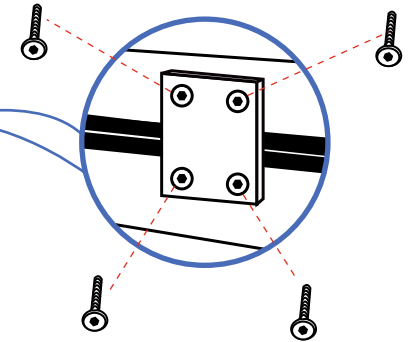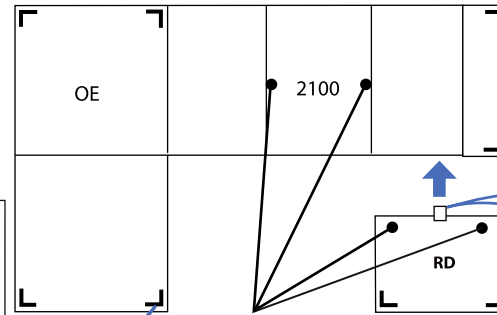

or

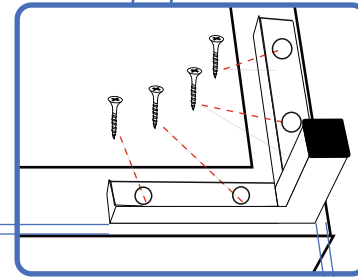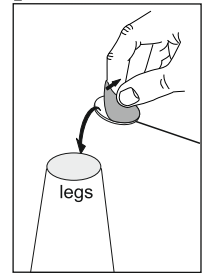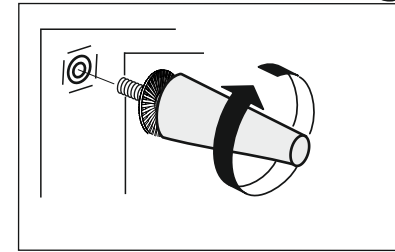

10mm

10mm

