
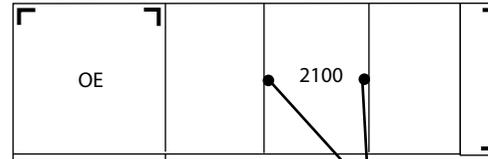



Toronto 2100+OE assembling instruction

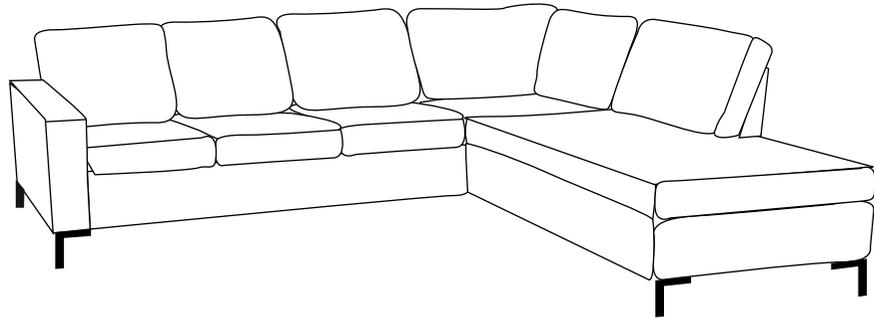

Important!
screw it 5-6mm
above the
ground

leave 5-6mm



Connect plastic
support legs to the
pre drilled holes.


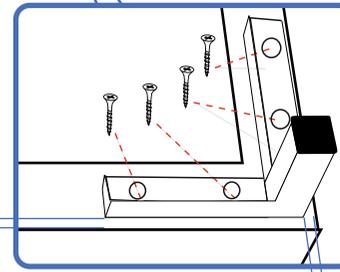


10mm

10mm

or

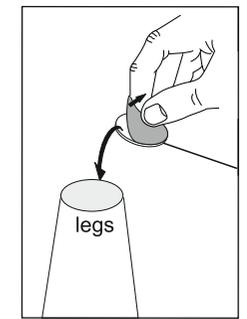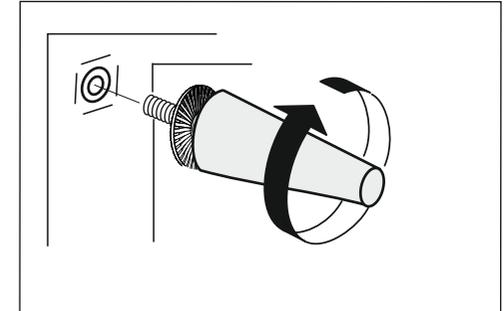

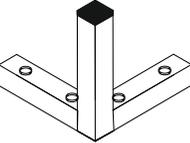6 x 	6 x 	2 x 	8 x  27φ Felt
6 x 	24 x  M4x40	2 x 	8 x  27φ Felt

